


Mimaki

OPERATION MANUAL

UV INKJET PRINTER

JF-1631
JF-1610

OPERATION MANUAL

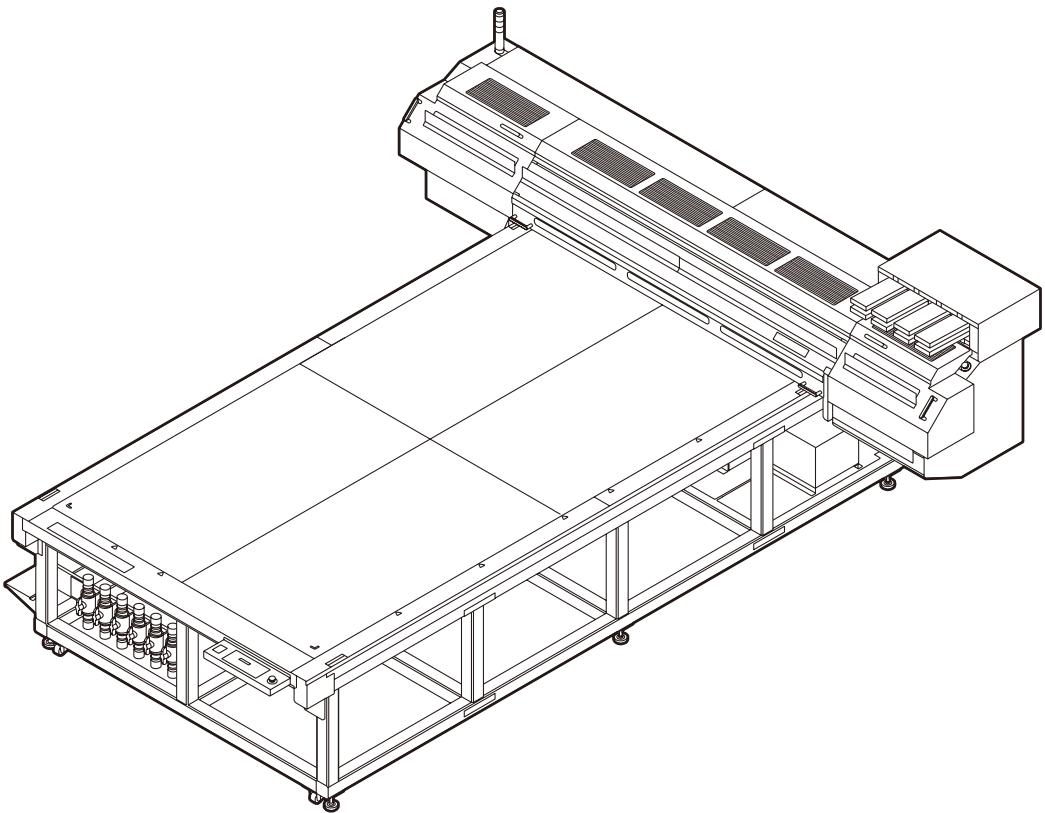

MIMAKI ENGINEERING CO., LTD.

TKB Gotenyama Building, 5-9-41, Kitashinagawa, Shinagawa-ku,

Tokyo 141-0001, Japan

Phone: +81-3-5420-8671 Fax: +81-3-5420-8687

URL: <http://www.mimaki.co.jp/>

D201645-20

TABLE OF CONTENTS

CAUTION	v
CAUTION	v
Requests	v
FCC Statement (USA)	v
INTERFERENCE TO TELEVISIONS AND RADIOS	v
LASER SAFETY	vi
CDRH REGULATION	vi
Foreword	vii
On this operation manual	vii
Features	viii
For safe operation	ix
Pictorial signs	ix
How to Read This Operation Manual	xvii

CHAPTER 1 Before Use

Installing the device	1-2
Where to install the device	1-2
Configuration and Function	1-3
Front Side	1-3
Rear Side	1-3
Operation Panel (JF-1631)	1-4
Operation Panel (JF-1610)	1-5
Carriage	1-6
Capping Station	1-6
Flushing BOX	1-6
EMERGENCY SWITCH	1-7
Connecting the cables	1-8
Connecting the USB2.0 interface cable	1-8
Connecting the power cable	1-8
UV irradiation device and Indicator	1-9
UV irradiation device	1-9
Function of indicator	1-9
Setting of ink cartridge	1-10
Kinds of ink that can be used	1-10
About Media	1-12
The sizes of media that can be used	1-12
Precautions in handling the media	1-12
Menu mode	1-13

CHAPTER 2 Basic Operations

How to use the opening/closing door	2-2
Operation flow	2-3
Turning the power ON	2-4
Setting the media	2-5
Setting the media on JF-1610	2-5
Setting the media on JF-1631	2-6
Using of Roll Sheet	2-8
Test drawing	2-9
Execution of test drawing	2-9
Execution of head cleaning	2-10
When cleaning with “Normal” or “Hard”	2-10
When cleaning with “Wiping”	2-11
Drawing an image from source data	2-12
Starting the drawing operation	2-12
Interruption of drawing	2-13
Move the Y-bar	2-13
Turning the power OFF	2-15

CHAPTER 3 Useful Function

Changing origin	3-2
Changing origin with JOG keys	3-2
Changing origin with FUNCTION menu	3-3
Registering the thickness of the media	3-4
Register the thickness of the media manually	3-4
Measuring the thickness of the media automatically	3-5
Adjusting head gap	3-6
Adjust head gap with the UP or DOWN keys	3-6
Registering Head gap value	3-7
Turing the UV lamp off	3-8
Other useful functions	3-9
Data clear	3-9
Displaying information of this device	3-9
Each setting	3-10
Setting the print method	3-10
Setting the light intensity of the UV lamp	3-12
Setting of priority	3-13
Changing language display on the screen	3-14
Output the setting list	3-15
Displaying machine information of this device	3-16

Other useful settings	3-17
Initializing set contents	3-18
For setting media correctly	3-19

CHAPTER 4 Daily Maintenance

Routine maintenance	4-2
When the device is left unused for a long period of time	4-2
Notes on cleaning	4-2
Maintenance of frame component	4-3
Ink cartridge	4-4
Replacing with a new ink cartridge	4-4
Ink cartridge trouble	4-5
Cleaning flushing BOX	4-6
Cleaning the flushing BOX	4-6
Avoiding dripping of ink droplet at printing	4-8
Cleaning of the head guard plate	4-8
When the waste ink is pooled up	4-10
Disposing of the ink in the waste ink tank	4-10
Disposing of the ink in the wiper tank	4-11
Replacing the filter of the cooling fan	4-12
Cleaning nozzle face automatically	4-14
When media thickness is changed	4-15
Changing the ink set	4-17
Changing the ink set	4-18
In case defective printing is not resolved	4-20
Filling the ink	4-20
Regular maintenance for white ink	4-22
Head maintenance function	4-24
Special refresh	4-25
Cleaning of wiper and cap	4-26
Replacing water in water heater tank	4-29
Replacement method of antifreeze liquid water	4-30
Replacing exhaust blower	4-33
Setting the UV lamp OFF duration	4-35
Cleaning of UV lamp filter	4-36
Replacing UV lamp	4-38
Checking UV lamp irradiation duration	4-38
Replacing UV lamp	4-38
Resetting UV lamp irradiation duration	4-40

Checking UV ink curing level	4-41
Adjusting UV light level	4-42
Checking method of UV illumination intensity	4-43
Check the UV illumination intensity	4-44

CHAPTER 5 In Case of Trouble

Before taking a phenomenon as a trouble	5-2
The device cannot be energized	5-2
The device cannot perform printing	5-2
Display [WATER NOT READY] OR [UV NOT READY]	5-2
If image quality declines	5-3
Resolving nozzle clogging	5-3
Stopping the unit during the operation	5-3
Troubles for which error messages are given on the LCD	5-4
Errors accompanied by warnings	5-4
Error message	5-5

CHAPTER 6 Appendix

Specifications	6-2
Basic unit specifications	6-2
Specifications for ink	6-3
Position of the warning label	6-4
Function Flowchart	6-7

CAUTION

CAUTION

DISCLAIMER OF WARRANTY:

THIS LIMITED WARRANTY OF MIMAKI SHALL BE THE SOLE AND EXCLUSIVE WARRANTY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING , BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS, AND MIMAKI NEITHER ASSUMES NOR AUTHORIZES DEALER TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY OR MAKE ANY OTHER WARRANTY OR MAKE ANY OTHER WARRANTY IN CONNECTION WITH ANY PRODUCT WITHOUT MIMAKI' S PRIOR WRITTEN CONSENT. IN NO EVENT SHALL MIMAKI BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR LOSS OF PROFITS OF DEALER OR CUSTOMERS OF ANY PRODUCT.

Requests

- This Operation Manual has been carefully prepared for your easy understanding, however, please do not hesitate to contact a distributor in your district or our office if you have any inquiry.
- Description contained in this Operation Manual are subject to change without notice for improvement.
- Generally, names and designations referred to in this Operation Manual are trade marks or registered trade marks of the manufacturers or suppliers.

FCC Statement (USA)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which cause the user will be required to correct the interference at his own expense.



- In the case where MIMAKI-recommended cable is not used for connection of this device, limits provided by FCC rules can be exceeded. To prevent this, use of MIMAKI-recommended cable is essential for the connection of this device.

INTERFERENCE TO TELEVISIONS AND RADIOS

The product covered by this Instruction Manual produces low radio waves while it is in operation. The product can interfere with radios and televisions if set up or commissioned under improper conditions. The product is not guaranteed against any damage to specific purpose radio and televisions.

The product' s interference with your radio or television will be checked by turning on/off the power switch of the product.

In the event that the product is the cause of interference, try to eliminate it by taking one of the following corrective measures or taking some of them in combination.

- Change the direction of the receiving antenna or the feeder of your radio/television.
- Change the installing direction of the product.
- Move the receiver away from the product.
- Use a power line for the receiver that is not shared with the product.

LASER SAFETY

This Model is certified as a Class II laser product under the U.S. Department of Health and Human Services Radiation Performance standard according to the Radiation Control for Health and Safety Act of 1968. This means that this Model does not produce hazardous laser radiation.

CDRH REGULATION

The Center for Devices and Radiological Health for the U.S. Food and Drug Administration Implement regulations for laser products. The sentence of “This product complies with 21 CFR chapter I and subchapter J” indicates compliance with the CDRH regulations and is labeled on the product when marketed in the United States. This Model is equivalent to Class II laser device according to CDRH Regulation.

This product complies with 21 CFR chapter I and subchapter J

- Use of controls, adjustments or performance of procedures other than those specified in this manual may results in hazardous radiation exposure.



Foreword

Congratulations on your purchase of a MIMAKI "JF-1631/1610" model of UV ink jet printer.
UV Inkjet Printer JF-1631/1610 uses ultraviolet ray curing ink (UV ink).
Read this Operation Manual carefully and make the most effective use of your printer.
Before starting to operate the printer, be sure to read this Operation Manual carefully .

On this operation manual

- This Operation Manual describes the operation and maintenance of Model JF-1631/1610 Color Ink Jet Printer (hereinafter referred to as the device).
- Please read and fully understand this Operation Manual before putting the machine into service. It is also necessary to keep this Operation Manual on hand.
- Make arrangements to deliver this Operation Manual to the person in charge of the operation of this device.
- This Operation Manual has been carefully prepared for your easy understanding, however, please do not hesitate to contact a distributor in your district or our office if you have any inquiry.
- Description contained in this Operation Manual are subject to change without notice for improvement.
- In the case where this Operation Manual should be illegible due to destruction or lost by fire or breakage, purchase another copy of the Operation Manual from our office.

Reproduction of this manual is strictly prohibited.

All Rights Reserved. Copyright © 2006 MIMAKI ENGINEERING CO., LTD.

Features

Characteristics of this unit are introduced here. We hope this information helps your understanding on drawing with this unit together with operation method explained in this book.

Ultraviolet ray curing ink

Direct printing on media is allowed by using newly developed ultraviolet curing ink.

High-speed interface

High-speed data receiving from a computer is allowed by using the high speed interface [USB2.0].

Curing fixation of ink after printing

As the ultraviolet curing device (UV lamp) is mounted, ink curing fixation of ink after printing is allowed.

Wide printing width

Wide printing width is realized.

JF-1631 : 1602mm (63 inch) × 3100mm (122 inch)

JF-1610 : 1602 mm (63inch) x1016mm (40inch)

Printing on media having thickness up to 50mm

This machine can print on media having thickness up to 50mm.

Vacuum table

The suction blower table for fixing media is equipped.

For safe operation

Pictorial signs

Pictorial signs are used in this Operation Manual for safe operation of and in prevention of damages to the device. Pictorial signs and their meanings are given below. Read and fully understand before reading the text.

Example of pictorial signs

 Warning	Indicates the case where it is assumed that misuse of the machine, ignoring this sign, as this may cause fire or poisoning. Be sure to read this manual for proper operation.
 Caution	Indicates the case where it is assumed that misuse of the machine, ignoring this sign, can cause damage only to property.
 Important!	This symbol indicates that the information is helpful in proper operation of the plotter.
	The symbol indicates helpful information that will facilitate the use of the device.
	Indicates the reference page for related contents.
	The symbol "△" indicates the case where some phenomenon that requires a CAUTION sign (including "DANGER" and "WARNING" signs) exists. A concrete precaution (precaution against an electric shock in the case of the sketch given on the left) is shown in the illustration.
	The symbol "○" indicates a prohibited behavior. A concrete illustration of prohibition (disassembly is prohibited in the sketch given on the left) is shown in or next to the illustration.
	The symbol "●" indicates a thing that is forced to be done and instruction that is forced to be followed. A concrete illustration of instruction (the removal of a plug from the receptacle is instructed in the sketch given on the left) is drawn in the illustration.



WARNING



- Be sure to setup the appropriate air-moving system in case of using the device in a closed room or a room with bad ventilation.

Cautions for constructing exhaust outlet

Please observe the following things to prevent the device.

(1) The sharp of the exhaust outlet depends on your building enviroment. The exhouast outlet area is required more than half of the duct entrance area.

(2) If mounting a valve on the exhaust outlet, be sure to open the valve when using the device.



- The ink used for this device falls into the category of UN No.3082 and UN Class 9. Since the ink is flammable, never use fire when using the device.



- When cleaning the ink station and head, be sure to wear the supplied goggle and gloves since you may get ink or washing liquid in your eyes.



• If anyone drinks ink or washing liquid in mistake, get the person to vomit and see a doctor immediately.Do not allow him or her drink vomit.Then, contact the Poison Control Center.

• If you absorb a lot of vapor and feel bad, immediately move to a location where fresh air is present and then keep yourself warm and quiet.Then, consult a doctor as soon as possible.

• Discard the waste ink according to the local regulations of the area this unit is used.

Never do the following



WARNING

Do not disassemble or remodel the device	Handling of ink cartridges
 <ul style="list-style-type: none"> Never disassemble or remodel the main unit of the printer and the ink cartridge. Disassembling/remodeling any of them will result in electric shocks or breakdown of the device. 	 <ul style="list-style-type: none"> Some of the ingredients (UV Curing initiator) have toxic consequences to aquatic life. Avoid leak into water system or sewage containing water. Store ink cartridges and waste ink tank in a place that is out of the reach of children. If ink settles on the skin or clothes, immediately wash it off with detergent or water. If you get ink in your eyes, immediately wash your eyes with a lot of clean water for at least 15 minutes. In this case, also wash the backside of eyelids to rinse ink away completely. Then, consult a doctor as soon as possible.
Do not use the device in damp places  <ul style="list-style-type: none"> Avoid damp environments when putting the device into service. Do not splash water onto the device. High humidity or water will give rise to fire, electric shocks or breakdown of the device. 	
Abnormal event occurs  <ul style="list-style-type: none"> If the device is used under an abnormal condition where the device produces smoke or unpleasant smell, fire or electric shocks can result. Be sure to turn off the power switch immediately and detach the plug from the receptacle. Check first to be sure that the device no longer produces smoke, and contact a distributor in your district for repair. Never repair your device by yourself since it is very dangerous for you to do so. 	Grounding work  <ul style="list-style-type: none"> This unit requires grounding work to prevent electrical shock. Carry out the grounding work.
Handling of the power cable  <ul style="list-style-type: none"> Use a power cable attached to this unit. Take care not to damage, break or work on the power cable. If a heavy matter is placed on the power cable, heated or drawn, the power cable can break to cause fire or electric shocks. 	Wearing protective devices  <ul style="list-style-type: none"> When cleaning the suction nozzle and/or cap, which may scatter ink, be sure to wear safety glasses and gloves, or ink and washing liquid might enter your eyes or ink and washing liquid put on your hands might make your hands rough.
	Opening / closing covers  <ul style="list-style-type: none"> This unit is equipped with covers. When opening or closing the covers, there is a possibility that your fingers or arms or a part of your body will be pinched. If it should occur, it may cause bruises or, in the worst case, crushing to death. When opening or closing the covers, take care so that your body or a part of it is never pinched.



WARNING

Power supply and voltage



- This unit contains parts applied high voltage. Carrying out electrical work by those unauthorized for that work is prohibited.
- To prevent electrical shock, be sure to set OFF the main power circuit breaker and disconnect the power plug before carrying out maintenance. For some units, capacitors may take one minute for discharging; therefore, start maintenance work three minutes after setting OFF the main power circuit breaker and disconnecting the power plug.
- Be sure to carry out grounding work to prevent electrical shock.
- Use the unit under the power specifications given. Be sure to connect the power cable plug to a convenient outlet grounded, or fire or electric shock might occur. or it may cause electrical shock.
- The main power circuit breaker should be set ON only by personnel with sufficient knowledge about operations of this unit.



- In rare cases, the UV lamp may break. We recommend you to replace the UV lamp with a new one before it reaches its rated life.
- Before replacing, mounting or demounting a lamp, be sure to set the power OFF, or it may cause electrical shock.
- Never look at the UV lamp being lit with your naked eyes, or it may cause pain in your eyes or visual impairment. Be sure to wear safety glasses.
- Do not apply ultraviolet (UV) light directly to your skin, or it may cause irritation on your skin.



- Be sure to use only the UV lamp recommended by Mimaki, or it may cause fire or damages to the unit. Never use UV lamps other than those recommended by Mimaki. We would take no responsibility for any troubles caused through the use of a UV lamp not recommended by Mimaki.
- Do not touch the lamp on or right after the lamp off with bare hands to avoid from burn injury. Make sure to replace the lamp after it cools down completely.

Handling of UV lamp



- The UV lamp is made of glass and should not be dropped, hit against anything, given excessive force or scratched, or it may cause damage to the UV lamp.



- Do not use the UV lamp in an ambience with a possibility of catching fire (gasoline, combustible gas spray, thinner, lacquer, powder dust, etc.). In addition, do not put paper or cloth near or on the UV lamp, or it may cause fire. or it may cause electrical shock.



- Do not break a used UV lamp; put it in a container and discard likewise ordinary fluorescent lamps according to the local regulations. Breaking a UV lamp will cause glass fragments to be scattered.

Laser sensor



- A laser sensor (Class 2) is installed in this unit. Never expose your naked eye to the laser beam directly. That can cause an eye pain or a vision abnormally.





WARNING

Handling the Anti-freezing liquid



- Use the exclusive Anti-freezing liquid by Mimaki ,or the heater may be damaged.
- If the Anti-freezing liquid or mixed soft water with anti-freezing liquid gets on the skin or clothes, immediately wash it off with soap.
If you get the Anti-freezing liquid or mixed soft water with anti-freezing liquid in your eyes, immediately wash your eyes with a lot of clean water.
Then, consult a doctor as soon as possible.If high temperature Anti-freezing liquid or mixed soft water with anti-freezing liquid gets on the skin, immediately wash it off with soap and cool with iced water.
Then, consult a doctor as soon as possible.
- Before using the Anti-freezing liquid, be sure to read the Material Safety Data Sheet (MSDS).



- If you swallowed the Anti-freezing liquid or mixed soft water with antifreezing liquid accidentally, try to get to vomit, and then consult a doctor as soon as possible.
- When unused the Anti-freezing liquid or used mixed soft water with anti-freezing liquid should discard as followings,
 - Incinerating the fluid which is absorbed to the sawdust or waste cloth.
 - Entrust them to an industrial waste disposal contractor, clarifying their contents.
- Avoid ignition such as static electricity and impact spark.
- Be sure to wear goggles and gloves for handling the Anti-freezing liquid.



Precautions for use



CAUTION

Protection against dust	Periodic exchange parts
<div data-bbox="158 1275 234 1347" data-label="Image"></div> <ul style="list-style-type: none"> • It is strongly recommended to use the device in a room that is not dusty. Set the Refresh level 2 or 3 when in bad environment. • When leaving the workshop after the working hours, be sure to take off any media from the roll hanger.If any media is left on the roll hanger, dust can put on it. • Store media in a bag.Wiping off dust accumulated on a media will adversely affect the media due to static electricity. • Frequently the capping station clean to eliminate dust and paper chips. • Dust in the head will also cause drops of ink to fall abruptly down on the media during printing.If this phenomenon takes place, be sure to clean up the head. (☞ P.2-10) 	<div data-bbox="822 1275 896 1347" data-label="Image"></div> <ul style="list-style-type: none"> • There are some parts which must be replaced by service men.You have to make a contract with distributors or dealers for after-sale service.
	<div data-bbox="822 1500 896 1572" data-label="Image"></div> <p>Adjusting the level</p> <ul style="list-style-type: none"> • The level must be adjusted before printing can start.
	<div data-bbox="822 1695 896 1767" data-label="Image"></div> <p>Handling of maintenance liquid</p> <ul style="list-style-type: none"> • Be sure to store the maintenance liquid in a cold and dark place.Store the maintenance liquid in a place that is out of the reach of children.

 CAUTION	
Ink cartridges	<p></p> <ul style="list-style-type: none"> If the ink cartridge is moved from a cold place to a warm place, leave it in the room temperature for three hours or more before using it. Open the ink cartridge just before installing it in the printer. If it is opened and left for an extended period of time, normal printing performance of the printer may not be ensured. Make sure to store ink cartridges in a cold and dark place. Be sure to thoroughly consume the ink in the ink cartridge after opened. If an extended period of time has passed away after opening the cartridge tank, printing quality would be poor.
Warning labels	Handling the Anti-freezing liquid
<p></p> <ul style="list-style-type: none"> This device is adhered with a warning label. Be sure understand firmly the warnings given on the labels. In the case where any of the warning label has become so soiled that the warning message is illegible or has come off, purchase a new one from your local distributor or our office. Refer to Appendix for the label 	<p></p> <ul style="list-style-type: none"> Be sure to store the Anti-freezing liquid in a cold and dark place. Store the Anti-freezing liquid in a place that is out of the reach of children.
About UV light	About hot parts
<p></p> <ul style="list-style-type: none"> There is some leaking of ultraviolet radiation around the UV lamp. UV light applied to your skin might cause inflammation and/or skin cancer. Though weak UV light might cause no inflammation, repeated exposure to it may lead to chronic disorders. Avoid applying UV light to your skin and eyes.  Impairment of eyes caused by UV light may be: Acute disorders ... Pain in eyes, tearing, etc. Chronic disorders ... Cataract, etc. <p>When using this device, take protective measures such as gloves, long-sleeve cloth, light-resistant mask, attached light-resistant glasses, etc.</p>	<p></p> <ul style="list-style-type: none"> The UV lamp and the interior of the UV irradiation device will have a very high temperature. When carrying out maintenance, wait until the temperature has been sufficiently lowered after the lamp is turned OFF. Some parts outside the unit will have a very high temperature. A hightemperature caution label is placed on such parts. Do not touch the parts with the caution label placed and their vicinity, or burn injury may occur.  When it is unavoidable to touch hot parts, be sure to wear heat-insulating gloves to protect your hands.



CAUTION

About cleaning



- After using the unit long time, foreign materials and dust may be gathered on the conductive and insulating parts, causing electric leakage. Periodically clean such parts.
- For cleaning, do not use compressed air because it scatters foreign materials and dust, which may cause malfunctions when put inside the conductive parts. Be sure to use vacuum cleaner for cleaning of foreign materials and dust.
- Do not use the unit in a place where there is a possibility of being wet, or electrical leakage may occur.
- Electrical leakage, if it should occur, may lead to electrical shock of personnel or fire.
- In order to prevent accidents from occurring, be sure to carry out periodic inspections and replacement of time-change components.

About firing and smoking



- Touching hot parts such as the UV lamp with combustible materials may cause firing and/or smoking. Leaving combustible materials under the UV lamp for a couple minutes may also cause firing and/or smoking.
- After the unit is used long time, foreign materials or dust gathered on the stabilizer or other parts may cause electrical leakage or insulation deterioration may cause firing and/or smoking. Periodically clean the parts and measure the insulation resistance, replacing deteriorated parts, if any.
- After the unit is used long time, screws, etc. on the conductive parts may be loosened, causing firing and/or smoking. Periodically tighten such screws.
- Because this unit is not of explosion proof type, do not use it in an ambience with hazardous materials, or a possibility of explosion may arise.
- If abnormalities of the unit such as a strange odor, a smoking or a spark burn are found, turn the power off and call Mimaki immediately.

Notes on UV lamp








- When handling the UV lamp or the silica glass on the bottom of the irradiation device, be sure to wear the gloves attached and never touch them with bare hands, or the UV ink curing level is significantly lowered. If the UV lamp or silica glass is contaminated, wipe it with clean gauze moistened with alcohol. (Do not use alcohol for cleaning the exterior cover, or the paint will peel off.)
- Securely mount the UV lamp to the socket, or the lamp may be dropped or overheated.



- The UV lamp performance and service life are significantly affected by the UV irradiation and UV power supply units used. Never use those UV devices other than those recommended by Mimaki. We would take no responsibility for any troubles caused through the use of a UV devices not recommended by Mimaki.

Notices for installation

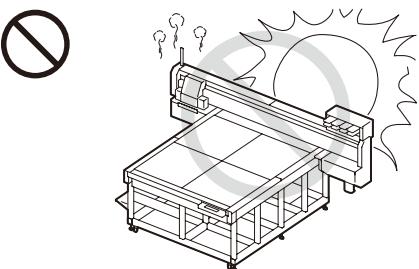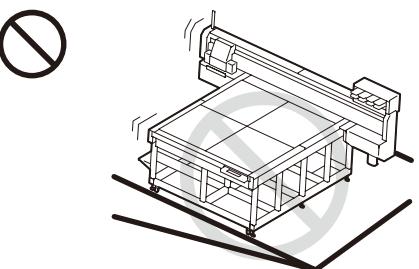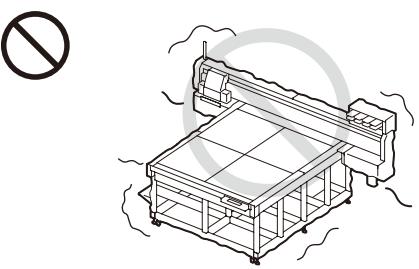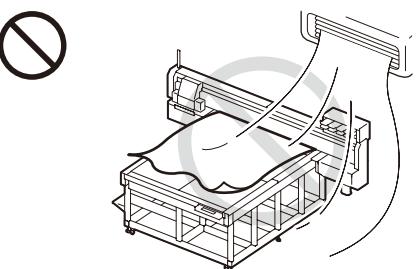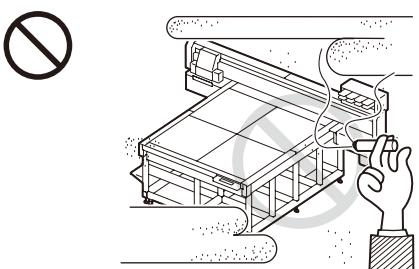 CAUTION		
A place exposed to direct sunlight	A place that is not horizontal	A place in which temperature and humidity vary by a great margin
		 <ul style="list-style-type: none"> Use the device under the following environment. Operating environment : 15 ~ 30 °C 35 ~ 65 % (Rh)
A place that vibrates	A place exposed to direct air blow from air conditioner, etc.	A place where fire is present
		

How to Read This Operation Manual

This manual provides the explanation about the displayed characters and used keys on the “Display Panel” in addition to the operation procedures.

Proceed operations confirming them while using.

These are what we want you to know in advance.

This explains the outline of functions.

Test drawing

Make test drawing to check whether there is nozzle clogging or other drawing failures (such as wearing or missing).

Execution of test drawing



- Printing is disabled when the following messages are displayed. It is enabled when the message has disappeared.
“WATER NOT READY” : The temperature of water in the hot water device has not reached the predetermined value.
“UV NOT READY” : UV irradiation device is not ready.

Check before starting test drawing	• Is media set ? (P.2-5)	• Is origin point set ?
	• Is head gap value registered ? (P.3-7)	

These are the number of operation procedures.

2

Basic
Operation

1 Press the **TEST** key in the local mode.

TEST DRAW
NOZZLE CHK <ENT>

2 Press **▲** or **▼** key to select “NOZZLE CHK”.

- Select “HARDEN CHK” to confirm that UV ink has not been cured. (P.4-42)

3 Press **ENTER** key.

** TEST DRAW **

- Test drawing is started.

4 Test drawing ends

- Returned to the local mode.
- Execute operation of PXX, when evacuation of the Y-bar is required.

5 Check result of drawing

- When the result is normal, finish the operation.
- When the result is abnormal, execute head cleaning. (P.2-10)

This shows the display panel.

Normal pattern	Abnormal patterns		
	Nozzle drop out	Nozzle missing	Deflection
	 Many lines are missing.	 The lines are missing as if the teeth are lost.	 The distance between the lines is narrowing or double lines are formed.

2-9

Ⓐ enclose shows the buttons in a sentence

Page number
(Section 2, Page 9)

CHAPTER 1

Before Use



This chapter describes the parts name and setting procedures before use.

Installing the device	1-2
Where to install the device	1-2
Configuration and Function	1-3
Front Side	1-3
Rear Side	1-3
Operation Panel (JF-1631)	1-4
Operation Panel (JF-1610)	1-5
Carriage	1-6
Capping Station	1-6
Flushing BOX	1-6
EMERGENCY SWITCH	1-7
Connecting the cables	1-8
Connecting the USB2.0 interface cable	1-8
Connecting the power cable	1-8
UV irradiation device and Indicator	1-9
UV irradiation device	1-9
Function of indicator	1-9
Setting of ink cartridge	1-10
Kinds of ink that can be used	1-10
About Media	1-12
The sizes of media that can be used	1-12
Precautions in handling the media	1-12
Menu mode.....	1-13


Installing the device

Where to install the device

Secure sufficient space for installation before assembling this unit.

Decide the place considering the size of the device and a space required for execution of drawing.

Machine Type	Width	Depth	Height	Total Weight
JF-1631	3430 mm	4250 mm	(Min.) 1385 to (Max.) 1465mm	Approx.1150 kg
JF-1610	3430 mm	2005 mm	(Min.) 1385 to (Max.) 1465mm	Approx.1050 kg

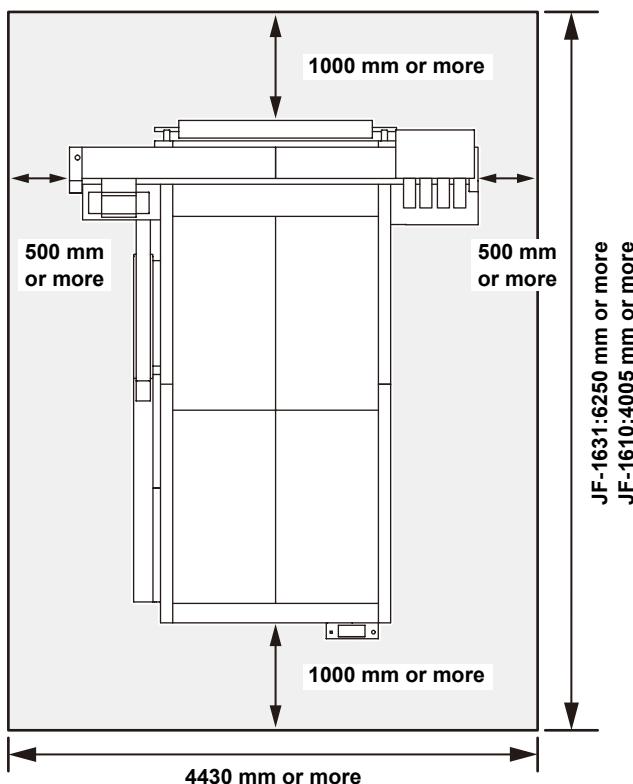

- This unit cannot be installed by the customer. Its installation should be entrusted to our service personnel or your electrical contractor.



- Be sure to carry out grounding work.



- In order to prevent electrical shock from occurring, carrying out electrical work by those unauthorized for that work is prohibited.



Configuration and Function

1

Before Use

Front Side

Indicator

Indicating a state of the machine.
(☞ P.1-9)

Carriage (☞ P.1-6)

Table


Setting media on it. (☞ P.2-5)
There are absorbing holes on the table so that media is absorbed when vacuum is ON.

Suction valve

Switch at setting media.
(☞ P.2-5)

Ink station

Insert ink cartridges here.
(☞ P.1-10)

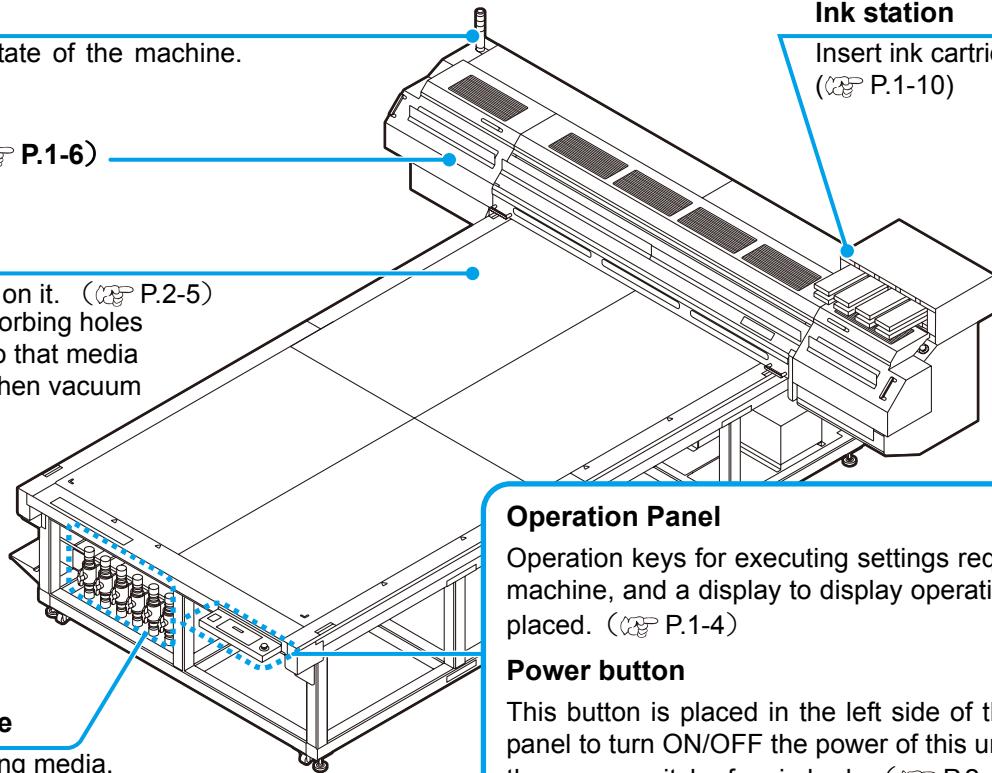

Operation Panel

Operation keys for executing settings required for the machine, and a display to display operation items are placed. (☞ P.1-4)

Power button

This button is placed in the left side of the operation panel to turn ON/OFF the power of this unit instead of the power switch of main body. (☞ P.2-4, P.2-15)

Rear Side

Waste ink tank

Waste ink which has been used for cleaning operation and so on, is stored. (☞ P.4-10)

Y-bar

Moved on the table at drawing.

Roll hanger

Set roll sheet here. (☞ P.2-8)

Main power switch


ON/OFF the power of the machine.

USB2.0 connector

USB2.0 compliance interface.
(☞ P.1-8)

Operation Panel (JF-1631)

The operation panel is used for setting of drawing method and each operation.

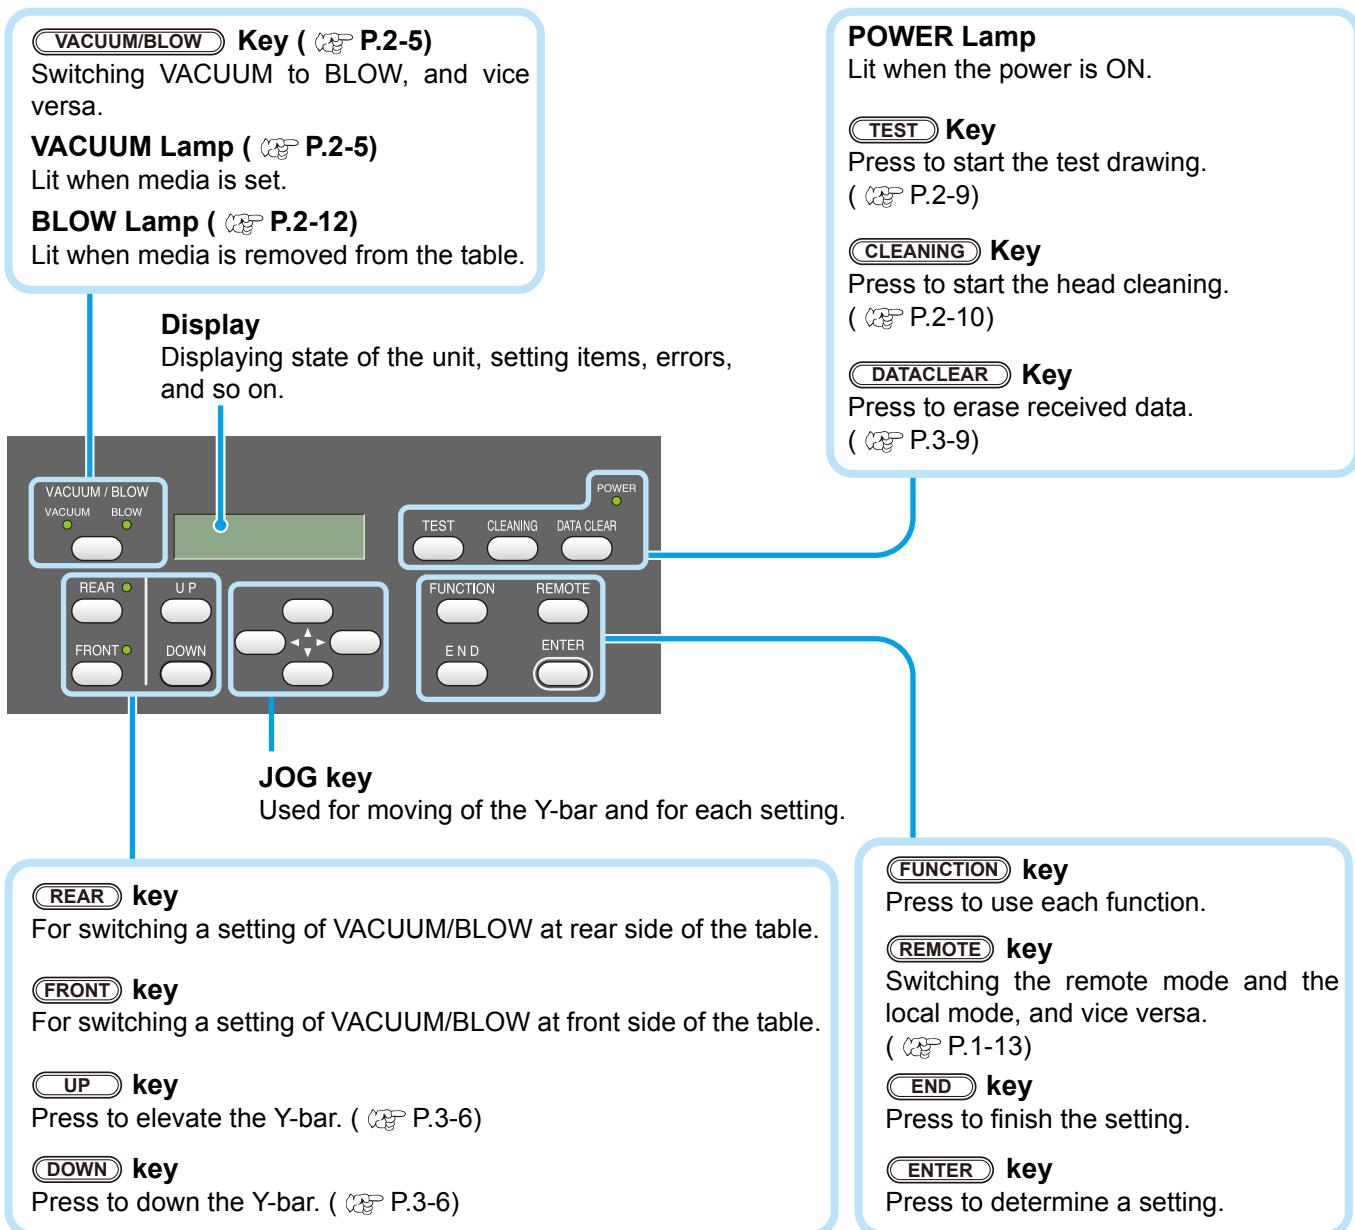


Function of Jog Keys

A function of the Jog key is different by the timing to be used.


	At drawing origin, area setting	At function selection	At setting selection
◀	Shifts the carriage to the left		
▶	Shifts the carriage to the right		
▲	Shifts the carriage to back	Return to the previous function	Select the previous function
▼	Shifts the carriage to front	Move to the next function	Select the next value

Operation Panel (JF-1610)

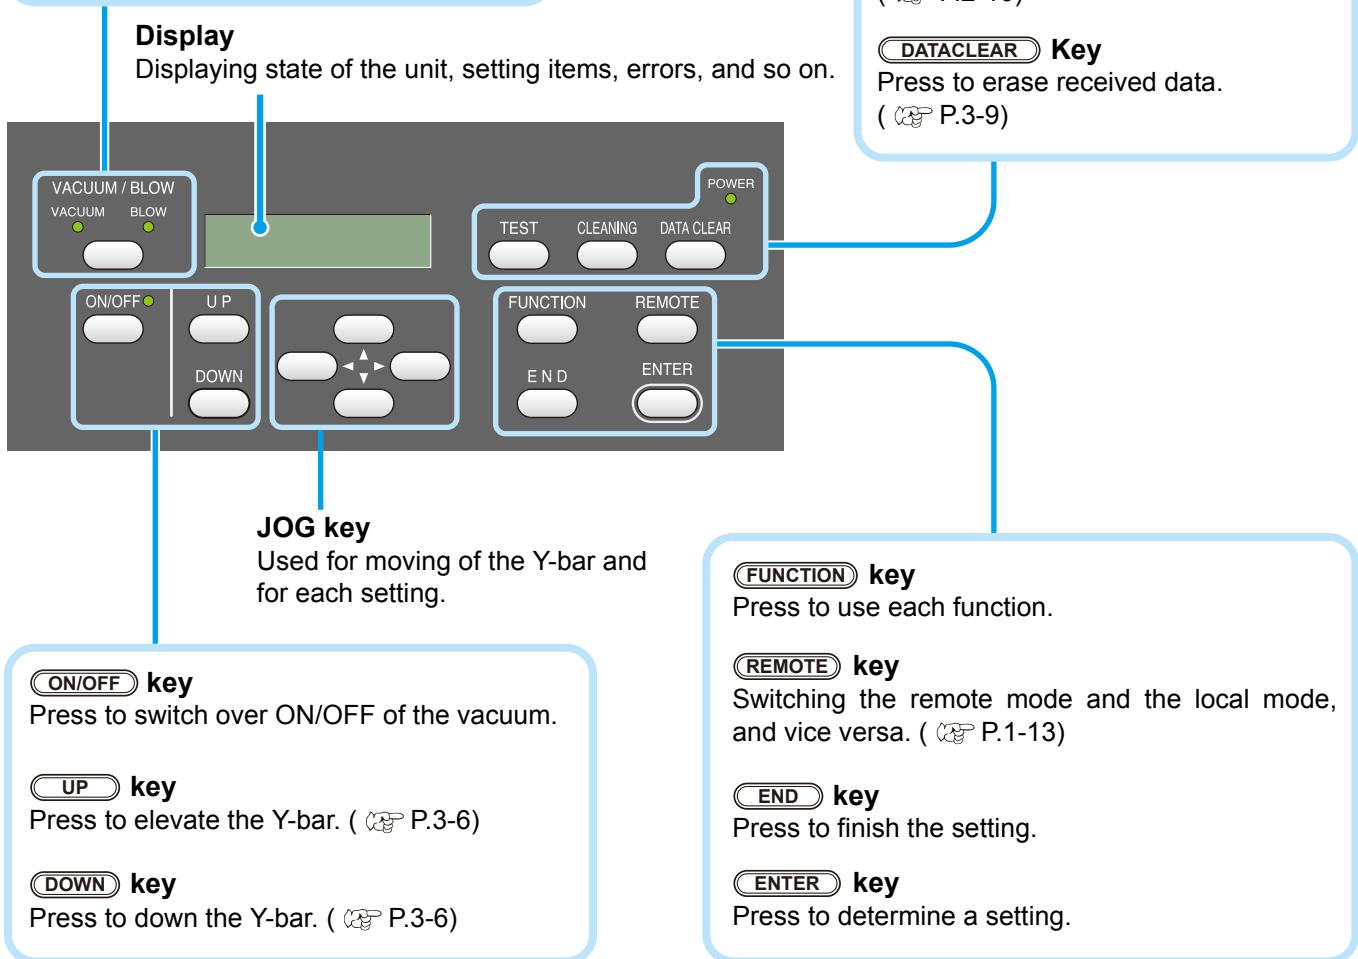


Carriage

A print head for drawing, a UV irradiation appliance, and a light pointer in the print head cover are mounted on the carriage. Depending on UV lamp condition, the carriage is positioned differently.

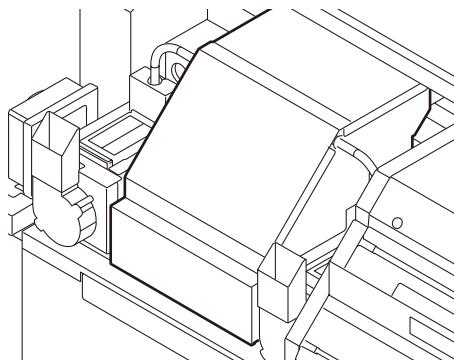

Capping Station


The capping station on the front-right side of the unit consists of the ink caps and suction nozzle used for the maintenance of the print head.

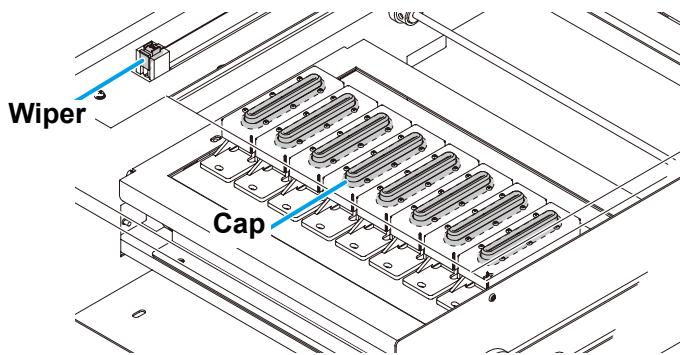

Flushing BOX

A flushing BOX is placed in right and left of the machine respectively.


When the print head flushes, waste ink is absorbed by the absorbent material in the flushing BOX. Replace the absorbent material with new one frequently. (☞ P.4-6)

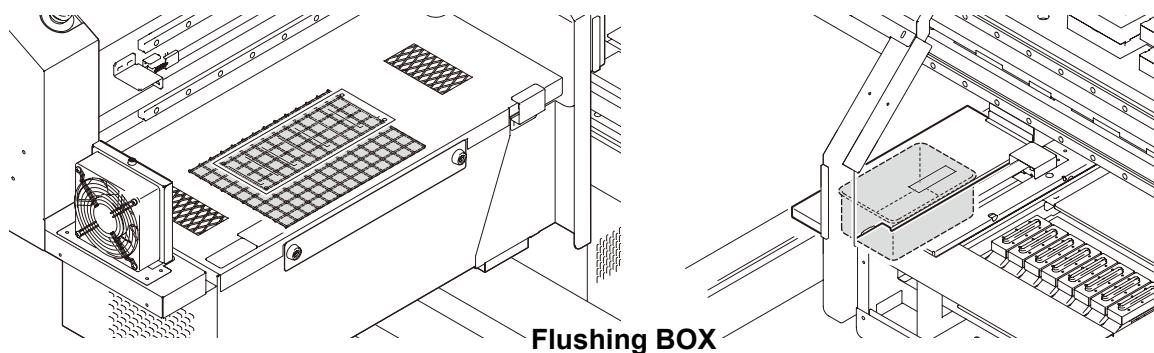

EMERGENCY SWITCH

One EMERGENCY switch is placed on the front face of the unit and 2 are placed on each of the buck surface and Y-bar respectively.

When stopping the machine for safety reason, press the switch.

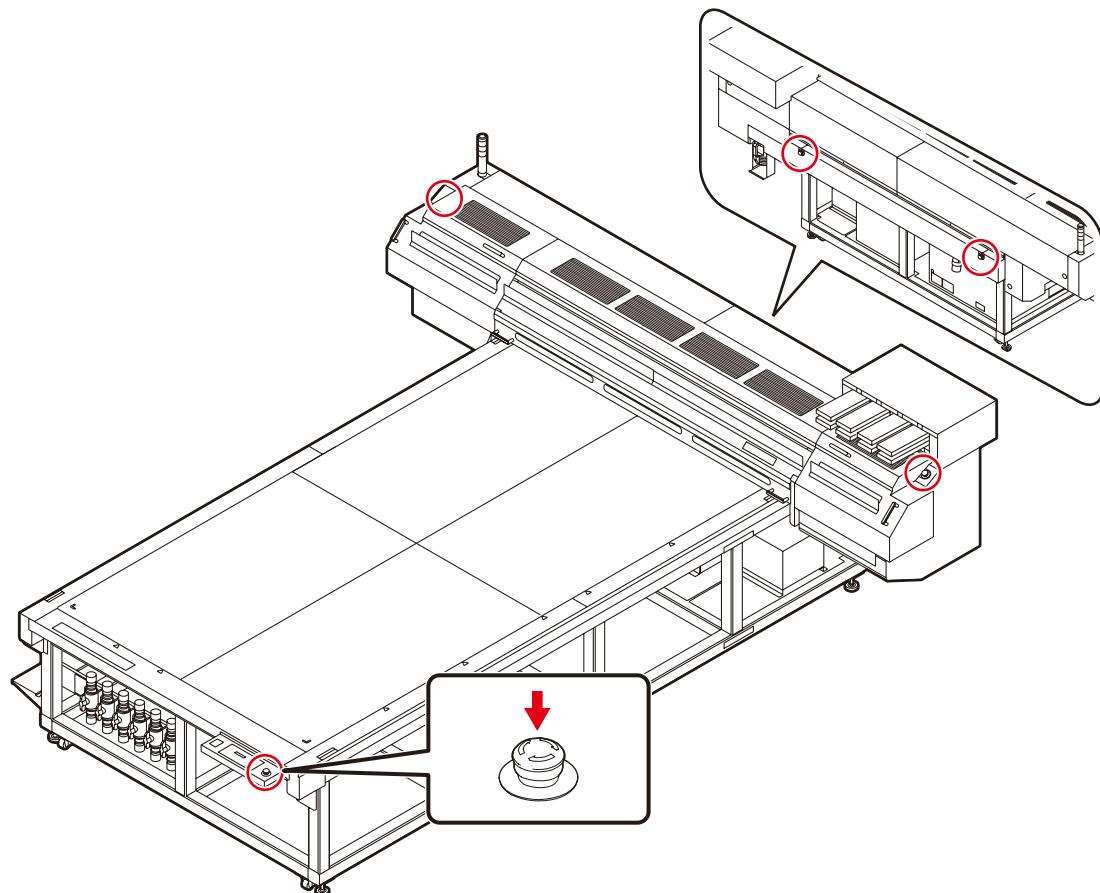


Connecting the cables

Connecting the USB2.0 interface cable

Connect a computer to this machine with the USB2.0 interface cable.



- Your RIP is required to support USB2.0 interface.
- If USB2.0 interface is not installed in your computer, ask a RIP maker near you or our branch office.

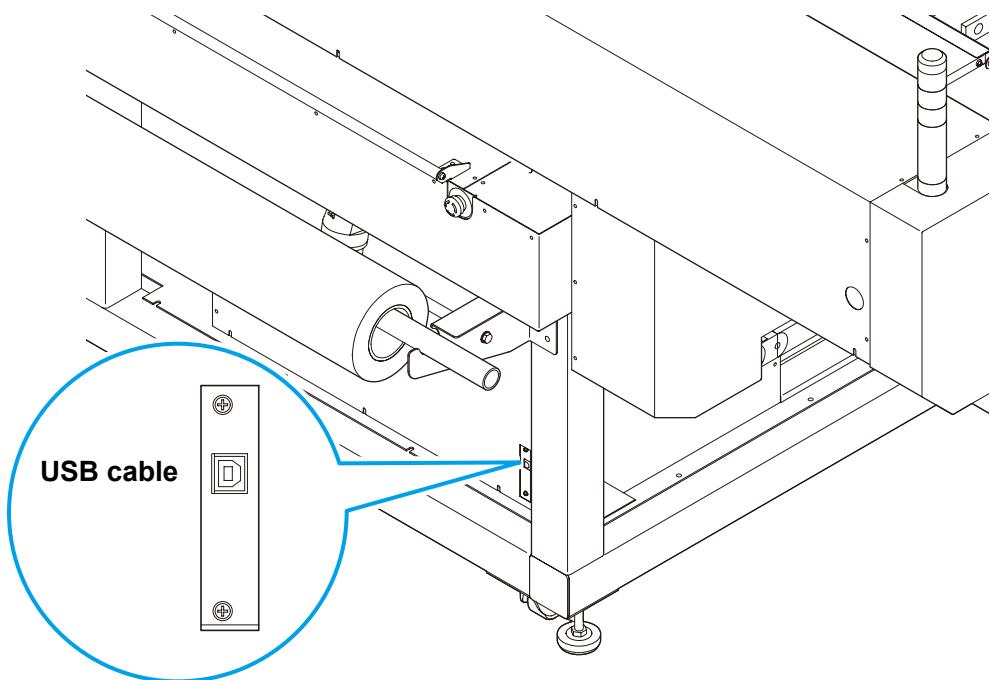

Connecting the power cable



- For supplying power to the device, the power distribution board work is required.
- Connecting the power cable cannot be installed by the customer.
- Contact your local distributor or call for service to connect the power cable as well as moving installation of the device.
- We should take no responsibility for any troubles caused through the power cable connection by the customer without calling for service.


UV irradiation device and Indicator

UV irradiation device



- Do not expose your naked eyes directly to the light irradiated from the UV lamp when it lights.
- Do not touch the lamp when it is being lit or just after it is set OFF. It may cause a burn injury, as it is very hot.

The UV lamp is set to OFF automatically, if no drawing is conducted for 30 minutes. Set the UV lamp to OFF if drawing is not conducted for a long time (more than 30 minutes). (☞ P.3-8 "Turing the UV lamp off")

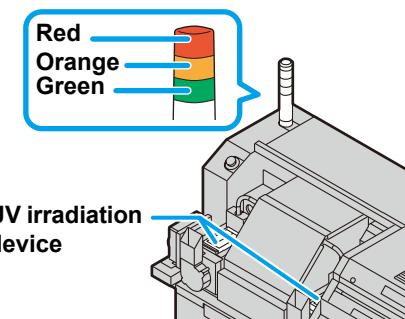

UV irradiation device

Function of indicator

Functions of the Indicator on the top left of this unit are described here.

The indicator represents 3 modes. A state of each mode is indicated by the indicator of this unit.


Mode	State of machine	Outline
Ready mode		
ON (green)	REMOTE MODE	
Blinking (green)	REMOTE MODE (at drawing)	
OFF	LOCAL MODE	
After cooling mode		
ON (orange)	[Drawing disabled] UV lamp being cooled (5 minutes)	The UV lamp goes OFF in the following cases: <ul style="list-style-type: none">• When operation for setting the UV lamp OFF is executed.• When 30 minutes or more have elapsed after drawing.• When an error has occurred in this unit. After the UV lamp has been set OFF, it is cooled. The UV lamp cannot be set ON again and this unit cannot start drawing. Wait for going the light OFF for a while.
Blinking (orange)	[Drawing disabled] At preparation for lighting the UV lamp	
OFF	UV lamp has been lit or has been turned OFF	
Error mode		
ON (red)	[Drawing disabled] An error occurred (The UV lamp goes OFF.)	(1) Error in UV power unit (2) UV lamp overheated The UV lamp goes OFF. Drawing operation of this unit stops. (3) When the UV irradiation unit does not function normally. (4) Occurrence of an error on the unit.
OFF	Normal	

Setting of ink cartridge

Use ink cartridge inserting it into the ink station.

Kinds of ink that can be used

Kind of ink	Color	Product Number
UV Ink	Magenta	SPC-0371M
	Cyan	SPC-0371C
	Yellow	SPC-0404HY
	Black	SPC-0371K-2
	Light cyan	SPC-0371Lc
	Light magenta	SPC-0371Lm
	White	SPC-0371W-5
	Clear	SPC-0371CL
Cleaning cartridge *1		SPC-0371FS

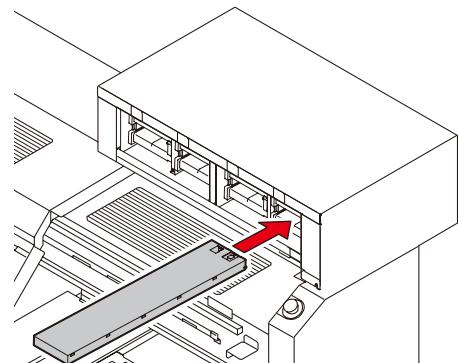

*1: To be used when changing the ink set or when the head is cleaned.

Each color is displayed on the LCD as follows :


Display	Color	Display	Color	Display	Color
M	Magenta	c	Light cyan	S	Spot color 1
C	Cyan	m	Light magenta	s	Spot color 2
Y	Yellow	w	White		
K	Black	CL	Clear		

Precautions at the time of setting the ink cartridge

When setting the ink cartridge, pay attention to the followings:



- Confirm the ink slot number and insert the ink cartridge of the correct color. The relationship between the color and the ink slot number differs depending on the ink set.
(☞ P.4-17 "Changing the ink set")
- Insert the ink cartridge securely all the way in the slot. Moreover, do not insert or pull out the cartridge roughly.
- Insert the cartridge making the IC chip side facing upward.

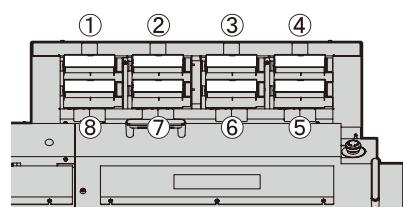

Precautions in handling ink cartridge



- Use the recommended ink cartridge by Mimaki.
- Do not touch the ink directly. If the ink settles on the skin or clothes, immediately wash it off with soap and water. If you get ink in your eyes, immediately wash your eyes with a lot of clean water. Then, consult a doctor as soon as possible.
- Store ink cartridge in a dark and cold place.
- If the ink cartridge is moved from a cold place to a warm place, leave it in the room temperature for more than three hours before using it.
- Be sure to thoroughly consume the ink in the ink cartridge, once it is opened, within six months. If an extended period of time has passed after opening the cartridge, drawing quality would be poor.
- Store ink cartridges in a place that is out of the reach of children.
- When discarding unused ink cartridges, entrust them to an industrial waste disposal contractor, clarifying their contents.
- Some component (photoinitiator) of the ink is toxic against aquatic organisms. Avoid leakage of it to natural water system or domestic waste water.
- Do not use ink cartridges expired the date noted on them.
- Before using an ink cartridge, be sure to read the Material Safety Data Sheet (MSDS).
- Do not shake the ink cartridge violently. Shaking or turning it toughly can cause leakage of ink.
- Never disassemble the ink cartridge.
- Never refill the ink cartridge with ink. Refilling the ink cartridge can cause a trouble. Remember that Mimaki assumes no responsibility for any damage caused by the use of the ink cartridge replenished with ink.



Handling of white ink

White ink is easier precipitate than other inks, so that it may cause precipitate in ink cartridge. Make sure to perform regular maintenance to keep good ink condition. (☞ P.4-22 "Regular maintenance for white ink")



- Use the specified ink.
- In order to keep condition of the white ink good, take out the ink cartridge to shake the white ink, once in a week.

About Media

The sizes of media that can be used and the method of handling are described here.

The sizes of media that can be used

	JF-1631	JF-1610
Maximum width	1694 mm	
Maximum length	3194 mm	1080 mm
Max. drawing width	1602 mm	
Max. drawing length	3100 mm	1016 mm
Thickness	Less than 50mm	
Weight *1	Less than 200 kg (Weight on whole surface)	Less than 70 kg (Weight on whole surface)

*1: A rough guide is 50 kg per 1 m².

Precautions in handling the media

Carefully observe the following when handling the media.



• Extension and shrinkage of the media

Do not use the media in the sheet form shortly after the package was opened. The media could extend or shrink depending on the temperature and humidity inside the room. For more than 30 minutes after opening of the package, the media has to be exposed to the ambient air of the location it is to be used.

• Warping of the media

As for the media of the sheet form, use the flat one, or the one warping downward (the one with floating central part when placed the drawing surface facing upward.) The media warping upward could not be absorbed in some cases onto the table. Store the media liable to be warped on the slightly smaller platform or palette so that it may warp downward.

• Absorption of the media

To maintain the absorption effect, cover the suction holes not covered by the media with other media which is thinner than the media.

• The temperature on the surface of the media could be elevated.

Depending on the kinds of the media, printing mode, and printing area, the temperature of the media surface could become high. (When printed with 1200 x 1200dpi/16pass/Hi, the temperature of the white PET could rise up to 57.8 Co max. and the corrugated board could rise up to 88.1 Co max.) When using a media liable to accumulate the heat, turn OFF the "Logical Seek" on the Setting of Drawing System. (☞ P.3-10)

• Other precautions

- a Do not place any article on the surface of the coated paper. Some coated paper could change its color.
- b Curled media that cannot be absorbed or the media that misaligns when the Y-bar is moved may not be used. Before using, fix the media with adhesive tape, etc.
- c Do not use the media that will generate warping or deformation even if the logical seek is set "OFF".
- d As the bed surface is constructed of multiple boards, their joint lines could be reflected on the printed images depending on the thickness and elasticity of the media. Similarly, the suction holes could affect the printed images. Perform the printing after confirming that there is no problem by making the test printing in advance.

Menu mode

This device has three modes. Each mode is described below.

Local Mode

Local mode is a mode in drawing preparation state.

All keys are available.

Receiving of data from the computer is allowed, however, drawing is not executed.

The following operations are allowed in the local mode.

- (1) Setting an origin and drawing area by pressing the JOG keys.
- (2) Executing “Test drawing” by pressing the **TEST** key.
- (3) Executing “head cleaning” by pressing the **CLEANING** key.
- (4) Execute setting of each function by pressing the **FUNCTION** key.

Function Mode

Press the **FUNCTION** key during the Local Mode to call the Function Mode.

Function settings on drawing method can be set.

Remote Mode

Drawing is conducted according to received data.

Pressing of the **REMOTE** key causes the temporal stop of the device.

Press the **REMOTE** during the Local Mode to start the Remote Mode.

The UV lamp is lit when it has not been ON.

CHAPTER 2

Basic Operations



The procedure from preparation of ink and media to the execution of drawing, and setting methods are explained.

How to use the opening/closing door	2-2
Operation flow	2-3
Turning the power ON.....	2-4
Setting the media.....	2-5
Setting the media on JF-1610	2-5
Setting the media on JF-1631	2-6
Using of Roll Sheet	2-8
Test drawing	2-9
Execution of test drawing	2-9
Execution of head cleaning	2-10
When cleaning with “Normal” or “Hard”	2-10
When cleaning with “Wiping”	2-11
Drawing an image from source data.....	2-12
Starting the drawing operation	2-12
Interruption of drawing	2-13
Move the Y-bar	2-13
Turning the power OFF	2-15

How to use the opening/closing door

Close the door while performing the drawing to avoid the bad effect to be caused by UV lamp.


When setting the media

1

Set the media after opening the door.

(Important!)

- When setting the media, avoid contact of the media to the door. The door could be closed by vibration.

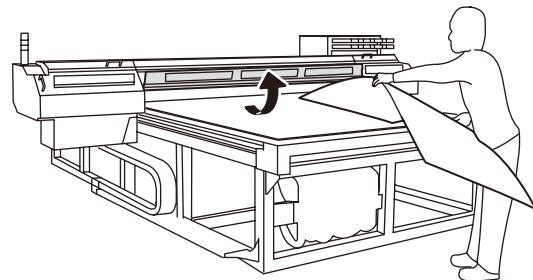


When drawing the image

1

Close the door.


(Important!)

- Close the door slowly so that the door may not be damaged.

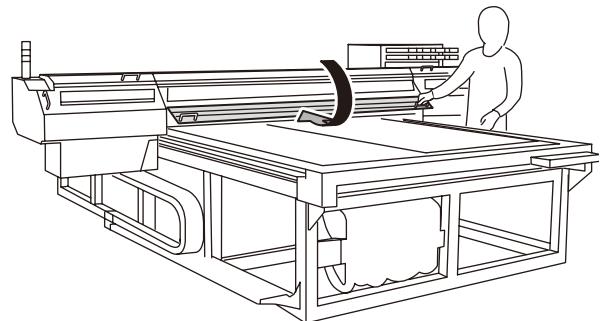

2

Perform drawing while keeping the door closed.

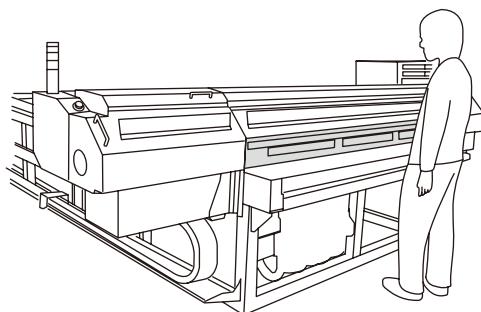

- Do not open the door while drawing. The UV light could damage your eyes or skin.
- Inserting your hand while drawing under the door could cause injury due to touching with the carriage.

Operation flow

1

Turning the power ON

See "Turning the power ON"
(☞ P.2-4)

2

Setting the media

See "Setting the media" (☞ P.2-5)

3

Test drawing

See "Test drawing" (☞ P.2-9)

4

Execution of head
cleaning

See "Execution of head cleaning"
(☞ P.2-10)

5

Drawing an image from
source data

See "Drawing an image from source
data" (☞ P.2-12)

6

Turning the power OFF

See "Turning the power OFF"
(☞ P.2-15)

2

Basic Operations

Turning the power ON




- When the power is turned ON, the Y-bar moves. To avoid injuries, keep your hands away from the table.
- If the temperature in the hot water device has not reached the predetermined value, a message is indicated. In this case, drawing is disabled. It is enabled when the error indication has disappeared.

1

Press the power button

- Press the power button n the left side of the operation panel to light.
- When the main power switch is not set to ON, the power is not connected even if the power button is pressed. If the lamp does not light even if the button is pressed, check the main power switch on rear side of this unit.
- When the power is switched on, the LCD displays the firmware version number.
- Initial operation is started.

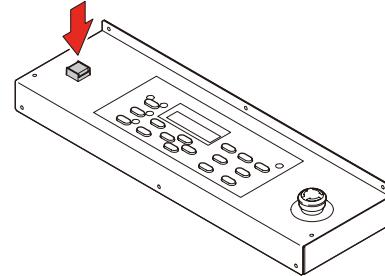

JF - 1631 start-up
ver. * . * *

PLEASE WAIT

2

Local Mode starts

<LOCAL>

2 . 5mm

3

Turn the power of connected computer ON.

Setting the media

(Important!)


- If, within the absorption area, there are suction holes not closed by the media, close such suction holes placing thin sheet form material such as paper, film or tape.
- The peripheral parts of the media could roll up due to heat. Fix the media supplementarily using adhesive tapes, etc.
- Guide holes are provided at the edges (3 edges) of the table to insert the screw, etc. available in the market. Use them as the guides for setting the media straight. (☞ P.3-19)

Setting the media on JF-1610

1

Switch over the suction valve at the front of the table adjusting with the size of the media to be set.

- The valve is opened when the knob is turned vertically and closed when it is turned horizontally.

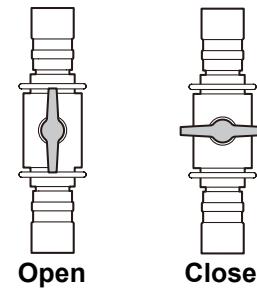


2

Pressing the **VACUUM/BLOW key, put on the “VACUUM” lamp.**


3

Pressing the **ON/OFF key, absorb the media to the table.**


- Turn ON/OFF the vacuum pressing the **ON/OFF** key.
- The absorption area will become as shown in the figure on the right.
- When you want to change the point of origin, please refer to P.3-2.

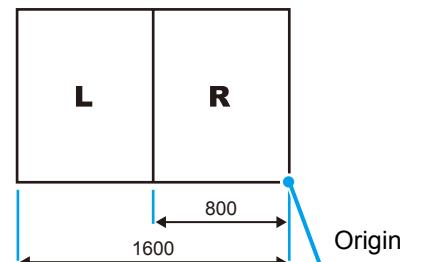

Absorption area

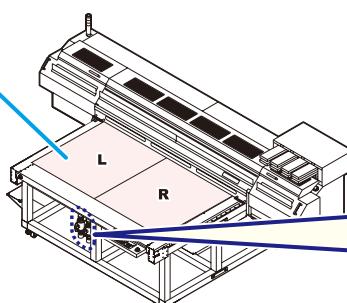

Suction valve

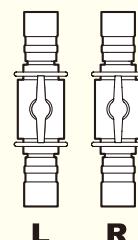

2


Basic Operations

Setting the media on JF-1631

1

Switch over the suction valve at the front of the table adjusting with the size of the media to be set.

- The valve is opened when the knob is turned vertically and closed when it is turned horizontally.

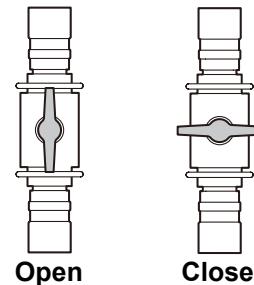

2

Pressing the **VACUUM/BLOW** key, put on the “VACUUM” lamp.


3

Pressing the **FRONT** or **REAR** keys, absorb the media to the table.

FRONT key : Turns ON/OFF the vacuum of the absorption area starting with [F].


REAR key : Turns ON/OFF the vacuum of the absorption area starting with [R].

- As for the details of the absorption area, please refer to P.2-7 .

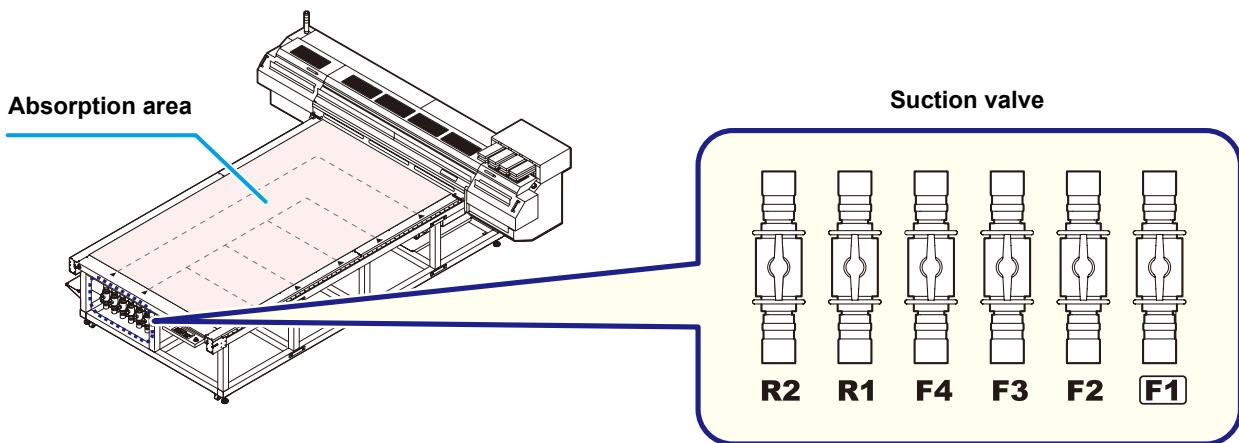

On the absorption area

The absorption area of JF-1631 is shown in the following figure. Pressing **FRONT** or **REAR** key, set the optimum absorption area for the media to be set.

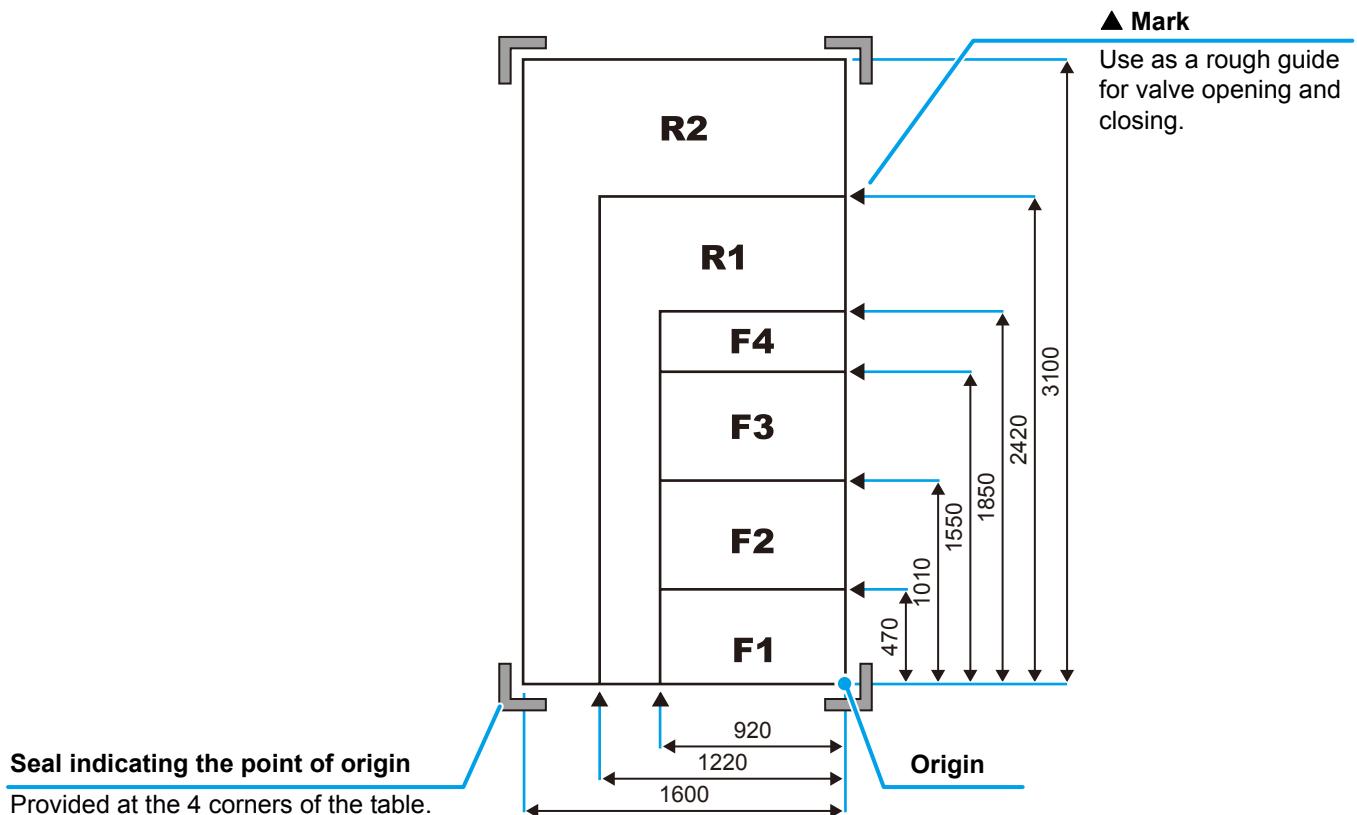

- When changing the point of origin, please refer to P.3-2 .

Size of the media and switch-over of the valve


When using fixed size media, set the suction valve and vacuum as follows:

Media size	Suction valve						Vacuum setting	
	F1	F2	F3	F4	R1	R2	FRONT	REAR
3' x 6' Board	Open	Open	Open	Open	Close	Close	ON	OFF
4' x 8' Board	Open	Open	Open	Open	Open	Close	ON	ON
5' x 10' Board	Open	Open	Open	Open	Open	Open	ON	ON

- When using the media other than the fixed length, open the suction valve corresponding to the larger area than the size of the media.

Using of Roll Sheet

Set the roll sheet on the roll sheet hunger on the back face of this device.

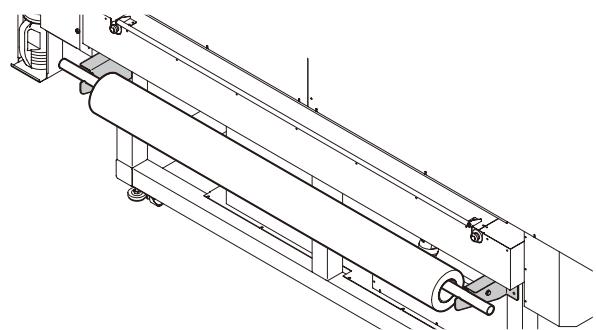

Test drawing

Make test drawing to check whether there is nozzle clogging or other drawing failures (such as wearing or missing).

Execution of test drawing



- Printing is disabled when the following messages are displayed. It is enabled when the message has disappeared.
“WATER NOT READY” : The temperature of water in the hot water device has not reached the predetermined value.
“UV NOT READY” : UV irradiation device is not ready.

Check before starting test drawing	• Is media set ? (P.2-5)	• Is origin point set ?
	• Is head gap value registered ? (P.3-7)	

1

Press the **TEST** key in the local mode.

TEST DRAW
NOZZLE CHK
<ENT>

2

Press **▲** or **▼** key to select “NOZZLE CHK”.

- Select “HARDEN CHK” to confirm that UV ink has not been cured. (P.4-42)

3

Press the **ENTER** key.

* * TEST DRAW * *

- Test drawing is started.

4

Test drawing ends

- Returned to the local mode.
- Execute operation of PXX, when evacuation of the Y-bar is required.

5

Check result of drawing

- When the result is normal, finish the operation.
- When the result is abnormal, execute head cleaning. (P.2-10)

2

Basic Operations

Normal pattern	Abnormal patterns		
	Nozzle drop out	Nozzle missing	Deflection
	 Many lines are missing.	 The lines are missing as if the teeth are lost.	 The distance between the lines is narrowing or double lines are formed.

Execution of head cleaning

When a correct pattern is not obtained in the test drawing, perform the head-cleaning. As for the head cleaning, the following 3 types are available.

normal	To be used if ten odd numbers of the lines are missing when the test pattern is made. Suction and wiping with the cap will be performed.	 P.2-10
wiping	To be used if several numbers of the lines are missing when the test pattern is made. Only the wiping with the wiper will be performed.	 P.2-11
hard	To be used when the missing of the lines is not improved with the "Normal" cleaning. To be absorbed strongly with the cap.	 P.2-10



- When the head cleaning is performed, the UV lamp will automatically be put off. (Around 5 minutes will be required for putting on the light again.)
- When making the test drawing, if the setting is made so that the UV lamp is not put on ( P.3-12), the cleaning will be performed quickly. (However, in the case when the media liable to reject the ink is used, the ink will flow out and checking of the test drawing will become difficult.)

When cleaning with "Normal" or "Hard"

1

Press the **CLEANING** key in the local mode.

CLEANING
TYPE : normal

2

Select the cleaning type with  or  keys, press the **ENTER** key.

CLEANING
TYPE : hard

3

Select the head and set execution/non-execution of cleaning.

CLEANING
HEAD [MCYKKYCM]

- (1) Select the head with  or  keys.
- (2) Select execution/non-execution of the head cleaning with  or  keys.

- Select execution of cleaning for every head.

Execute Cleaning : A color of an ink cartridge being set is displayed.

Not Execute Cleaning: "_" is displayed

CLEANING
HEAD [MC~~Y~~KKYCM]

4

Press the **ENTER** key.

- Cleaning is started.
- When the cleaning is completed, a mode is returned to the local mode.

5

Execute test drawing and check the result of the test drawing.

- Repeat cleaning and test drawing until normal result is obtained.

When cleaning with “Wiping”

1

Press the **CLEANING** key in the local mode.

CLEANING TYPE	: normal
---------------	----------

2

Select wiping with **▲** or **▼** keys and press **ENTER** key.

CLEANING TYPE	: wiping
---------------	----------

3

Select the head and set the execution/non-execution of cleaning.

CLEANING HEAD	[MC _Y KKYCM]
---------------	-------------------------

(1) Select the head with **◀** or **▶** keys.

(2) Select execution/non-execution of the head cleaning with **▲** or **▼** keys.

- Select execution of the head cleaning for all the heads.

Execute cleaning : The color of the ink cartridge which is set is displayed.

Not-execute cleaning : “_” is displayed.

CLEANING HEAD	[MC _K KKYCM]
---------------	-------------------------

4

Press the **ENTER** key.

5

Select the number of time of wiping (1 to 10 times) with **▲** or **▼** keys.

CLEANING WIPE NUM.	: 1
--------------------	-----

6

Press the **ENTER** key.

- The cleaning will be started.
- When the cleaning is completed, the system is turned to the local mode.

7

Execute test drawing and check the result of the test drawing.

- Repeat cleaning and test drawing until normal result is obtained.



- If the test drawing results have not been improved despite of the repeated head cleaning, it is necessary to perform the cleaning of wiper or cap. Please refer to P.4-26 "Cleaning of wiper and cap".
- If the test drawing results have not been improved even after the repeated head cleaning after performing the cleaning of wiper and cap, please re-fill the ink. (P.4-20)

Drawing an image from source data

Starting the drawing operation



- If the UV irradiation device is not ready or the temperature of the water heating system has not reached the predetermined value, a message is displayed. Drawing is not allowed in such cases. When the display is disappeared, drawing can be started.
- Data transmission is allowed even if both errors are displayed. Drawing is started after the display is disappeared.

1

Set the media (☞ P.2-5)

- (1) Open/Close the suction valve adjusting to the media size.
- (2) Pressing the **VACUUM/BLOW** key, put on the VACUUM lamp.
- (3) Pressing the **FRONT** **REAR** keys, absorb the media.
(In the case of JF-1610, press the **ON/OFF** key to absorb the media.)

2

Press the **REMOTE** key in the local mode.

* REMOTE *


2 . 5 mm

- The device goes in the remote mode and data from the computer can be received.
- If the UV lamp is off, it will be lit.

3

Transmit data to be drawn from the computer

- Drawing conditions are displayed.
- As for the data transmission method, see the instruction manual of the output software.

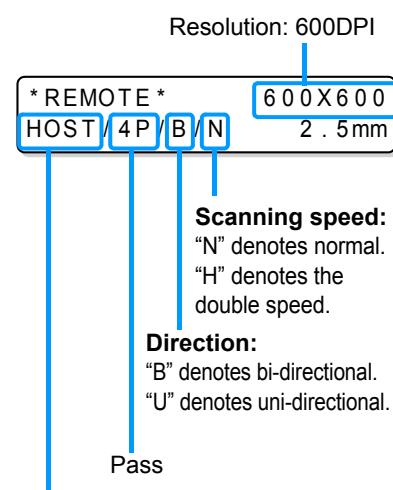

4

Start drawing

- The drawing origin is not changed after completion of the drawing.

5

Taking out the media after completion of drawing

- (1) Press the **VACUUM/BLOW** key to light the BLOW lamp.
- (2) "Evacuation of Y-bar from the table" (☞ P.2-14) to evacuate the Y-bar out of the table.
- (3) Remove the media.



- During printing, media may be heated by the UV lamp and raised, causing drawing to be interrupted. In this case, set new media and restart drawing.

Interruption of drawing

To interrupt the drawing, stop the drawing operation and erase the received data from the device.

1

Press the **REMOTE** key while drawing.

<LOCAL>

2 . 5 mm

- Drawing operation stops.
- When data is transmitted from the computer, the computer stops transmission of data.

2

Press the **DATACLEAR** key.

DATA CLEAR

<ENT>

3

Press the **ENTER** key.

* * DATA CLEAR * *

- Received data is erased and the device returns to the local mode.

Move the Y-bar

When you wish to check the drawing results etc., you can move the Y-bar.

Set the evacuation position (view position) of the Y-bar in advance.

Setting the view position

1

Press the **FUNCTION** key in the local mode.

FUNCTION
VIEW

<ENT>

2

Press the **ENTER** key.

VIEW
START

<ent>

3

Press the **▼** key.

VIEW
SET VIEW POS

<ent>

4

Press the **ENTER** key.

VIEW
POSITION : * * * * MM

5

Set the moving position by pressing the or keys.

VIEW
POSITION : 500 MM

- If you press key, the Y-bar will move to the back of the table centering the origin of the drawing.
- If you press key, the Y-bar will move to the front of the table centering the origin of the drawing.

6

Press the key.

MOVING NOW
PLEASE WAIT

- The value is set, and the screen returns to Step 2.

Evacuation of Y-bar from the table

Used for evacuating the Y-bar from the table for checking a drawing result and so on.

1

Press the key in the local mode.

FUNCTION
VIEW <ENT>

2

Press the key.

VIEW
START <ent>

3

Press the key.

MOVING NOW
PLEASE WAIT

- The Y-bar moves.

Turning the power OFF

To turn off, check first whether or not there is data received and there remains data that has not yet been output in the device.


1

Turn the power of the connected computer off.

2

Press the power button to cut the power.

- Execute the cool down operation when UV lamp is on.
- The power is cut automatically when the cool down operation is completed.

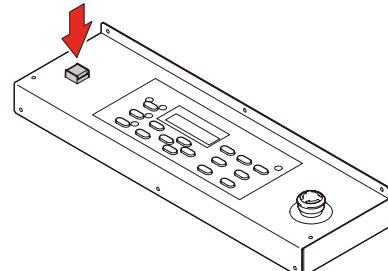

When this device is not used for a long time, execute the following:

- (1) Press the power button to off the lamp.
- (2) Confirm that the cool down operation is completed.
- (3) Turnoff the main power switch on the rear side of this device.
 - Turn off the main power switch after confirming completion of the cool down operation.

2

Basic Operations

CHAPTER 3

Useful Function




This chapter describes the setting procedures of each functions, and how to operate the plotter usefully.

Changing origin	3-2
Changing origin with JOG keys	3-2
Changing origin with FUNCTION menu	3-3
Registering the thickness of the media.....	3-4
Register the thickness of the media manually	3-4
Measuring the thickness of the media automatically ..	3-5
Adjusting head gap	3-6
Adjust head gap with the UP or DOWN keys	3-6
Registering Head gap value	3-7
Turing the UV lamp off.....	3-8
Other useful functions	3-9
Data clear	3-9
Displaying information of this device	3-9
Each setting	3-10
Setting the print method	3-10
Setting the light intensity of the UV lamp	3-12
Setting of priority	3-13
Changing language display on the screen	3-14
Output the setting list	3-15
Displaying machine information of this device	3-16
Other useful settings	3-17
Initializing set contents	3-18
For setting media correctly	3-19


Changing origin

The default origin position can be changed.
There are following 2 changing methods.

Changing with the JOG keys

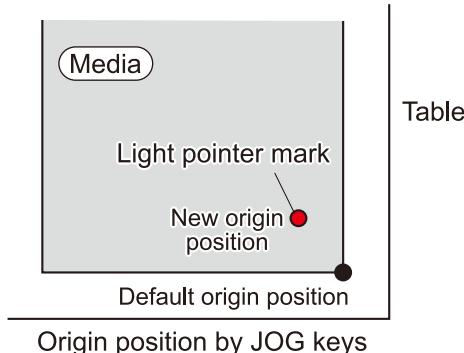

Changing with the "ORIGIN" in the FUNCTION menu

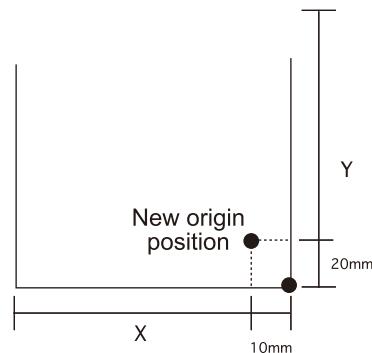

Changing origin with JOG keys

1

Press the keys in the local mode.

ORIGIN SET UP
0.0

- The origin setting mode starts
- A red light pointer mark [●] is projected on the table or the media.

2

Move the light pointer mark by pressing the keys.

ORIGIN SET UP
500.0 600.0

Origin position (back and forth) Origin position (right and left)

3

Press the key when the drawing origin is determined.

* * ORIGIN * *

- The origin is changed.

(Important!)

- The setting value for the origin set with the JOG keys is cleared by cutting the power.

Changing origin with FUNCTION menu

To precisely set the origin of coordinates, set its X- and Y- coordinates from the FUNCTION menu. This setting value becomes the origin position (0, 0).

1

Press the **FUNCTION key in the local mode.**

FUNCTION
VIEW <ENT>

2

Select the [ORIGIN] by pressing the **▲ or **▼** key.**

FUNCTION
ORIGIN <ENT>

3

Press the **ENTER key twice.**

ORIGIN 500mm
X OFFS : mm

- X-axis offset value setting screen is displayed.

4

Input value by pressing the **▲ or **▼** keys.**

ORIGIN 490mm
X OFFS : 10mm

- Setting the origin position of X-axis.
- The value in the parentheses indicates the distance from the origin to the maximum effective area.

5

Press the **ENTER key.**

ORIGIN
SELCT:X OFFSE

6

Select the [Y OFFSET] by pressing the **▲ or **▼** keys.**

ORIGIN
SELCT:Y OFFSE

7

Press the **ENTER key.**

ORIGIN 600mm
Y OFFS : mm

8

Input value by pressing the **▲ or **▼** keys.**

ORIGIN 590mm
Y OFFS : 10mm

- Setting the origin position of Y-axis.

9

Press the **ENTER key.**

ORIGIN
SELCT:X OFFSE

10

Press the **END key twice to finish.**

Important!

- The set value is not cleared by cutting the power.

3**Useful Function**

Registering the thickness of the media

Register the thickness of loading media.

There are two ways to register the thickness, one is to register manually and the other is to measure the thickness automatically.

Register the thickness of the media manually

1

Press the **FUNCTION** key in the local mode.

FUNCTION
VIEW <ENT>

2

Select the [HEAD HEIGHT] by pressing the **▲** or **▼** key.

FUNCTION
HEAD HEIGHT <ENT>

3

Press the **ENTER** key.

HEAD HEIGHT
MEDIA THICKNESS<ent>

4

Press the **ENTER** key.

MEDIA THICKNESS
2.5 mm

5

Press the **▲** or **▼** key to enter the thickness of loading media.

MEDIA THICKNESS
10.5 mm

- Set value : 0.0 to 50.0mm

6

Press the **ENTER** key.

FUNCTION
HEAD HEIGHT <ENT>

7

Press the **END** key to finish.

Measuring the thickness of the media automatically

1

Press the **FUNCTION** key in the local mode.

FUNCTION
VIEW <ENT>

2

Select the [HEAD HEIGHT] by pressing the **▲** or **▼** key.

FUNCTION
HEAD HEIGHT <ENT>

3

Press the **ENTER** key.

HEAD HEIGHT
MEDIA THICKNESS<ent>

4

Select the [THICKNESS CHECK] by pressing the **▲** or **▼** key.

HEAD HEIGHT
THICKNESS CHECK<ent>

5

Press the **ENTER** key.

THICKNESS CHECK
MOVING NOW

- In preparation for the measuring, the Y-bar will move up to the top position.
- The carriage will move to the drawing area.

THICKNESS CHECK
CHECK START : ent

6

Press the **ENTER** key.

THICKNESS CHECK
* * CHECKING * *

- The media thickness will be measured automatically.
- The measured thickness will be displayed.
- The carriage will move to the evacuation position and the screen returns to the one displayed in Step 4.

THICKNESS CHECK
3 . 0mm : ent

HEAD HEIGHT
MEDIA THICKNESS<ent>

7

Press the **END** key twice to finish.

Adjusting head gap

The value of gap between the head and the media is adjusted.

There are 2 setting methods, namely a method of selecting with keys and a method of setting in the "HEADGAP" of the FUNCTION menu.

Adjust head gap with the **UP** or **DOWN** keys

1

Press the **UP** or **DOWN** key.

ORIGIN SET UP
Z HEIGHT = 45.0

2

Adjust with pressing the
UP or **DOWN** key.

ORIGIN SET UP
* * Z HEIGHT * *

3

Press the **ENTER** key.

ORIGIN SET UP
HEAD GAP = 1.2

Registering Head gap value

Inputting the value of gap between the head and the media. The registered value is reflected on all media.

1

Press the **FUNCTION** key in the local mode.

FUNCTION
VIEW <ENT>

2

Select the [HEAD HEIGHT] by pressing the **▲** or **▼** key.

FUNCTION
HEAD HEIGHT <ENT>

3

Press the **ENTER** key.

HEAD HEIGHT
MEDIA THICKNESS<ent>

4

Select the [HEAD GAP] by pressing the **▲** or **▼** key.

HEAD HEIGHT
HEAD GAP <ent>

5

Press the **ENTER** key.

HEAD GAP
2.5mm

6

Input the head gap value by pressing the **▲** or **▼** key.

HEAD GAP
4.0mm

- Set value : 1.0 to 5.0mm

7

Press the **ENTER** key.

FUNCTION
HEAD GAP <ENT>

8

Press the **END** key to finish.



- If a correct value is not set to the head gap value, the print quality may be deteriorated because of dropping of large ink droplets on the media at drawing

Turing the UV lamp off

The UV lamp is turned off automatically in 30 minutes after finishing the drawing (default). If turning off of the UV lamp immediately is required, execute the following operation.

1

Press the **FUNCTION** key in the local mode.

FUNCTION
VIEW

<ENT>

2

Select the [UV LAMP OFF] by pressing the **▲** or **▼** key.

FUNCTION
UV LAMP OFF

<ENT>

3

Press the **ENTER** key.

UV LAMP OFF
START

<ent>

4

Press the **ENTER** key.

- Turning off operation of the UV lamp is started. (Drawing is disabled)
- When turning off operation completes, indication in the right is displayed.
- The UV lamp is cooled. (Approx. 5 minutes)
- Orange part of the Indicator lights during the UV lamp cooling.

UV LAMP OFF
COMPLETED

Other useful functions

Data clear

Erase the data not required for this device with the following operation.

1

Press the **DATACLEAR** key in the local mode.

DATA CLEAR

<ENT>

2

Press the **ENTER** key.

** DATA CLEAR **

- The data is erased.

Displaying information of this device

1

Make sure that the local mode is displayed.

<LOCAL>

2 . 5 mm

2

The information is displayed sequentially by pressing the **ENTER** key.

- The following information are displayed.
Remaining amount of ink/ Version information/
Command information/ Irradiation time of the UV lamp
Remaining amount of ink

Remaining amount of ink

<LOCAL> KCMY cmW-
REMAIN 9 9 9 9 9 9 -

Version/ Command information

JF-16 ** V1 . 00
MRL-IIB V1 . 20

Irradiation time of the UV lamp

<LOCAL>
USED TIME 600 , 600

3

Press the **ENTER** key to return to the local mode

<LOCAL>

2 . 5 mm



- Information on your machine type can be confirmed in P.3-16 "Displaying machine information of this device".
- As for the details on irradiation time of the UV lamp, see P.4-38 "Checking UV lamp irradiation duration".

3

Useful Function

Each setting

Setting the print method

Settings on printing

1

Press the **FUNCTION** key in the local mode.

FUNCTION
VIEW

<ENT>

2

Select the [SET UP] by pressing the **▲** or **▼** key.

FUNCTION
SET UP

<ENT>

3

Press the **ENTER** key.

SET UP
FEED COMP.

<ent>

4

Select the [PRINT MODE] by pressing the **▲** or **▼** key.

SET UP
PRINT MODE

<ent>

5

Press the **ENTER** key.

SET UP
QUALITY

<ent>

6

Select an item to be set by pressing the **▲** or **▼** key.

- As for setting items, see the next page.

7

Press the **ENTER** key.

8

Select a value by pressing the **▲** or **▼** key.

- As for setting values, see the next page.

9

Press the **ENTER** key.

10

Press the **END** key three times to finish.



- Set value remains after cutting the power.

Item	Value	Outline
QUALITY	STANDARD	Standard drawing quality
	FINE	High quality drawing (drawing speed is slower)
	FAST	High speed drawing (quality is inferior)
SCAN DIR	BI-DIR	Drawing is conducted in both directions when the head moves on the media at drawing. (Quicker drawing compared to "UNI-DIRN")
	UNI-DIR	Drawing is conducted in one direction when the head moves on the media at drawing. (Higher quality drawing.)
	UNI-DIR UV1	When drawing is conducted, only the right-hand side UV lamp is used.
LOGICAL Seek	ON	The head moves according to the data width to be drawn.
	OFF	The head moves whole table width at drawing.

Setting the light intensity of the UV lamp

The light intensity of the UV lamp may be set in 3 stages.

This setting is made when the media vulnerable to the heat is used or when the test drawing is made in which the lighting of the UV lamps is not desired.

HIGH	The UV lamp is lit with 100% of its light intensity.
STANDARD	The UV lamp is lit with 60% of its light intensity.
LOW	The UV lamp is lit with 40% of its light intensity.
NONE	The UV lamp is not lit while drawing is being performed.
NOPRINT	The drawing is not performed and only the UV lamp is lit. Use when drawing is performed without the UV lamp is lit etc., and when you wish to make it cure afterward. (Normally, this setting will not be made.)

1

Press the **FUNCTION** key in the local mode.

FUNCTION
VIEW <ENT>

2

Select the [SET UP] by pressing the **▲** or **▼** key.

FUNCTION
SET UP <ENT>

3

Press the **ENTER** key.

SET UP
FEED COMP. <ent>

4

Select the [UV LEVEL] by pressing the **▲** or **▼** key.

SET UP
UV LEVEL <ent>

5

Press the **ENTER** key.

SET UP
UV LEVEL : HIGH

6

Press **▲** or **▼** keys to select light intensity.

- Set values :HIGH , STANDARD , LOW , NONE , NOPRINT

7

Press the **ENTER** key.

8

Press the **END** key twice to finish



- The light intensity of the UV lamp may be set on the RIP side, when performing the remote drawing. For details, please refer to the Instruction Manual of your RIP.

Setting of priority

Priority of setting of this device or that of the computer on the following items respectively is selected.
Items to be selected : Drawing type/ Over-painting

1

Press the **FUNCTION** key in the local mode.

FUNCTION	VIEW	<ENT>
----------	------	-------

2

Press the [SET UP] key by pressing the **▲** or **▼** key.

FUNCTION	SET UP	<ENT>
----------	--------	-------

3

Press the **ENTER** key.

SET UP	FEED COMP.	<ent>
--------	------------	-------

4

Select the [PRIORITY] by pressing the **▲** or **▼** key.

SET UP	PRIORITY .	<ent>
--------	------------	-------

5

Press the **ENTER** key.

SET UP	PRINT MODE	:HOST
--------	------------	-------

- Drawing type setting screen is displayed.

6

Select the “HOST” or the “PLOT” by pressing the **▲** or **▼** key.

SET UP	PRINT MODE	:PLOT
--------	------------	-------

- HOST : Setting of the computer has the priority.
- PLOT : Setting of this device has the priority.

7

Press the **ENTER** key.

8

Set other items with the same manner as 6, 7.

9

Press the **END** key twice to finish



- Set value remains after cutting the power.

Changing language display on the screen

Display language can be selected between Japanese and English.

1

Press the **FUNCTION** key in the local mode.

FUNCTION
VIEW <ENT>

2

Select the [DISPLAY] by pressing the **▲** or **▼** key.

FUNCTION
DISPLAY <ENT>

3

Press the **ENTER** key.

DISPLAY
Japanese <ent>

4

Select a language by pressing the **▲** or **▼** key.

DISPLAY
English <ent>

- Default is “English.”

5

Press the **ENTER** key.

6

Press the **END** key to finish.



- Set value remains after cutting the power.

Output the setting list

Keep the list for customer's record or send it by the fax at inquiry on the maintenance.

1

Set a larger media than the legal size.

(P.2-5)

2

Press the **FUNCTION key in the local mode.**

FUNCTION	<ENT>
VIEW	

3

Select the [MAINTENANCE] by pressing the **▲ or **▼** key.**

FUNCTION	<ENT>
MAINTENANCE	

4

Press the **ENTER key.**

MAINTENANCE	<ent>
STATION	

5

Select the [LIST] by pressing the **▲ or **▼** key.**

MAINTENANCE	<ent>
LIST	

6

Press the **ENTER key.**

- Output of the setting list starts.

MAINTENANCE	
PRINTING	

7

Press the **END key to finish.**



- Set value remains after cutting the power.

Displaying machine information of this device

1

Press the **FUNCTION** key in the local mode.

FUNCTION
VIEW <ENT>

2

Select the [MAINTENANCE] by pressing the **▲** or **▼** key.

FUNCTION
MAINTENANCE <ENT>

3

Press the **ENTER** key.

MAINTENANCE
STATION <ent>

4

Select the [INFORMATION] by pressing the **▲** or **▼** key.

MAINTENANCE
INFORMATION <ent>

5

Press the **ENTER** key.

MAINTENANCE
VERSION <ent>

6

Select information to be displayed by pressing the **▲** or **▼** key, and press the **ENTER** key.

- The following 2 information can be displayed.
FW version of this device Serial No.

Version information

MAINTENANCE
MAIN Ver 1.00

Serial No. information

MAINTENANCE
S/N 00000000

7

Press the **END** key three times to finish.

Other useful settings

Change settings according to need.

1

Press the **FUNCTION** key in the local mode.

FUNCTION
VIEW

<ENT>

2

Select the [SET UP] by pressing the **▲** or **▼** key.

FUNCTION
SET UP

<ENT>

3

Press the **ENTER** key.

SET UP
FEED COMP .

<ent>

4

Select an item to be set by pressing the **▲** or **▼** key , and press the **ENTER** key.

- Select with reference to the Table of Setting below.

5

Select a value to be set by pressing the **▲** or **▼** key , and press the **ENTER** key.

- Select with reference to the Table of Setting below.

6

Press the **END** key twice to finish.



- Set value remains after cutting the power.

Table of Setting

Item	Value	Outline
INK LAYERS	1 to 9 times	Set the number of times for over painting. Finer drawing can be obtained by conducting the over painting.
REFRESH	Level 0 to 3	Set the refreshing revel for preventing the head from clogging in a dusty environment. The larger level number indicates more frequent refreshing times. Refreshing is not conducted at level=0.
MM/INCH	Millimeter	A unit of set value indicated on the screen is displayed with Millimeter.
	Inch	A unit of set value indicated on the screen is displayed with Inch.
UV SCAN ADD	1 to 9 times	Designates the number of times of additional scanning of UV to cure the edge parts of the image with UV irradiation after completion of the drawing.

Initializing set contents

1

Press the **FUNCTION** key in the local mode.

FUNCTION	<ENT>
VIEW	

2

Select the [SET UP] by pressing the **▲** or **▼** key.

FUNCTION	<ENT>
SET UP	

3

Press the **ENTER** key.

SET UP	
FEED COMP.	<ent>

4

Select the [SETUP RESET] by pressing the **▲** or **▼** key.

SET UP	
SETUP RESET	<ent>

5

Press the **ENTER** key.

SET UP	
INITIALIZE OK?	:ent

6

Press the **ENTER** key.

- Resetting the setup.

7

Press the **END** key twice to finish.


(Important!)

- In the [SETUP RESET], resetting is allowed only on contents changed in the SETTING ITEM.

For setting media correctly

Guide holes for inserting commercial screws are placed on each end (3 sides) of the table.


- Fix a guide for placing the media on the correct position using those holes.
- For JF-1610, the guide holes are not arranged in the front side.

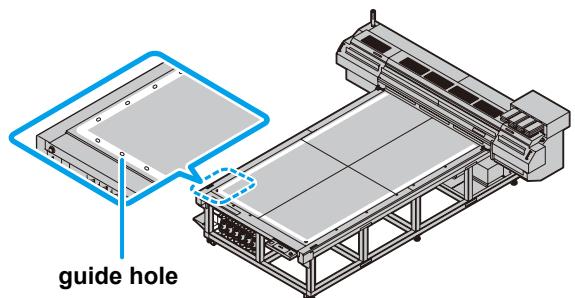


(Important!) • Select a material for the guide which is not thicker than the media.

Arrangement of guide holes


When you prepare the guide for setting the media, please use the following sizes as reference.

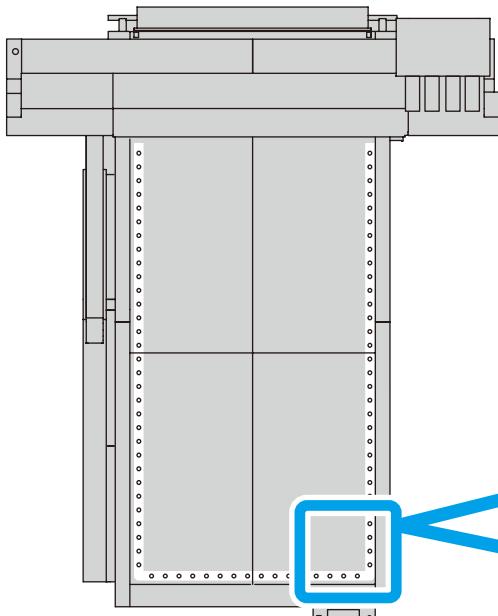

In the case of JF-1610

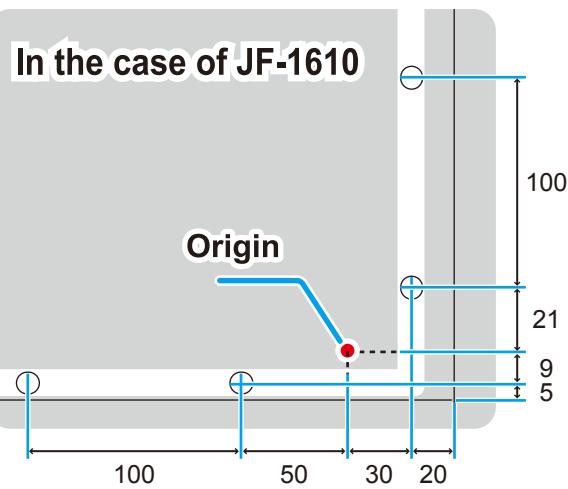

In the case of JF-1631

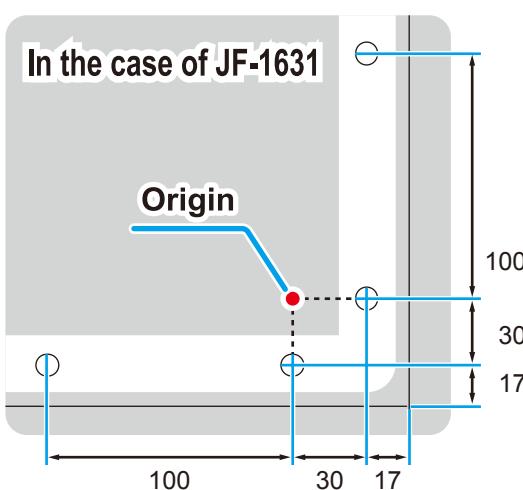

- To the guide hole, you can insert a screw of M5.



CHAPTER 4

Daily Maintenance



Items required for using this unit conveniently, such as an ink replacing method or a cleaning manner, are described.

Routine maintenance.....	4-2	In case defective printing is not resolved	4-20
When the device is left unused for a long period of time	4-2	Filling the ink	4-20
Notes on cleaning	4-2	Regular maintenance for white ink	4-22
Maintenance of frame component	4-3	Head maintenance function	4-24
Ink cartridge.....	4-4	Special refresh	4-25
Replacing with a new ink cartridge	4-4	Cleaning of wiper and cap	4-26
Ink cartridge trouble	4-5	Replacing water in water heater tank	4-29
Cleaning flushing BOX	4-6	Replacement method of antifreeze liquid water	4-30
Cleaning the flushing BOX	4-6	Replacing exhaust blower	4-33
Avoiding dripping of ink droplet at printing	4-8	Setting the UV lamp OFF duration.	4-35
Cleaning of the head guard plate	4-8	Cleaning of UV lamp filter	4-36
When the waste ink is pooled up... 4-10		Replacing UV lamp	4-38
Disposing of the ink in the waste ink tank	4-10	Checking UV lamp irradiation duration	4-38
Disposing of the ink in the wiper tank	4-11	Replacing UV lamp	4-38
Replacing the filter of the cooling fan..... 4-12		Resetting UV lamp irradiation duration	4-40
Cleaning nozzle face automatically	4-14	Checking UV ink curing level..... 4-41	
When media thickness is changed 4-15		Adjusting UV light level	4-42
Changing the ink set..... 4-17		Checking method of UV illumination intensity	4-43
Changing the ink set	4-18	Check the UV illumination intensity ..	4-44

Routine maintenance

Be sure to conduct maintenance works for the device depending on operation frequency or periodically so as to use the device for a long time while keeping its drawing accuracy.

When the device is left unused for a long period of time


- Be sure to turn off the main power switch on rear side of the device. (☞ P.2-15)
- Remove the media being set.

Notes on cleaning

- Never disassemble the device. Disassembling the device can result in electric shock hazards and breakage of the device.
- Prevent moisture from entering inside device. If the inner part of the device becomes wet, electric shock hazards and breakage of the device can result.
- Conduct maintenance works after turning off the main power switch and detaching the power cable. If not, unexpected troubles can arise.
- Make maintenance after the UV lamp has been sufficiently cooled, or burn injury may occur.
- Do not use benzine, thinner or chemical agents containing abrasives. Such materials can deteriorate or deform the surface of the cover.
- Do not apply lubricating oil or the like inside the device. Such materials can cause the printer mechanism to fail.

Maintenance of frame component

If the frame components of the device have stained, dampen a piece of soft cloth with water or neutral detergent diluted with water, squeeze it and wipe the frame components clean.

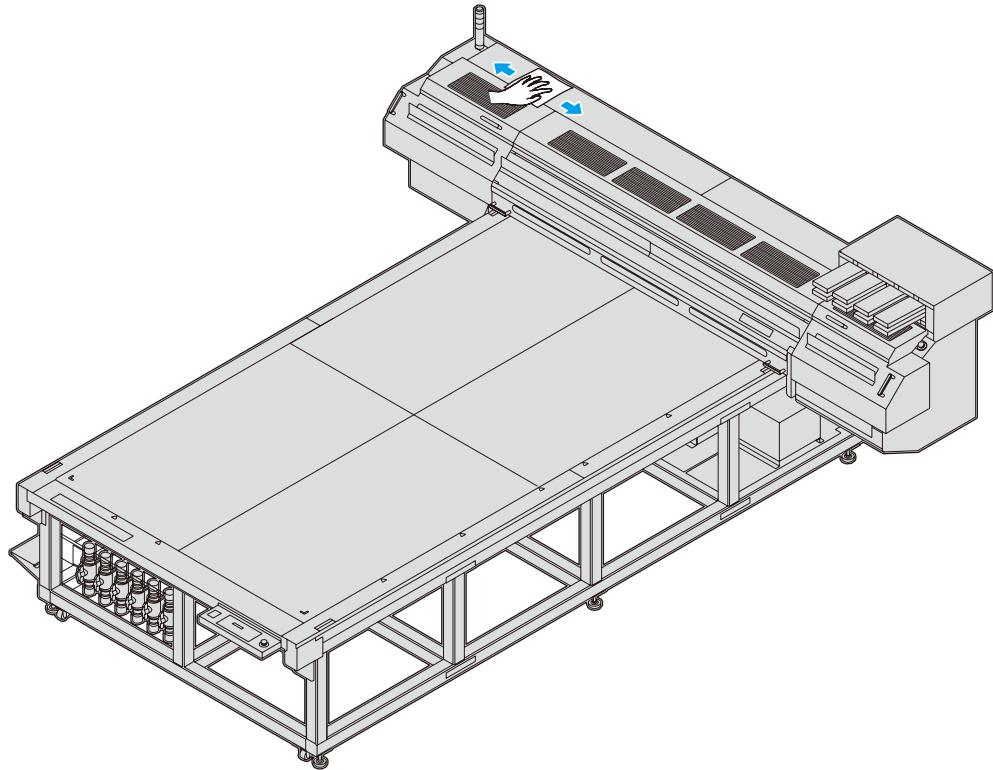

Ink cartridge

Replacing with a new ink cartridge

Replacing of ink cartridges is required in the following cases.


Display on the screen	Outline
<LOCAL> INK NEAR END : M_____	Remaining amount of ink in an ink cartridge is few. <ul style="list-style-type: none">• Drawing can be continued, but running out of ink may occur during the drawing. Earlier replacement is recommended.• The display shown in the left indicates that magenta ink is few.
<LOCAL> INK END : M_____	Ink in an ink cartridge is run out. <ul style="list-style-type: none">• Drawing can not be continued. Replace with new one immediately.• The display shown in the left indicates that magenta ink is run out.

Replacement of ink cartridges

Perform the replacement of the ink cartridges in the local mode or after cutting OFF the power supply (☞ P.2-15).

1


Remove an ink cartridge to be replaced.

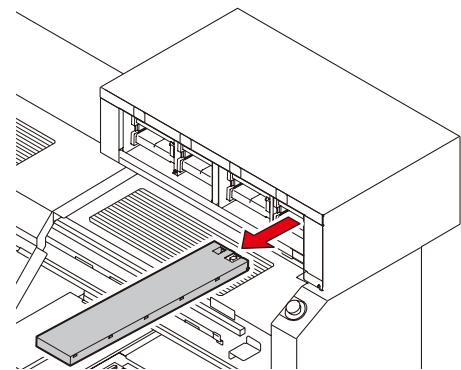

2

Set a new ink cartridge

- As shown in the drawing, set an ink cartridge turning up a side containing the IC chip.
- Ink fill up starts.

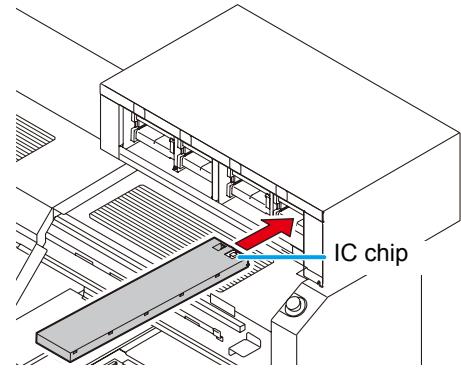

Ink cartridge trouble

When an ink cartridge trouble is detected, a warning message appears and printing, cleaning and all other activities that use ink are deactivated. In this case, replace the ink cartridge in question immediately.



- Do not leave the ink cartridge unplaced for a long time as this will cause the nozzle clogging and the printer must be repaired by a service person.

1

Display the trouble messages on the LCD.

<LOCAL>
Color of INK : MCYKKYCM

2

Press the **ENTER key in the local mode.**

<LOCAL>
REMAIN
9999999-

3

Press the **ENTER key again.**

- The menu will return to the LOCAL mode automatically when no trouble exists.
- If two or more cartridges have a problem, press the **ENTER** key again to display the second cartridge.
- When all problem cartridges are displayed, the menu returns to the LOCAL mode automatically.

<LOCAL>
NO CARTRDG : MCYKKYCM

<LOCAL>
INK NEAREND : MCYKKYCM

<LOCAL>
INK END : MCYKKYCM

<LOCAL>
Expiration : MCYKKYCM

<LOCAL>
NON-ORIGNL : MCYKKYCM

4

Daily Maintenance

Cleaning flushing BOX

Replacing waste ink absorption material in the flushing BOX.

Contents of the cleaning kit	• Maintenance cleaning liquid (SPC-0385)	
• Gloves	• Paper towel	• Goggles



- When conducting the replacing, be sure to wear the supplied goggle and gloves since you may get ink in your eyes.
- Important!** Replace the waste ink absorption material once in a month. Quantity of the waste ink in excess of the absorption capacity of the material could cause the overflow of the ink.


Cleaning the flushing BOX

1

Turn on the power.


2

Remove the cover on the right side of the Y-bar.

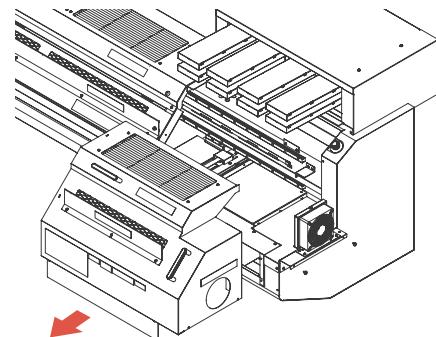


3

Open the front cover.

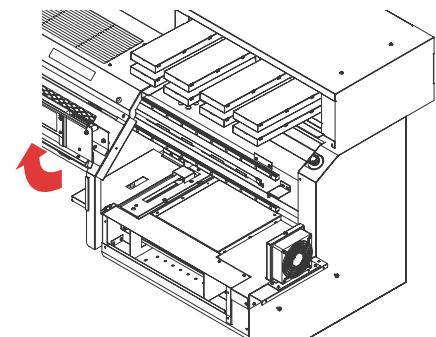


4

Remove the flushing BOX on the right side.

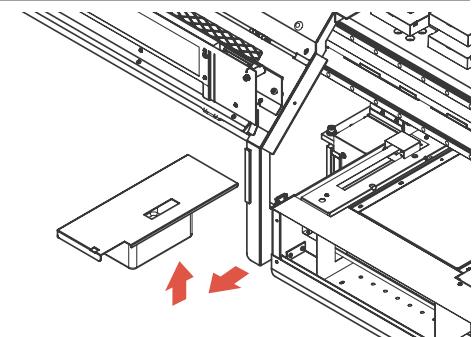


5

Replace the absorption material inside the flushing BOX.

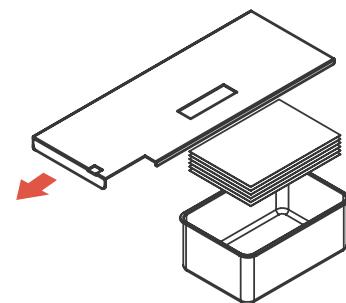**6**

Replace the absorption material inside the flushing BOX on the left side.

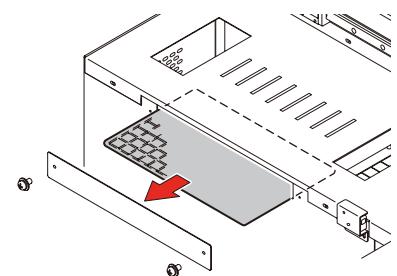**4**

Daily Maintenance

Avoiding dripping of ink droplet at printing

Cleaning of the head guard plate

Ink droplets caused by drawing may appear on a head guard plate on a bottom face of the carriage. As they can cause stain on media by dripping of ink droplets or drawing trouble, conduct cleaning of the bottom face of the carriage periodically.

Articles required for cleaning	• Maintenance cleaning liquid (SPC-0385) • Cleaning Swab (SPC-0384)	• Gloves	• Goggles
---------------------------------------	--	----------	-----------


1

Turn on the power.

- After the initial movement, the system turns to the local mode.


2

Remove the cover on the right side of the Y-bar.

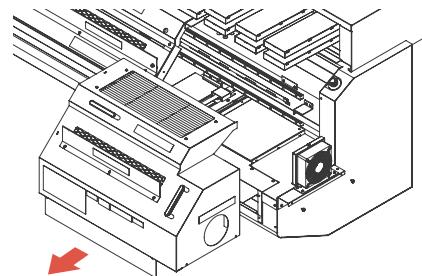


3

Open the front cover.

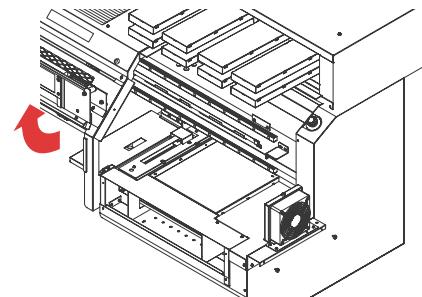

4

Remove the flushing BOX on the right side.

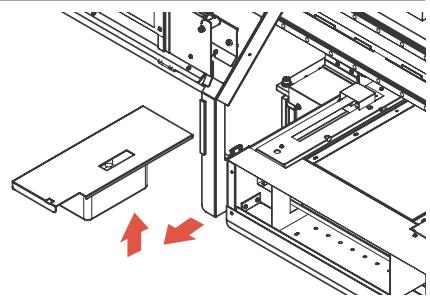

5

Press the **FUNCTION key in the local mode.**

**FUNCTION
VIEW
<ENT>**

6

Select the [MAINTENANCE] with pressing the **▲ or **▼** key.**

**FUNCTION
MAINTENANCE
<ENT>**

7**Press the  key.**MAINTENANCE
STATION

<ent>

8**Press the  key.**STATION
MENT : CARRIAGE out**9****Press the  key.**

- The carriage will automatically move from its waiting position to the location adjacent to the flushing BOX on the right side.
- When the movement is completed, you may now move the carriage manually.

10**Move the carriage manually to the location where the right side flushing BOX was.****11****Instill the cleaning liquid to the swab and clean the side of the head.**

- Avoid wiping the nozzle surface of the head. It would cause the nozzle clogging.
- In case you want to buy special cleaning swab, please contact your sales agent or our branch office.

12**Press the  key after completing the cleaning**

- Initial operation is executed.

13**Press the  key twice to turn the system to the local mode.****4****Daily Maintenance**

When the waste ink is pooled up

Waste ink used for cleaning the heads will gather in the waste ink tank.



- Contact the local dealer or call our branch if you need a spare waste ink tank.
- Prepare a polyethylene tank for emptying waste tank.



- If ink is at discharging, such as at head cleaning, conduct the operation after the discharging is completed.
- Take measures for avoiding spattering of waste ink, such as covering an opening of a tank with tissue paper, at handling the waste ink tank.

When the tank is filled with waste ink, the following error message is displayed.


!WASTE INK TANK
WASTE INK TANK FULL

Disposing of the ink in the waste ink tank

1

Open the waste ink tank cover.

- Open the cover after removing screws fixing both sides of the cover.

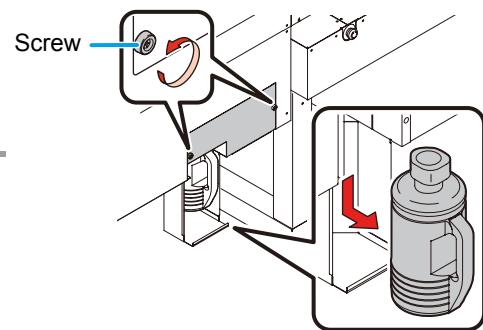

2

Pull out the waste ink tank while pressing it downward.

3


Dispose waste ink into the prepared polyethylene tank.

- Before replacing ink, put paper on the floor. (To prevent the floor from being stained with ink)
- Dispose the waste ink pursuant to the regulations of your district.

4

Set the empty waste ink tank.

- Close the waste ink box cover.
- To avoid hurt hands at the corner of the case, be careful to set the tank.

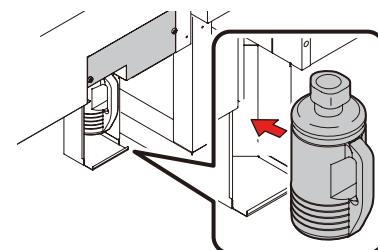


Disposing of the ink in the wiper tank

1

Open the waste ink box cover.


- (1) Remove the screws fixing the both sides of the waste ink BOX cover.
- (2) Open the cover.

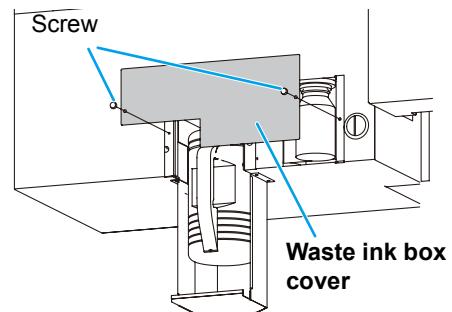

2

Remove the wiper tank and discard the waste ink.

- Discard the waste ink pursuant to your local regulations.

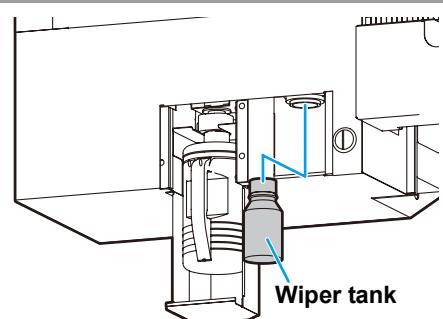

3

Return the wiper tank to the original position and place the waste ink box cover.

4

Daily Maintenance

Replacing the filter of the cooling fan

Replace the filter of the cooling fan periodically. (Once around a month)



- When replacing, be sure to wear the supplied goggles and gloves since you may get ink in your eyes.

Articles required for replacement works	<ul style="list-style-type: none">AlcoholGoggles	<ul style="list-style-type: none">GlovesPhillips screwdriver	<ul style="list-style-type: none">Paper towelFiltering element *1
--	---	---	--

*1. The supplied filtering element contains 24 sheets.

For purchase of the filtering element (Product No.: SPC-0528), please get in touch with your sales agent or our branch office nearest you.

1

Press power supply button to switch OFF the power.

2


Switch OFF the main power switch at the back of the main unit.

- Make sure to check that the UV lamp is extinguished and then turn OFF the main power supply.


3

Remove the front left (right) cover of Y-bar.

- Take off the finger screws (4 pieces) on the cover and remove the cover.

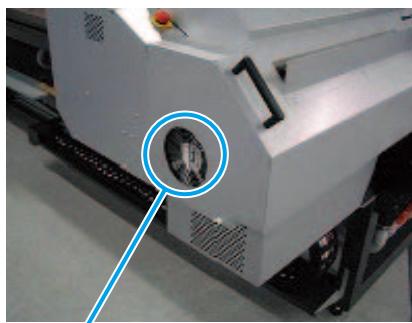

Left side cooling fan

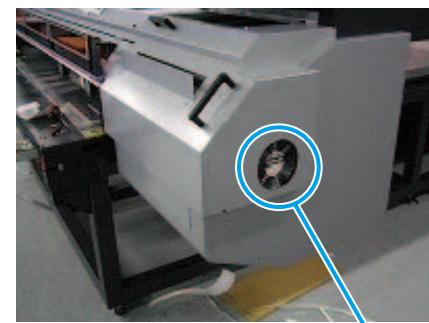


Right side cooling fan

4

Remove the filter Assy.

- Take out the finger screws on the upper part of the cooling fan and remove the filter Assy.

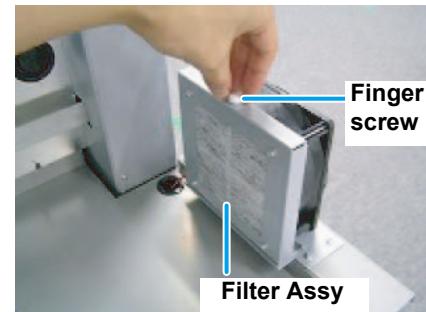

5


Remove screws (4 pieces) of the filter Assy.



6

Replace the filtering element.

- Prepare the new filtering element and replace with it.

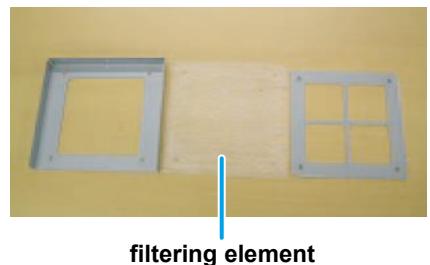


7

Return the filter Assy to the original state.

8

Attach the filter Assy to the cooling fan and tighten the screws of the upper part.

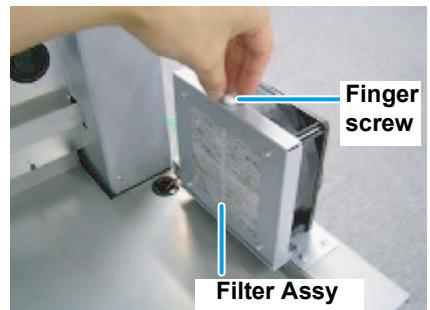

9

Attach the front left (right) cover of Y-bar.

4

Daily Maintenance

Cleaning nozzle face automatically

When predetermined times of printing is completed, nozzle face of the head is cleaned automatically to remove ink droplets stuck to the nozzle face.

1

Select the “PERIODICAL WIPING MODE” of the maintenance menu.

- (1) Press the **FUNCTION** key in the local mode.
- (2) Select the [MAINTENANCE] by pressing the **▲** or **▼** key, and press the **ENTER** key.
- (3) Select the [INT. WIPING] by pressing the **▲** or **▼** key.
- (4) Press the **ENTER** key.

2

Set the number of scanning times
(OFF , 0~255) by pressing the
▲ or **▼** key.

INT . WIPING
PRINT COUNT = 10

- Periodical wiping is not executed when the number is set to “0”.

3

Press the **ENTER** key

MAINTENANCE
INT . WIPING °<ent>

4

Press the **END** key twice to finish.


Important!

- When the setting of the UV irradiation is “ON”, the UV lamp will be turned off automatically before conducting the periodical wiping and when the wiping is completed, the UV lamp will be automatically put on.

When media thickness is changed

Adjust the ink drop position in drawing by the following operations so as to obtain proper drawing performance when the media thickness is changed in use.

Samples of pattern drawn

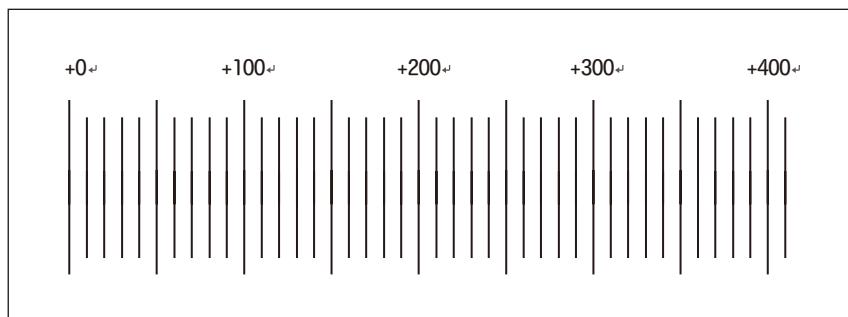

1

Set a media and the home position for drawing.

- A media of 100 x 300mm large at least is required for drawing patterns.

2

Select the “PRN.adjust MODE” of the maintenance menu.

- (1) Press the **FUNCTION** key in the local mode.
- (2) Select the [MAINTENANCE] by pressing **▲** or **▼** key, and press the **ENTER** key.
- (3) Select the [PRN.adjust] by pressing **▲** or **▼** key.
- (4) Press the **ENTER** key twice.

3

Select the drawing resolution by pressing **▲** or **▼**.

PRN . adjust
DPI : 300

- Setting value : 300,600,1200 DPI

4

Press the **ENTER** key.

PRN . adjust
MODE : normal

5

Select the pattern drawing speed by pressing **▲** or **▼**.

PRN . adjust
MODE : high

- Setting value : normal , high

6

Press the **ENTER** key twice.

- Start pattern drawing.


4

Daily Maintenance

7

Check the position where the drawn pattern is in one straight line.

- In the case of the figure in the right, you will notice that a straight line is formed at the point +140.

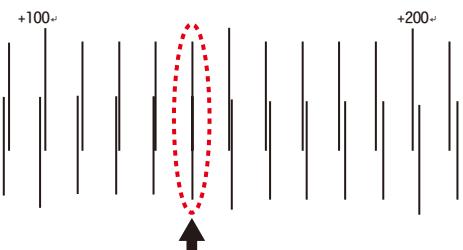

8

Adjust it by pressing or .

PRN . adjust
300 dpi NORMAL : 0

- Setting value : 0 to 400
- **When there is no pattern forming a straight line between 0 and 400**
(1) Once again, perform the checking of the head gap (P.3-6).
(2) Perform the procedures from the Step 1.

9

Press the key.

PRN . adjust
DPI : 300

10

Press the key three times to finish.

Changing the ink set

The standard ink set of this machine consists of 4 colors (Magenta, Cyan, Yellow, Black) and is changeable to the following ink sets according to user's purpose

Available Ink Sets

The number of colors	Ink slot No.							
	1	2	3	4	5	6	7	8
4 colors	M (Magenta)	C (Cyan)	Y (Yellow)	K (Black)	K (Black)	Y (Yellow)	C (Cyan)	M (Magenta)
	K (Black)	Y (Yellow)	C (Cyan)	M (Magenta)	M (Magenta)	C (Cyan)	Y (Yellow)	K (Black)
6 colors	M (Magenta)	C (Cyan)	Y (Yellow)	K (Black)	m (Light magenta)	c (Light cyan)	—	—
7 colors	M (Magenta)	C (Cyan)	Y (Yellow)	K (Black)	m (Light magenta)	c (Light cyan)	W (White)	—
	M (Magenta)	C (Cyan)	Y (Yellow)	K (Black)	m (Light magenta)	c (Light cyan)	S (Special color 1)	—
	M (Magenta)	C (Cyan)	Y (Yellow)	K (Black)	m (Light magenta)	c (Light cyan)	Cl (Clear coat)	—
8 colors	M (Magenta)	C (Cyan)	Y (Yellow)	K (Black)	m (Light magenta)	c (Light cyan)	W (White)	S (Special color 1)
	M (Magenta)	C (Cyan)	Y (Yellow)	K (Black)	m (Light magenta)	c (Light cyan)	S (Special color 1)	s (Special color 2)
	M (Magenta)	C (Cyan)	Y (Yellow)	K (Black)	m (Light magenta)	c (Light cyan)	W (White)	Cl (Clear coat)
	M (Magenta)	C (Cyan)	Y (Yellow)	K (Black)	m (Light magenta)	c (Light cyan)	Cl (Clear coat)	Cl (Clear coat)



- For replacement of the ink set, the cleaning cartridge (SPC-0371FS) is required.
- Don't turn the power OFF while changing the ink set, otherwise changing of the ink set could not be performed.
- Set the ink cartridge containing sufficient quantity of ink. If it does not contain sufficient quantity of ink, changing of the ink set could not be performed properly because of the ink fill up abnormality.
- Check the capacity of waste ink tank. If the tank is filled with the waste ink, dispose it before performing this procedure. (☞ P.4-10)

Ink Set Changing Flow

Select the "INKSET" of maintenance menu.

Operate according to the instruction shown on the display.

- Check the ink currently set in this machine, and then indicate the set of the inserting/removing of ink cartridge or cleaning tools on the display.
Operate according to the guide on the display.

Changing the ink set

Ink set changing procedures are described below.

Example) : When "4 colors ink set" is changed to "6 colors ink set",

1

Select the "INKSET MODE" of the maintenance menu.

- (1) Press the **FUNCTION** key in the local mode.
- (2) Select the [MAINTENANCE] by pressing **▲** or **▼** key, and press the **ENTER** key.
- (3) Select the [INKSET] by pressing **▲** or **▼** key.
- (4) Press the **ENTER** key twice.

2

Select the ink set to change by pressing **▲** or **▼**.

(Example : For the 6 colors ink set)

INKSET

[MCYKKYCM]

3

Press the **ENTER** key.

INKSET

SET UP OK?

: ent

4

Press the **ENTER** key.

INKSET : * * * * KYCM

REMOVE CARTRIDGE

5

Remove the ink cartridge indicated on the display.

WASHING

PLEASE WAIT

6

Set a clean tool.


INKSET : * * * * KYCM
SET CLEAN TOOL



INKSET : * * * * KYCM
REMOVE TOOL

7

Remove the clean tool.

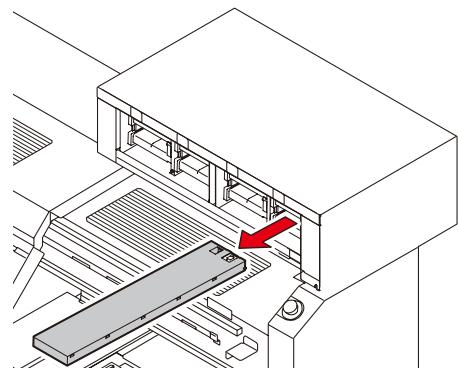

8

Set the ink color cartridge indicated on the display when the display shown on the right is indicated.

INKSET : * * * * mc * *
SET CARTRIDGE

9

Press the **ENTER** key.

- Ink charging starts
- It returns to the local mode after charging.

4

Daily Maintenance

In case defective printing is not resolved


When the image quality is not improved after repeated head cleanings, perform the filling of the ink.

Filling the ink

1

Insert the ink cartridge in the ink station.

- Set the ink cartridge securely.

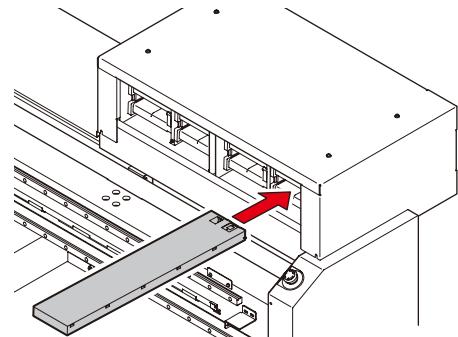

2

Press the **FUNCTION** key in the local mode.

FUNCTION
VIEW <ENT>

3

Select the [MAINTENANCE] with pressing the **▲** or **▼** key.

FUNCTION
MAINTENANCE <ENT>

4

Press the **ENTER** key.

MAINTENANCE
STATION <ent>

5

Select the [FILL UP INK] with pressing the **▲** or **▼** key.

MAINTENANCE
FILL UP INK <ent>

6

Press the **ENTER** key.

FILL UP INK
HEAD [MCYKKYCM]

7

Select the ink filling for each head.

(1) Move the cursor with **◀** or **▶** keys.
(2) Select ink filling with **▲** or **▼** keys.

- Select ink filling for all the heads.

Fill : The ink cartridge that is set will be indicated.

Not fill : Displays “*”.

FILL UP INK
HEAD [MCYKKYCM]

FILL UP INK
HEAD [MC^{*}KKYCM]

8

Press the **ENTER** key.

FILL UP INK
FILLUP START : ent

9

Press the  key.

- Filling of the ink will start.
- When the ink filling is completed, the screen as shown in the right will be displayed. If you press the  key twice, the system will return to the local mode.



- When replacing the ink, please refer to  P.4-4.

FILL UP

MAINTENANCE
FILL UP INK <ent>

4

Daily Maintenance

Regular maintenance for white ink

White ink is easier precipitate than other inks.

- In case without printing more than two weeks, white ink may cause precipitate in ink cartridge or inside of the device.
- When the ink is precipitated, nozzle clogging occurs and normal drawing can not be obtained.
- Make sure to perform periodical maintenance to avoid precipitation and to keep white ink good condition.

- Be sure to perform the following operation at least once a week.
- Use the specified ink cartridge.



- This function is available only when white ink (white) is included in the ink set.


1

Select the “WHITE MAINTENANCE MODE” of the maintenance menu.

- (1) Press the **FUNCTION** key in the local mode.
- (2) Select the [MAINTENANCE] by pressing the **▲** or **▼** key, and press the **ENTER** key.
- (3) Select the [WHITE MANT] by pressing the **▲** or **▼** key.
- (4) Press the **ENTER** key.
 - [REMOVE CARTRIDGE] is displayed on the screen.

2

Pull out the white ink cartridge form the ink station.

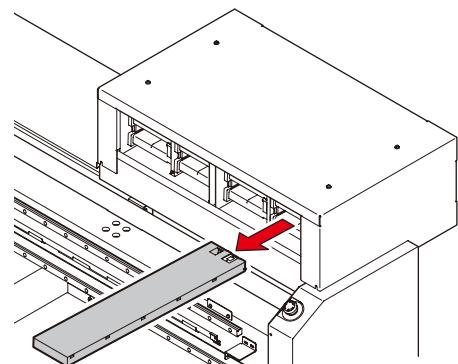

3

Press the **ENTER** key.

EMISSION
PLEASE WAIT

- White ink discharge operation starts.

4


Shake the white ink cartridge up and down about 10 times slowly.



Part A
(Insertion hole of the needle)



Part B
(Gap on the bottom surface)

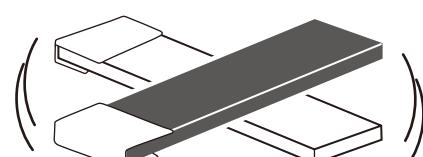

Press firmly with paper towel
and shake slowly.


- To avoid the spill of the ink when shaking the ink cartridge, cover the part A on the upper surface of the cartridge and the part B on the bottom surface of the cartridge with paper towel, etc. and slowly shake the ink up and down.

5

When a screen shown in the right is displayed, Return the white cartridge to the ink station.

WHITE MANT
SET CARTRIDGE

- As shown in the drawing, set an ink cartridge turning up a side containing the IC chip.

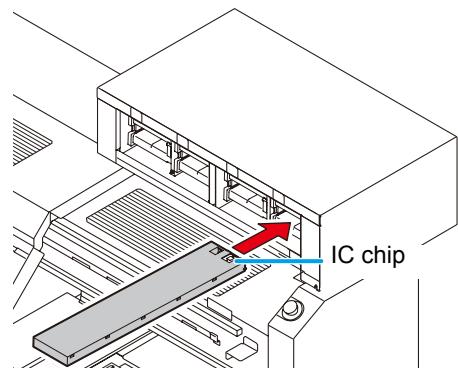**6**

Press the **ENTER key.**

FILL UP
PLEASE WAIT

- Ink filling starts.
- A message shown in the right is displayed after completion of white ink filling.

MAINTENANCE
WHITE MANT <ent>

7

Press the **END key twice to finish.**

4

Daily Maintenance

Head maintenance function

With the use of the head maintenance function, when the power supply is put ON, the head cleaning and wiping will be performed automatically to prevent the media from being stained.



- After putting ON the power supply and when the head reaches the set temperature, the cleaning/wiping operation will be performed.
- The cleaning/wiping performed in head maintenance is for the purpose of preventing the media from being stained. Accordingly, this operation is only for limited quantity.
- This device may not be operated until the cleaning/wiping operation is completed.

1

Select the “HEAD MAINTENANCE MODE” of the maintenance menu.

- (1) Press the **FUNCTION** key in the local mode.
- (2) Select the [MAINTENANCE] by pressing **▲** or **▼** key, and press the **ENTER** key.
- (3) Select the [HEAD MAINTENANCE] by pressing **▲** or **▼** key.
- (4) Press the **ENTER** key.

2

Select execution/release of the maintenance function for every head.

HEAD MAINTENANCE
HEAD : KCMY cmWS

- (1) Select the head pressing **◀** or **▶** keys.
- (2) Select execution/release of maintenance function pressing **▲** or **▼** keys.
 - If the head maintenance function is released, the display will show “*”.
 - When you do not wish to use the head maintenance function, select Release for all heads.

3

Press the **ENTER** key.

4

Press the **END** key twice to finish.

Special refresh

Set the head frequently to refresh by the following operations when refreshing is required frequently due to drawing failures (blurring or missing) on the data drawn.

1

Select the “SP.REFRESH MODE” of the maintenance menu.

- (1) Press the **FUNCTION** key in the local mode.
- (2) Select the [MAINTENANCE] by pressing **▲** or **▼** key, and press the **ENTER** key.
- (3) Select the [SP.REFRESH] by pressing **▲** or **▼** key.
- (4) Press the **ENTER** key twice.

2

Select the head by pressing **▲** or **▼**.

- Select the head frequently to refresh.

3

Press the **ENTER** key.

SPECIAL REFRESH
COLOR : _____ W

4

Press the **END** key twice to finish.

4

Daily Maintenance

Cleaning of wiper and cap

A cap prevents a nozzle from clogging caused by drying.

A wiper sweep ink stuck to a nozzle of the head.

The wiper or the cap becomes tainted with ink or dusts during the operation of the device.

In order to maintain good condition of the heads, clean the wipers and caps frequently.

Important!

- The wiper is a consumable material. If the drawing images are not improved by repeated head cleaning after cleaning the wiper, replace the wiper with the supplied wiper for replacement. (Wiper for replacement: SPC-0515 [30 pieces])
- When conducting the cleaning, be sure to wear the supplied goggle and gloves since you may get ink in your eyes.


1

Turn ON the power.

2

Remove the front right cover.

- (1) Remove the ink slot No. 1 and No. 8.
- (2) Remove the finger screws (6 pieces) and take out the front right cover.

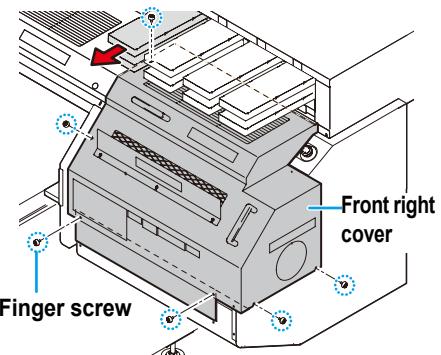

3

Select the “STATION” in the maintenance menu.

- (1) Press the **FUNCTION** key in the local mode.
- (2) Select the **[MAINTENANCE]** by pressing the **▲** or **▼** key, and press the **ENTER** key.
- (3) Press the **ENTER** key again.

4


Press the **ENTER key.**

- The carriage moves to the location near the flushing BOX on the right side.
- The wiper will move toward you and the shutter of the cap will open.

5

Remove suction nozzle Assy.

- (1) Hold down the rear part of the suction nozzle Assy.
- (2) Push the protrusion in front to back
- (3) Pull up the suction nozzle Assy.

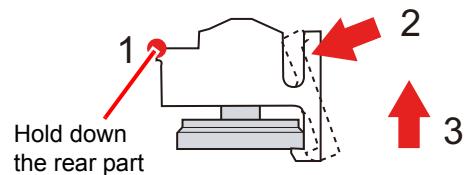

6


Remove ink stuck to the wiper and the bracket with the exclusive cleaning swab soaked in the cleaning liquid.

- If stain or bent of the wiper is too severe, replace the wiper with new one.
Conduct replacing follow the wiper replacement procedure, after completing this operation.

7

Remove the wiper M with tweezers.

Wiper M

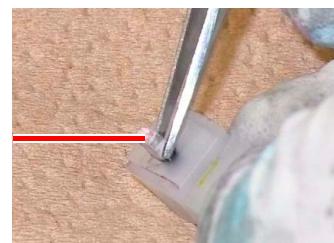**8**

Drip wiper M with several drops of cleaning liquid and clean it with nonwoven cloth.

- Avoid using the material that will leave dust or fiber after use such as paper towel.
- When remarkable deformation or wear is seen on the wiper M, replace it with the new one.

**9**

Check the inside of the suction nozzle and clean them if they are dirty.

- (1) Remove hardened ink or the attached dirt using a stick with fine tip.
- (1) Using the dropper, drip several drops of cleaning liquid inside the suction nozzle and clean with nonwoven cloth.

**10**

Check around the O ring under the suction nozzle, and clean it if it is stained.


- Around the O ring, uncured ink is sticking. Wipe it out with nonwoven cloth.

**11**

Attach the wiper M to the suction nozzle.

- Adjust the wiper M and the suction nozzle so that they are on the same height.


Wiper M

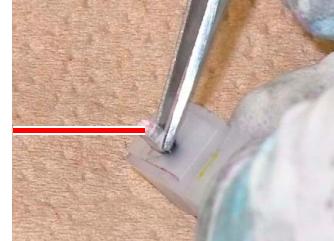**4****Daily Maintenance**

12

Attach the suction nozzle Assy pressing it firmly under the suction nozzle.

- The wiper M will stick out by around 0.5 mm after being attached.

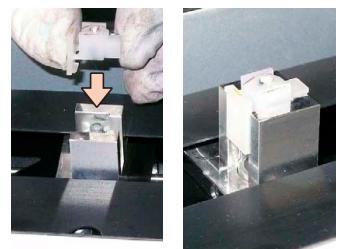

13

Wipe off the ink and others stuck to the cap with nonwoven cloth.

- Avoid using the material that will leave dust or fiber after use such as paper towel.



14

When the cleaning is completed, press the **ENTER** key.


- The initial movement will be performed.

15

Press the **END** key three times to finish.

Replacing water in water heater tank

In order to keep the ink at an appropriate temperature, operate the water heating system. Supply antifreeze liquid and water to the hot water tank in the system. Make sure without fail to check once every month.

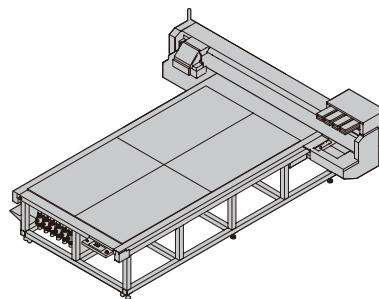

Precautions for replacing



- Water cannot be added.
- Water and antifreeze liquid compound ratio should be 2(water) to 1(Antifreeze liquid).
- If only water is filled into the water heater tank without antifreeze liquid, the heads could be damaged due to freezing etc.
- If only antifreeze liquid is filled into the water heater tank without water, the temperature of the liquid may not be elevated, causing error.
- In order to check the water quantity necessary for water heater device and the stains inside the water heater tank, make sure to perform checking of the water heater device once every month.
- If water in the hot water tank frequently becomes insufficient, contact the dealer or our branch.
- Dispose the waste water mixed with antifreeze liquid pursuant to the regulations of your district.




Precautions in handling the antifreeze liquid



- Be sure to wear goggle and gloves for handling the antifreeze liquid.



- Use the recommended antifreeze liquid by Mimaki. (Antifreeze liquid for replacement: SPC-0394 [1000cc X 2 pieces])

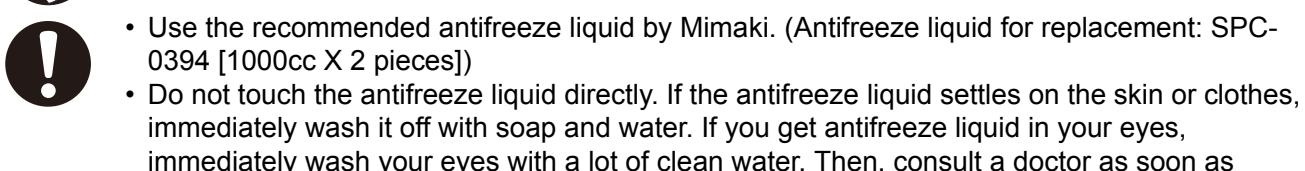

- Do not touch the antifreeze liquid directly. If the antifreeze liquid settles on the skin or clothes, immediately wash it off with soap and water. If you get antifreeze liquid in your eyes, immediately wash your eyes with a lot of clean water. Then, consult a doctor as soon as possible.

- Store antifreeze liquid in a dark and cold place.
- Store antifreeze liquid in a place that is out of the reach of children.
- When discarding antifreeze liquid which is no longer needed, entrust them to an industrial waste disposal contractor, clarifying their contents.
- Before using antifreeze liquid, be sure to read the Material Safety Data Sheet (MSDS).



- When purchasing a hot water tank for spare, contact the dealer or our branch.
- Prepare a polyethylene tank for moving waste the water from hot water tank.

- When water in the hot water tank is insufficient, the error message shown below is displayed. In this case, replace water with the same manner as shown below.

ERROR 705
WATER LACK

4

Daily Maintenance

Replacement method of antifreeze liquid water

There are following two methods for changing the antifreeze liquid mixed water:

Make replacement using hot water exchange mode on the maintenance menu. (Refer to the bottom of this page).	The antifreeze liquid mixed water inside the piping can also be discharged completely. Further, this work is performed safely, as it may be done after the water heater device has been cooled down completely. However, 20 to 30 minutes will be required for the cooling of the water heater device.
Make replacement turning the power OFF, and after removing the blue colored socket. (P.4-32)	As there is no need for the time for cooling down of the hot water, the replacement works can be performed within a short time, but the antifreeze liquid mixed water inside the piping cannot be replaced. Further, when the power has been put on this device for a while, the temperature of the water heater tank does not go down soon even if the power is turned OFF. When the water heater tank is at an elevated temperature, there exists possibility of burn injury.

Replacing using water heater exchange mode

1

Select the “WATER CHNG” in the maintenance menu.

- (1) Press the **FUNCTION** key in the local mode.
- (2) Select the **[MAINTENANCE]** by pressing the **▲** or **▼** key, and press the **ENTER** key.
- (3) Select the **[WATER CHNG]** by pressing the **▲** or **▼** key.
- (4) Press the **ENTER** key.

2

Press the **ENTER** key.

WATER CHNG
COOLING

- Cooling of antifreeze liquid remaining in the system starts.
- 20 to 30 minutes will be required for the cooling of the water heater device.


3

Press the **ENTER** key when the **[WASTE AF]** is displayed.

WATER CHNG
WASTE AF : ent

4


Remove a cover of the water heating system at main unit rear.

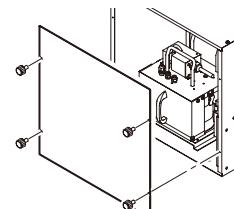

- Open the cover after removing screws (4) fixing both sides of the cover.


5

Release the catch clip.

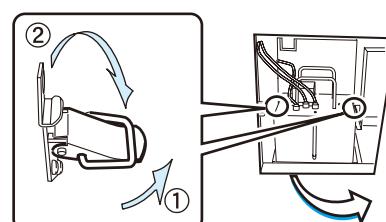


6

Lift the water heating system and engage the hanger with the hook.

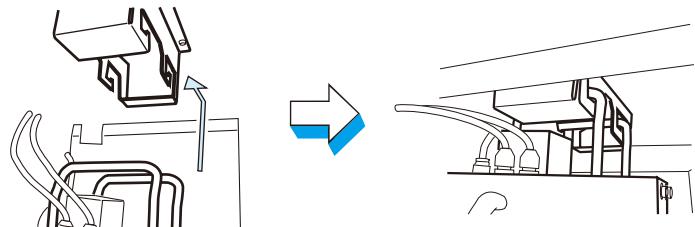**7**

Remove the hot water tank.

- Move the remaining antifreeze liquid into a polyethylene tank.
- Take care not to spill the antifreeze fluid. If spilled, be sure to wipe it off immediately.

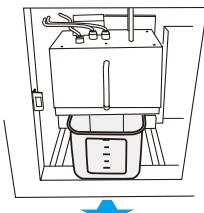**8**

Set the empty hot water tank into the water heating system and return the water heating system and the catch clip to the state of starting the operation.

9

Press the **ENTER key.**

- Discharging of antifreeze liquid remaining in the system starts.
- When discharging is completed, a message shown in the right is displayed.

WATER CHNG SET TANK	: ent
WATER CHNG WASTE AF	: ent

10

Take out the hot water tank again.

- Take out with referring to the procedure 3~6.


11

Move antifreeze liquid in the tank into the polyethylene tank used in procedure 3, and wash the hot water tank.

- If neutral detergent is used for washing the tank, sufficiently rinse the tank with water.

12

Supply new water and antifreeze liquid in the hot water tank.

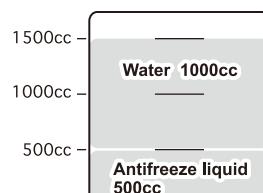**13**

Return the hot water tank to its original position.

- (1) Set the hot water tank to the system.
- (2) Place the water heating system cover.
- (3) Set the clip.
- (4) Close the cover of the water heating system.

4**Daily Maintenance**

14Press the **ENTER** key.

WATER CHNG
SET AF

: ent


15Press the **END** key twice to finish.**Replacing when the power is turned OFF****1**

Make sure that the power supply is turned OFF and remove the blue colored socket.


**2**

Remove the cover of the water heater device at the back of the main unit.


- Open after removing the screws (4 pieces) fixing both sides of the water heater device.

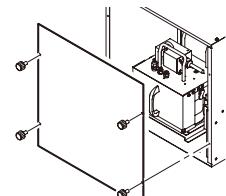**3**

Remove the catch clips.

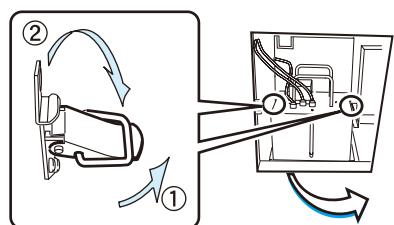
**4**

Holding up the water heater device and hang the hanger to the hook.

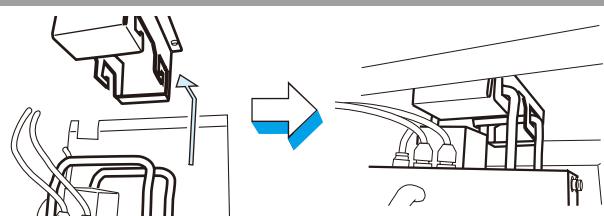**5**

Take out the water heater tank.

- Transfer the remaining antifreeze liquid to the separate polyethylene tank.
- Pay attention not to spill the antifreeze liquid. When it is spilled, wipe it off quickly.

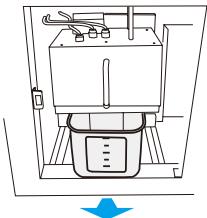**6**

Set an empty tank to the device, and return the water heater device and the catch clip to the original condition.

Replacing exhaust blower

Using exhaust blower, the heat generated at the time of making drawings is exhausted. The ink mist sucked in at such time will be hardened and disturb the normal operation of the exhaust blower.

Replace the exhaust blower in the following situations:

When the exhaust blower does not function normally

“ERROR706 UV1 overheat” will be displayed frequently.


Tools required for replacement	• Phillips screwdriver
--------------------------------	------------------------

1

Put off the UV lamp and turn OFF the power.


2

Remove the front right cover and the front left cover.

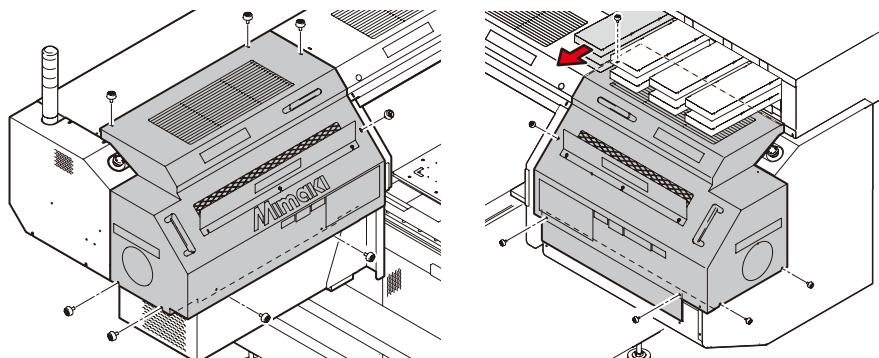

3


Remove the connector of the exhaust blower connecting cable.

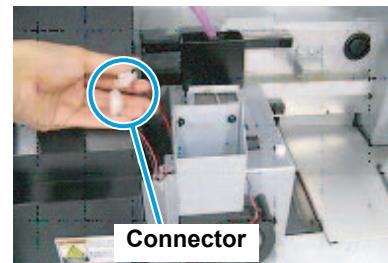

4

Pull out the exhaust blower Assy upward.

- Pull out after removing the finger screws attached to the top of the exhaust blower Assy.

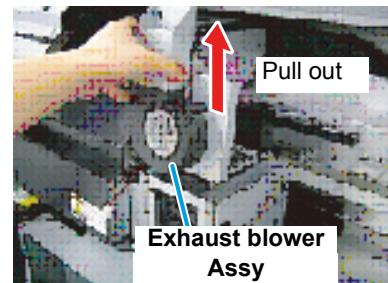


4

Daily Maintenance

5

Remove the connecting cable of the exhaust blower from the clamps.

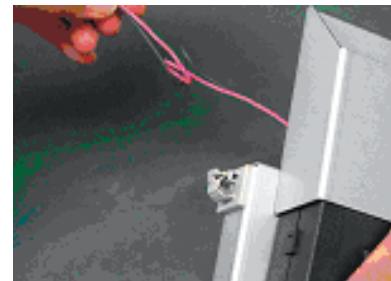**6**

Remove the exhaust blower.

- Remove the screws (2 pieces), and take out the exhaust blower.

**7**

Fix the new exhaust blower.

- Tighten the screws (2 pieces) to fix the exhaust blower.

**8**

Return the exhaust blower Assy to the original state.

- (1) Fix the exhaust blower connecting cable on the clamps.
- (2) Set the exhaust blower Assy.
- (3) Fix the connector of the exhaust blower connecting cable.

9

Close the front right cover and the front left cover.

Setting the UV lamp OFF duration

1

Select the “UV LAMP MODE” of the maintenance menu.

- (1) Press the **FUNCTION** key in the local mode.
- (2) Select the [MAINTENANCE] by pressing the **▲** or **▼** key, and press the **ENTER** key.
- (3) Select the [UV LAMP] by pressing the **▲** or **▼** key.
- (4) Press the **ENTER** key.

2

Select the [OFF TIMER] by pressing the **▲** or **▼** key.

UV LAMP
OFF TIMER <ent>

3

Press the **ENTER** key.

OFF TIMER
CONT. IRR. : ON

4

Select a set value by pressing the **▲** or **▼** key.

OFF TIMER
CONT. IRR. : OFF

- OFF: The UV lamp turns OFF at the set time automatically. (Default: 30 minutes).
- ON : The UV lamp keeps ON state full-time.
Execute the operation of P.XX when OFF of the UV lamp is required.
- If “OFF” is selected, go to Procedure 5, if “ON” is selected, go to procedure 8.

5

Press the **ENTER** key.

OFF TIMER
TIME: * * h * * m

6

Set the time duration to turn off the UV lamp after the completion of drawing.

OFF TIMER
TIME: 0 1 h 0 0 m

- OFF time can be set with time: minute. (Max. OFF after 23h59m duration)
- (1) Input hour (0 to 23h) by pressing the **▲** or **▼** key.
- (2) Move to setting of minute by pressing the **▶** key.
- (3) Input minute (0 to 59m) by pressing the **▲** or **▼** key.

7

Press the **ENTER** key.

UV LAMP
OFF TIMER <ent>

8

Press the **END** key three times to finish.

4

Daily Maintenance

Cleaning of UV lamp filter

To use for a long time, clean the UV lamp filter periodically (once around two weeks).



- When cleaning, be sure to wear the supplied goggles and gloves since you may get ink in your eyes.



- Wear gloves not to injure your hands at cleaning of the UV lamp filter.
- The replacement of the UV lamp filter is required when an alarm relating the UV lamp repeats frequently even though the filter is cleaned periodically. Contact a shop or a sales office for the replacement.
- Contact a shop or a sales office when a screw is dropped in cleaning of the filter.

Articles required for cleaning	• Alcohol	• Gloves
	• Gloves	• Paper towel

1

Put out the UV lamps and switch OFF the power.

2

Turn the main power switch located on the backside of the main unit off.



- Be sure to confirm that the UV lamp lights out before the main power is shut off.




Press the lower part (o) to switch OFF the power.


3

Remove the front right cover and the front left cover.

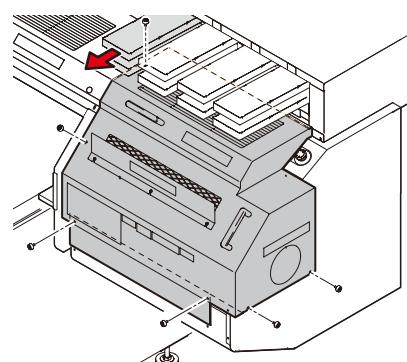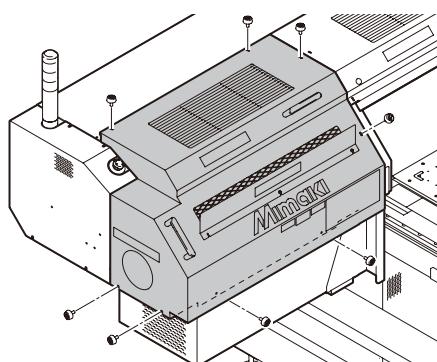


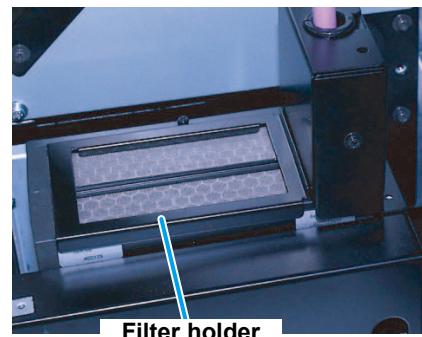4**Remove the filter holder.****5****Remove the mesh filter.**

- The mesh filter is under the UV lamp connector cover. Remove it while pulling the filter.

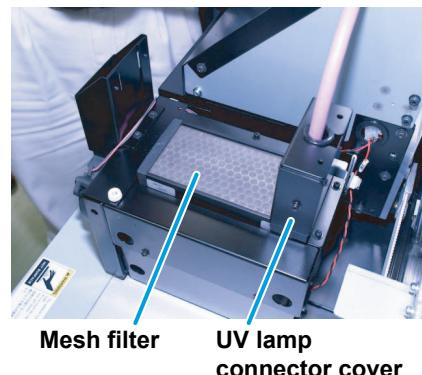**6****Clean the mesh filter.**

- Lay a paper towel, and remove the stains on the mesh filter spraying alcohol.
- When it is hard to remove the stains, soak the paper towel with alcohol and press it lightly.
(Do not brush the mesh filter.)

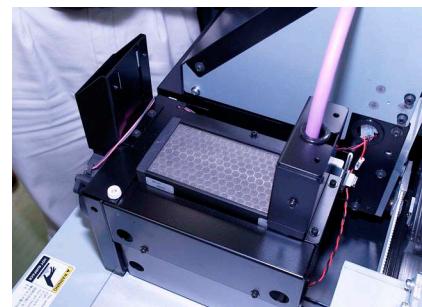7**Return the mesh filter to the original position.****8****Attach the filter holder.****9****Fix the front right cover and the front left cover.****4**

Replacing UV lamp

The UV lamp is a consumable parts.

This units counts the duration of irradiation with the UV lamp to notify the replacing timing.

Checking UV lamp irradiation duration

1

Press the **ENTER** key several times in the local mode.

<LOCAL>
USED TIME 600, 600

- The irradiation time of the left side UV lamp is shown on the left and that of the right side is shown on the right.
- Press the **ENTER** key to return to the local mode.

Replacing UV lamp

When the irradiation duration has exceeded the predetermined period of time, a message to urge replacement of UV lamp is displayed.

When the message is displayed, call the service personnel for replacing, and prepare a new UV lamp.


!UV LAMP : CH1
LAMP CHANGE : e n t

1

Put out the UV lamps and switch OFF the power.


2

Remove the front right cover and the front left cover.

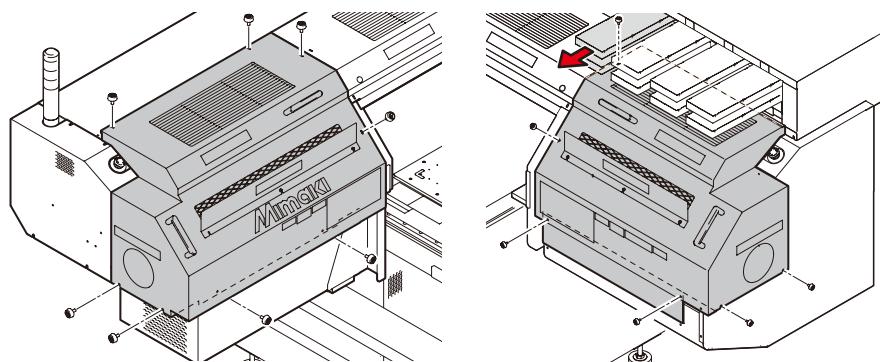

3


Remove the connector for connecting cable of the exhaust blower.

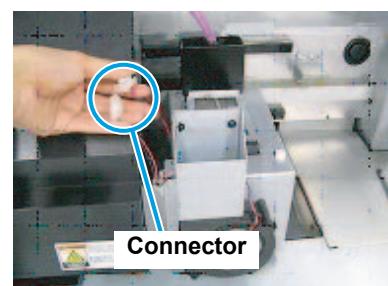

4


Pull out the exhaust blower Assy upward.

- After removing the finger screws on the top part of the exhaust blower Assy, pull out the exhaust blower Assy.

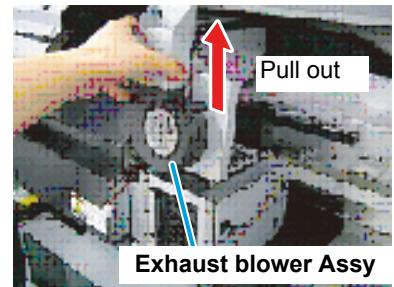**5**


Remove UV lamp cassette.

- Remove the bolt on the front of the UV lamp cassette using supplied hexagonal wrench.
- Pull off the UV lamp cassette.

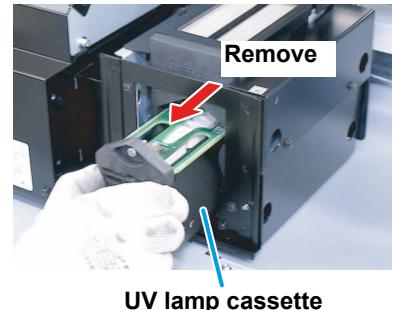**6**

Place a new UV lamp.

- Fix the bolt on the front of the UV lamp cassette using supplied hexagonal wrench.

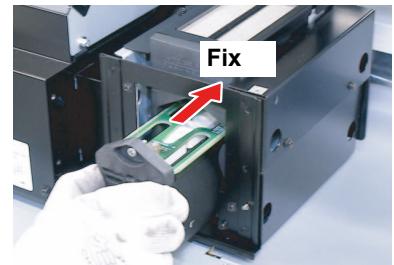**7**

Fix the exhaust blower Assy and tighten the finger screw.

**8**

Connect the connector of the exhaust blower connecting cable.

9

Fix the front right cover and front left cover and switch ON the power.

- When the replacement is completed, perform the procedures of P.4-40 "Resetting UV lamp irradiation duration".

4**Daily Maintenance**

Resetting UV lamp irradiation duration

After replacing the UV lamp, reset the irradiation duration stored in this unit.

1

Select the “UV LAMP MODE” of the maintenance menu.

- (1) Press the **FUNCTION** key in the local mode.
- (2) Select the [MAINTENANCE] by pressing the **▲** or **▼** key, and press the **ENTER** key.
- (3) Select the [UV LAMP] by pressing the **▲** or **▼** key.
- (4) Press the **ENTER** key.

2

Select [LAMP TIMER] by pressing the **▲** or **▼** key.

UV LAMP
LAMP TIMER <ent>

3

Press the **ENTER** key.

UV LAMP
CHANNEL : CH1

4

Select a UV lamp to be reset by pressing the **▲** or **▼** key.

UV LAMP
CHANNEL : ALL

- CH1, CH2, ALL(Reset irradiation duration of both UV lamps)

5

Press the **ENTER** key twice.

- Reset irradiation duration.
- A message shown in the right is displayed when resetting is completed.

UV LAMP
LAMP TIMER <ent>

6

Press the **END** key twice to finish.

Checking UV ink curing level

As the UV lamp is deteriorated, the ink curing level may be lowered.
Check the UV ink curing level and adjust the UV lamp light intensity, if necessary.

1

Set media for drawing patterning on the table.

- Turn the vacuum switch ON. After that, set the drawing origin.

2

Make sure that the local mode is displayed.

3

Press the **TEST key.**

TEST DRAW
NOZZLE CHK <ENT>

4

Select [HARDEN CHK] by pressing the **▲ or **▼** key.**

TEST DRAW
HARDEN CHK <ENT>

5

Press the **ENTER key.**

HARDEN CHECK
DPI : 300X300

6

Select resolution by pressing the **▲ or **▼** key.**

HARDEN CHECK
DPI : 1200X1200

- Setting value : 300 x 300 dpi, 300 x 600 dpi, 600 x 600 dpi, 600 x 1200 dpi, 900 x 600 dpi, 900 x 1200 dpi, 1200 x 1200 dpi

7

Press the **ENTER key.**

HARDEN CHECK
QALITY : STANDRD

8

Select drawing quality by pressing the **▲ or **▼** key.**

HARDEN CHECK
QALITY : FINE

- Setting value : STANDRD, FINE, FAST

9

Press the **ENTER key.**

HARDEN CHECK
SCAN DIR: BI-D

10

Select the scanning direction pressing **▲ or **▼** keys.**

HARDEN CHECK
SCAN DIR: UNI-D

- Setting value: BI-D , UNI-D

4

Daily Maintenance

11**Press the **ENTER** key.**

- Test drawing starts.

* * TEST DRAW * *

12**Check the drawing pattern after completion of the drawing.**

- If the UV light intensity goes lower, good drawing pattern cannot be obtained. In this case execute the operation of "Adjusting UV light level".

(Important!)

- If preparation of the UV irradiation device in procedure 9 has not been completed, or the temperature of the water heating system has not reached the predetermined value, a message is displayed. Drawing is not allowed in such cases. When the display is disappeared, drawing can be started.

Adjusting UV light level

1**Select the "UV LEVEL MODE" of the set up menu.**

- (1) Press the **FUNCTION** key in the local mode.
- (2) Select the [SET UP] by pressing the **▲** or **▼** key, and press the **ENTER** key.
- (3) Select the [UV LEVEL] by pressing the **▲** or **▼** key
- (4) Press the **ENTER** key.

2**Select a light level by pressing the **▲** or **▼** key.**SET UP
UV LEVEL : HIGH

- Set value : Strong, Weak, Standard, No, No Draw (Light intensity becomes stronger)

3**Press the **ENTER** key.**SET UP
UV LEVEL <ent>**4****Press the **END** key twice to finish.****5****Check UV curing again**

- Set media and create the drawing pattern of the UV light intensity. (☞ P.4-41)

(Important!)

If the UV ink curing level is not changed by adjusting the UV light intensity, the UV lamp is deteriorated.

- Check the UV lamp irradiation duration (☞ P.4-38)
- Check the UV lamp irradiation level (☞ P.4-44)
- Replacing the UV lamp. (☞ P.4-38)

Checking method of UV illumination intensity

UV lamp is a consumable. The more the irradiation time increases, the more the amount of light decreases and the ink will become hard to harden. When the cumulative irradiation time exceeds a certain value, a message prompting you for checking the illumination intensity is displayed on the operation panel. Check the UV lamp illumination intensity following this operation manual and use it as a reference when replacing the UV lamp.

Notes when checking the illumination intensity



- Be sure to wear the attached goggle and the gloves.
- Wear long sleeves in order to protect your skin from the UV lamp.

Tools required checking the illumination intensity



Illumination meter



Illumination meter
bracket(M510110)




Screw x 2 (B5x10) and
Phillips screwdriver

Check the UV illumination intensity

1


Mount the sensor part of the illumination meter on the illumination meter bracket.

(1) Turn over the illumination meter bracket and insert the sensor into the guide part.
• Set it with the sensor hole faces downward so that the hole can be seen from the obverse side of the bracket.

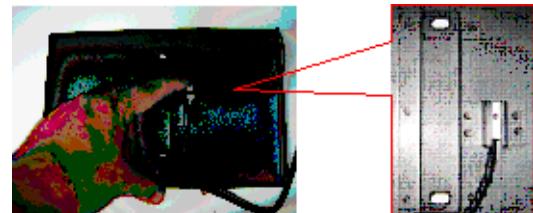

(2) Insert the code between guides and then slide the sensor to the code side.
• Be sure to press the sensor part. Do not pull the code.

(3) Turn the bracket to the obverse side and adjust the sensor hole to the center of the bracket hole.

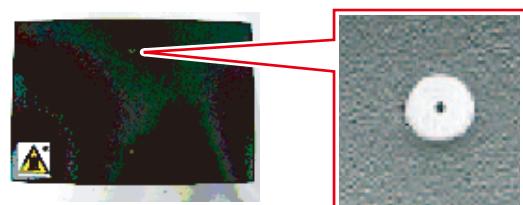

2

Select “UV lamp mode” from the maintenance menu.

(1) Press the **FUNCTION** key in the local mode.

(2) Press the **▲** **▼** to select [MAINTENANCE] and press the **ENTER** key.

(3) Press the **▲** **▼** to select [UV LAMP] and press the **ENTER** key.

(4) Press the **▲** **▼** to select [LEVEL CHECK] and press the **ENTER** key.

(5) Press the **ENTER** key.
• The head wiping will be performed.

(6) Press the **ENTER** key.
• The carriage will move to the left rear part.

LEVEL CHECK
WIPE START : ent

LEVEL CHECK
HEAD MOVE : ent


3**Mount the illumination meter bracket on the device.**

(1) Place the illumination meter bracket and the illumination meter on the left rear of the table.

- Adjust the rabbet for positioning the illumination meter bracket in order to match to the corner of the adsorption board.
- Place the illumination meter in front of the illumination meter bracket.
- Be careful that the code does not loosen too much.

(2) Using the Phillips screwdriver, fix the illumination meter bracket on the table with the attached 2 screws (self-binding screw M5x10).

- Fix it using two guide holes located on the backmost part.

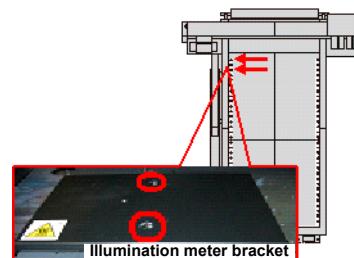**4****Operate the switch of the illumination meter.**

(1) Turn the switch of the illumination meter to "H".
 (2) Press the button of the left side several times to display "DH MAX".



(3) Press the **ENTER** key.

LEVEL CHECK
SET THE TOOL : ent

5**Measure the amount.**

(1) Press the **ENTER** key.

LEVEL CHECK
CH2 CHECK START : ent

(2) When the checking of the measured value is completed, press the **ENTER** key.

LEVEL CHECK
CHK THE TOOL : ent

(3) Measure CH1 in the same manner.

LEVEL CHECK
CH1 CHECK START : ent

LEVEL CHECK
CHK THE TOOL : ent

LEVEL CHECK
END : ent

(4) Press the **ENTER** key.

- Do not touch the illumination meter bracket during the check of illumination intensity because it is heated by the UV lamp. You may suffer burns.

**4****Daily Maintenance**

6**Remove the illumination meter bracket from the device.**

- The illumination meter bracket is heated by the UV lamp immediately after checking the illumination intensity and if you touch it, you may suffer burns. Remove the illumination meter bracket after being cooled fully.

7**Check the measured value.**

- For the reference value of the measurement, see inside of the illumination meter.



- Do not touch the illumination meter bracket after the illumination intensity measurement because it is heated by the UV lamp. You may suffer burns.

Reference value of the measurement

The lamp illumination intensity before shipping and the theoretical value when the cumulative irradiation time exceeds 500 hours are indicated on the label located inside of the illumination meter.

- When the cumulative irradiation time exceeds 500 hours, the illumination intensity will decrease by 30%.
- After 500 hours have passed, the illumination intensity will not decrease rapidly.
- Even if the cumulative irradiation time does not exceed 500 hours, when the illumination intensity decreases rapidly, the UV lamp unit may be broken. Contact a nearby sales agency or our business office.
- You can check the hardening status of the ink by drawing actually on the media. Please refer to "Checking UV ink curing level" (☺ P.4-41).
- Even if the illumination intensity decreases, it is possible that the ink will harden sufficiently by changing the setting of the amount of UV light. Please refer to "Adjusting UV light level" (☺ P.4-42).

CHAPTER 5

In Case of Trouble



This chapter describes the actions to be taken when the plotter develops any trouble or displays an error message.


Before taking a phenomenon as a trouble.....	5-2
The device cannot be energized	5-2
The device cannot perform printing	5-2
Display [WATER NOT READY] OR [UV NOT READY]	5-2
If image quality declines	5-3
Resolving nozzle clogging	5-3
Stopping the unit during the operation	5-3
Troubles for which error messages are given on the LCD	5-4
Errors accompanied by warnings	5-4
Error message	5-5

Before taking a phenomenon as a trouble

If something is wrong with the device, the buzzer sounds and a corresponding error message is given on the LCD. Take an appropriate corrective measure in accordance with the message.


The device cannot be energized

More often than not, this is due to improper connection of the power cable. Check that the power cable has been properly connected to the power outlet and the computer.




The device cannot perform printing

This occurs when the data is not being transmitted to the device properly. It can also occur when any of the device functions fails or the media has been set improperly.

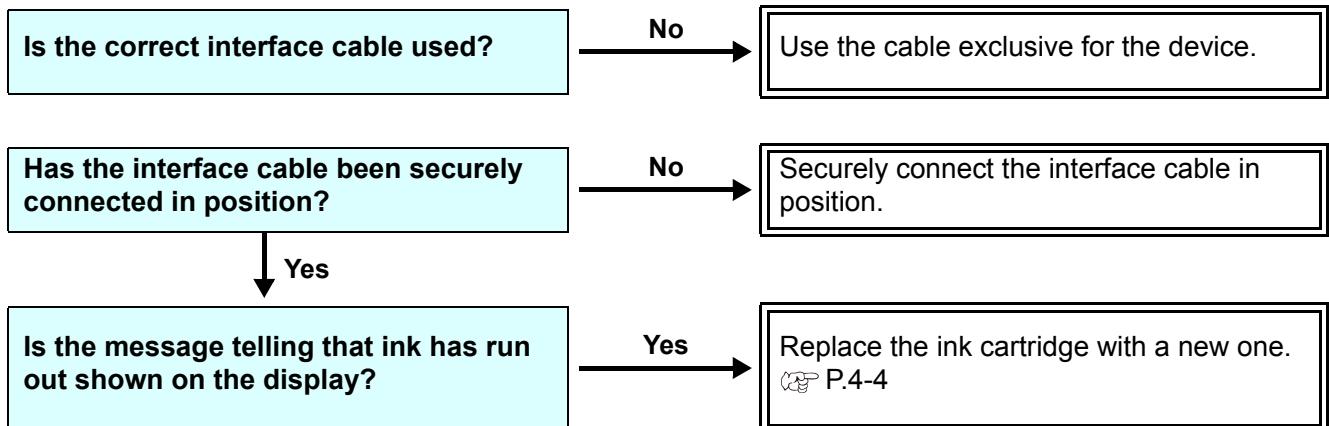

Display [WATER NOT READY] OR [UV NOT READY]

When [WATER NOT READY] appears on the display, the water temperature in the water heater has not reached the predetermined value. If [UV NOT READY] is displayed, as the UV lamp has not been ready, the UV lamp can not be used, therefore drawing can not be started.

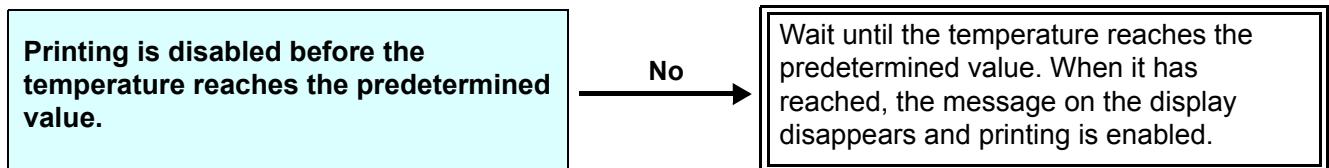

If image quality declines

Corrective measures against troubles in the case where satisfactory image quality is not provided are described in this station.

Take measures in accordance with actual state of the picture.

If the measures fail restore the device to the normal state, contact your local MIMAKI distributor or MIMAKI office call for service.

Development	Corrective measure
Lines/thin spots are obvious occur	(1) Execute the head cleaning. (☞ P.2-10) (2) Clean the wiper and cap. (☞ P.4-26) (3) If slip of paper is present in the head path, for example, above the work plate, remove it.
Large ink drop on media	(1) Execute the ink caps cleaning. (☞ P.4-26) (2) Execute the head cleaning [normal]. (☞ P.2-10) (3) Dust the media. (4) Dust the table. (5) Execute the cleaning for the undersurface of the carriage. (☞ P.4-8) (6) Set a correct value to the head gap value. (☞ P.3-7)
Media is raised during printing and printing stops.*1	(1) Set new media and start printing.

*1. During printing, media may be raised due to the heat from the UV lamp, causing printing to be stopped.

Resolving nozzle clogging

If nozzle clogging is not resolved even the head cleaning operation of P.2-10 has been executed, check the following 2 items.


Fill ink with the operation of P.4-20.

Replace ink with the operation of P.4-4.

Stopping the unit during the operation

Press the EMERGENCY SWITCH for stopping the unit urgently for the safety reason.

One EMERGENCY switch is placed on the front face of the unit and 2 are placed on each of the back surface and Y-bar respectively.

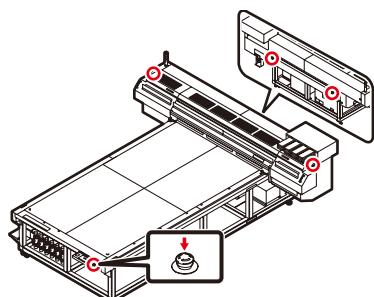

Troubles for which error messages are given on the LCD

If something is wrong with the device, the buzzer sounds and a corresponding error message is given on the LCD. Take an appropriate corrective measure in accordance with the message.

Errors accompanied by warnings

Warning message	Cause	Corrective measure
<LOCAL> NO CARTRDG :MCYKKYCM	The ink cartridge is not attached to the ink station.	<ul style="list-style-type: none">• Attach the ink cartridge(s) corresponding with the color shown on the display. ( P.2-4)
<LOCAL> INK NEAREND :MCYKKYCM	The amount of ink remaining in the ink cartridge is insufficient.	<ul style="list-style-type: none">• Replace an ink cartridge of the displayed head with new one ahead of time. ( P.4-4)
<LOCAL> INK END :MCYKKYCM	The ink cartridge has run out of ink.	<ul style="list-style-type: none">• Replace the ink cartridge of which color is shown on the LCD with a new one. ( P.4-4)
<LOCAL> CARTRIGE :MCYKKYCM	An error on an inserted ink cartridge	<ul style="list-style-type: none">• Remove an ink cartridge of the displayed head and insert it again. If the error is still displayed after this operation, call the dealer or our branch for the service.
<LOCAL> Expiration :MCYKKYCM	The ink will expire soon or has expired.	<ul style="list-style-type: none">• Replace the ink cartridge of which color is shown on the LCD with a new one. ( P.4-4)
<LOCAL> INK TYPE :MCYKKYCM	The type of the loaded ink cartridge is different from the previous one.	<ul style="list-style-type: none">• Check the type of the loaded ink cartridge.
<LOCAL> Color of INK :MCYKKYCM	The color of the loaded ink cartridge is different from the previous one.	<ul style="list-style-type: none">• Check the color of the loaded ink cartridge.
<LOCAL> NON-ORIGNL :MCYKKYCM	The loaded ink cartridge is not MIMAKI genuine.	<ul style="list-style-type: none">• Use the ink specified by MIMAKI.
<LOCAL> WRNG INK IC:MCYKKYCM	The IC chip of the ink cartridge cannot be read normally.	<ul style="list-style-type: none">• Remove an ink cartridge of the displayed head and insert it again. If the error is still displayed after this operation, call the dealer or our branch for the service.

Error message

Error messages indicates error numbers.

If any error message is given on the LCD, turn off the power to the device and turn it on after a while. If the same error message appears again on the LCD, contact your local MIMAKI distributor or MIMAKI office to call for service.

Error message	Cause	Corrective measure
ERROR108 HD CONNECT : 12345678	Head connection can not be confirmed.	<ul style="list-style-type: none"> Turn off the power to the device and turn it on after a while. If the same error message appears again on the LCD, contact your local distributor to call for service.
ERROR108 HD THERMIS : 12345678	Head temperature can not be read.	
ERROR128 HDC FIFO OVER	<ul style="list-style-type: none"> Data transmission speed is too fast. Control circuit board is defective. 	
ERROR128 HDC FIFO UNDER	<ul style="list-style-type: none"> Data transmission speed is too slow. Control circuit board is defective. 	
ERROR129 BATTERY EXCHANGE	Battery shutoff is detected.	<ul style="list-style-type: none"> Contact your local distributor to call for service.
ERROR12A HDS SPEED	Ink discharge is too late.	<ul style="list-style-type: none"> Turn off the power to the device and turn it on after a while. If the same error message appears again on the LCD, contact your local distributor to call for service.
ERROR12E P-HEAD INIT	Head setting failure.	
ERROR12E HEAD TIMING		
ERROR132 CHECK : SDRAM	Control circuit board is defective.	
ERROR201 COMMAND	The device has received data other than command data.	<ul style="list-style-type: none"> Securely connect the interface cable in position. Use an interface cable in conformance with the standard.
ERROR202 PARAMETER	A parameter outside the range of acceptable numeric values is received.	<ul style="list-style-type: none"> Check the host computer output setting.
ERROR304 USB INIT ERR	USB device initialization failure.	<ul style="list-style-type: none"> Turn off the power to the device and turn it on after a while. If the same error message appears again on the LCD, contact your local distributor to call for service.
ERROR305 USB TIME OUT	Occurrence of a timeout error on a USB device.	

Error message	Cause	Corrective measure
ERROR401 MOTOR X	The X motor has been overload.	<ul style="list-style-type: none"> • Turn off the power to the device and turn it on after a while. • If the same error message appears again on the LCD, contact your local distributor to call for service.
ERROR402 MOTOR Y	The Y motor has been overload.	
ERROR403 X CURRENT	Overcurrent error on the X motor has been detected.	
ERROR404 Y CURRENT	Overcurrent error on the Y motor has been detected.	
ERROR50A Y ORIGIN	Y origin could not be detected.	
ERROR50E HEAD TEMP : 12345678	Head temperature is abnormal condition.	
ERROR510 X ORIGIN	X origin could not be detected.	
ERROR511 Z ORIGIN	Z origin could not be detected.	
ERROR511 Z SNS WORK	Top end in the Z-axis can not be detected	
ERROR601 INK NEarend : MCYKKCMY	The amount of ink remaining in the ink cartridge is insufficient.	<ul style="list-style-type: none"> • Replace an ink cartridge of the displayed head ahead of time. (☞ P.4-4)
ERROR602 INK END : MCYKKCMY	The ink cartridge has run out of ink.	<ul style="list-style-type: none"> • Replace the ink cartridge of which color is shown on the LCD with a new one. (☞ P.4-4)
ERROR603 NO CARTRIDGE	The ink cartridge is not attached to the ink station.	<ul style="list-style-type: none"> • Attach the ink cartridge(s) corresponding with the color shown on the display. (☞ P.4-20)
ERROR604 !WS INKTANK FULL	Waste ink tank is full.	<ul style="list-style-type: none"> • Remove the waste ink tank and set an empty waste ink tank. (☞ P.4-22)
ERROR605 !REPLACE WIPER	Wiping times exceeds the predetermined value.	<ul style="list-style-type: none"> • Contact your local distributor to call for service.
ERROR606 WRONG CARTRIDGE	The IC chip of the ink cartridge cannot be read normally.	<ul style="list-style-type: none"> • Remove an ink cartridge of the displayed head and insert it again. If the error is still displayed after this operation, call the dealer or our branch for the service.

Troubles for which error messages are given on the LCD

Error message	Cause	Corrective measure
ERROR607 CAP CLEANING	The time for cleaning the capping has come.	• Conduct cap cleaning with reference to P.4-26.
ERROR608 CARTRIDGE : MCYKKYCM	Occurrence of a cartridge error.	• Execute an action for the error on ink cartridge displayed in the local mode.
ERROR60B WIPER TANK FULL	Wiper tank is full.	• Discard waste ink pooled in the tank with reference to P.4-10 .
ERROR705 WATER LACK	Water volume is shortage.	• Make sure to check the water volume. (☞ P.4-30)
ERROR705 WATER TANK TEMP	Abnormal water tank temperature.	• Turn off the power to the device and turn it on after a while. • If the same error message appears again on the LCD, contact your local distributor to call for service.
ERROR705 WATER TANK ROUTE	Water pump timeout.	
ERROR705 WATER HEAD TEMP	Head temperature is abnormal condition.	
ERROR706 UV1 OVER HEAT	Over heating of a UV lamp in the right side of the unit.	
ERROR706 UV2 OVER HEAT	Over heating of a UV lamp in the left side of the unit.	
ERROR706 UV1 INTERLOCK	Occurrence of interlock on a UV lamp in the right side of the unit.	• Clean the UV lamp filter (☞ P.4-36).
ERROR706 UV2 INTERLOCK	Occurrence of interlock on a UV lamp in the left side of the unit.	
ERROR901 OPERATION	An error occurs on the interface between the I/F board and the control board.	• Perform a proper operation.
ERROR901 NO HEAD SELECT	Head is not selected.	• Select a head to be cleaned or filled.
ERROR901 Ink Type	The type of the loaded ink cartridge is different from the previous one.	• Check the type of the loaded ink cartridge.
ERROR901 REMAIN INK	Remaining ink in the ink cartridge is short.	• Replace the ink cartridge with new one. (☞ P.4-4)
ERROR902 DATA REMAIN	Settings for functions have been tried to be changed though there remains received data that has not yet been printed.	• Print all pieces of received data or execute the data clear function. Then, change the settings. (☞ P.2-12 , P.3-9)

Troubles for which error messages are given on the LCD

Error message	Cause	Corrective measure
ERROR901 NOT COMPLETE FUP	Certain ink is not filled.	• Execute ink filling. ( P.2-4)
ERROR906 NOT FILLUP	Ink is not filled up.	• Execute ink filling. ( P.2-4)
ERROR908 LAMP CHANGE	Changing time for the UV lamp.	• Contact your local distributor or to call for service to change the UV lamp.
MEDIA JAM	Occurrence of media jam.	• Press the  UP key to elevate the Y-bar for releasing the media jam state.

CHAPTER 6

Appendix



Tables of specifications and functions of this unit are described.

Specifications	6-2
Basic unit specifications	6-2
Specifications for ink	6-3
Position of the warning label.....	6-4
Function Flowchart	6-7

Specifications

Basic unit specifications

Item		JF-1631	JF-1610		
Drawing head	Method	On demand piezo-head			
	Specification	8-heads			
Resolution	300 x 300 dpi, 600 x 600 dpi, 1200 x 1200 dpi				
Drawing mode	600 x 600 dpi	4 pass (standard)/8pass single/bi (H.S.)			
	1200 x 1200 dpi	4 pass single/bi-direction (standard)/ 8 pass/16 pass single/bi (H.S.)			
Usable ink	Genuine UV curing ink Total 8 color: Bk, C, M, Y, Lc, Lm + W + CL Clear coat				
Ink supply	Supplies ink through a tube from ink cartridge Remaining ink display function Ink end detection function				
Ink capacity	440cc (1 for each color)				
Usable media	Size	1694 x 3194 mm	1694 x 1080 mm		
	Thickness	Less than 50mm			
Max. drawing range	W 1602 x L 3100 mm		W 1602 x L 1016 mm		
Distance accuracy	Absolute accuracy	\pm 0.1 mm			
	Reproducibility	\pm 0.2 mm			
Perpendicularity	\pm 0.5 mm/500mm				
Head gap adjustment	Automatic head adjustment enabled.				
Media absorption	Blower vacuum absorption				
UV unit	UV irradiation unit and UV power installed				
Waste ink tank	Bottle type (200cc/, with tank full sensor)				
Interface	USB2.0 compliance				
Command	MRL-II B <ESC/P Level 2 base, MIMAKI original command>				
Noise	Stand-by	Less than 55dB (FAST-A, 1m in all direction)			
	Operation continuous noise	Less than 65 dB			
	Operation discontinuity noise	Less than 75dB			
Safety standard	UL, FCC-Class A, CE Marking, CB Report				
Ink safety	MSDS				
Power specification	Single phase AC 200 to 240V				
Power consumption	Less than 6.0kVA				
Environment	Available temperature	15 to 30 °C			
	Humidity	35 to 65%Rh (No condensation)			
	Guaranteed temperature	18 to 25 °C			
	Temperature change	\pm 10 °C or less			
	Dust	Equivalent to normal office level			
Weight	Approx. 1150 kg		Approx.1050 kg		
Outside dimensions	3430 (W) x 4250 (D) x 1465 (H) mm (Max.)		3430 (W) x 2005 (D) x 1465 (H) mm (Max.)		

Specifications for ink

As for the detail, ask the dealer or our branch.


Item		Parts No./ Specification
Feature		Exclusive UV ink cartridge
Ink type		Black, magenta, cyan, yellow, light cyan, light magenta, white , Clear coat
Capacity of ink cartridge		440CC
Shelf life		One year from the date of manufacture
Storage temperature	During storage	15 °C to 35 °C
	During shipping	0 °C to 60 °C within 2 weeks permitted.



- The ink freezes up if it is left in an environment of under -4 °C for a long time. If the ink has frozen up, use it after unfreezing it with leaving in the room temperature (25 °C) for more than 3 hours.
- Do not disassemble an ink cartridge or refill ink in it. That can cause a trouble.


Position of the warning label


This device is adhered with the warning label. Be sure to fully understand the warning given on the labels. In the case where any of the warning label has become so soiled that the warning message is illegible or has come off, purchase a new one from your local distributor or our office.

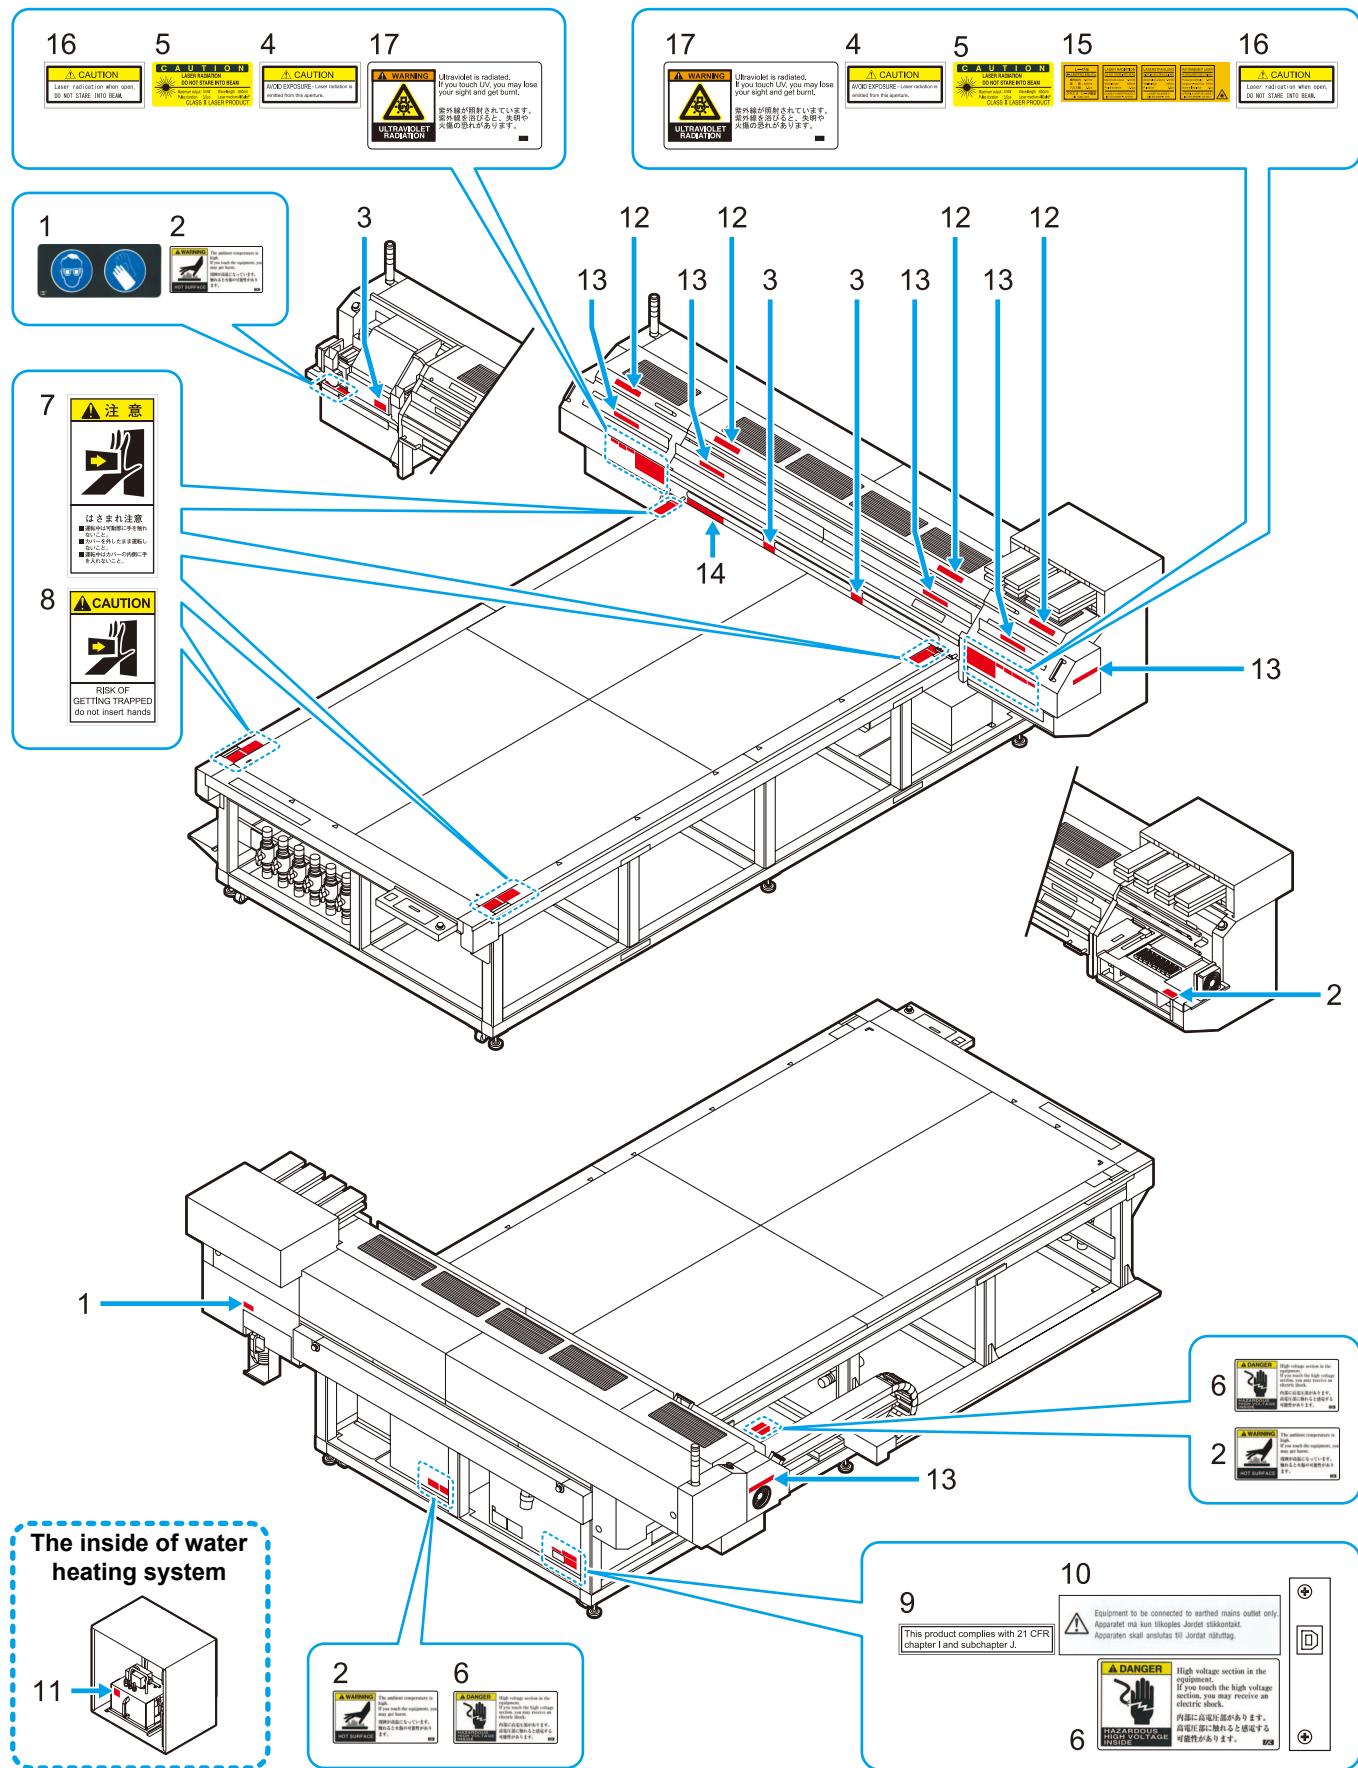



No.	Reorder No.	Level	No.	Reorder No.	Level
1	M903330		2	M903763	 The ambient temperature is high. If you touch the equipment, you may get burnt. 周囲が高温になっています。 触ると火傷の可能性があります。
3	M903747		4	M904131	 CAUTION AVOID EXPOSURE - Laser radiation is emitted from this aperture.
5	M904148		6	M903764	 DANGER HAZARDOUS HIGH VOLTAGE INSIDE High voltage section in the equipment. If you touch the high voltage section, you may receive an electric shock. 内部に高電圧部があります。 高電圧部に触ると電気ショックする可能性があります。
7	LHCM-02		8	PEC-02	 CAUTION RISK OF GETTING TRAPPED do not insert hands
9	M904130	This product complies with 21 CFR chapter I and subchapter J.	10	M902396	 Equipment to be connected to earthed mains outlet only. Apparatus må kun tilkoples Jordet stikkontakt. Apparaten skall ansluts till Jordat nätag.
11	M963239		12	M905491	 CAUTION Do not close the ventilating opening. It causes the machine trouble.
13	M905490		14	M901549	 Attention 顔や手を排気口へ近づけないでください。 高温のため、やけどの原因となります。 Attention Do not bring the face or the hand to the exhaust duct. It can cause a burn for the high temperature. Attention Machte Atemluft nicht mit dem Gesicht oder den Händen in Kontakt. Atemluft kann sehr heiß sein. Finger nicht in diese Nähe bringen. Attention Ne pas mettre le visage ou les mains près de l'ouverture d'évacuation. L'air évacué peut être très chaud. Ne pas mettre de doigts dans cette zone.
15	M905122		16	M905265	
17	M903946		18		


Function Flowchart

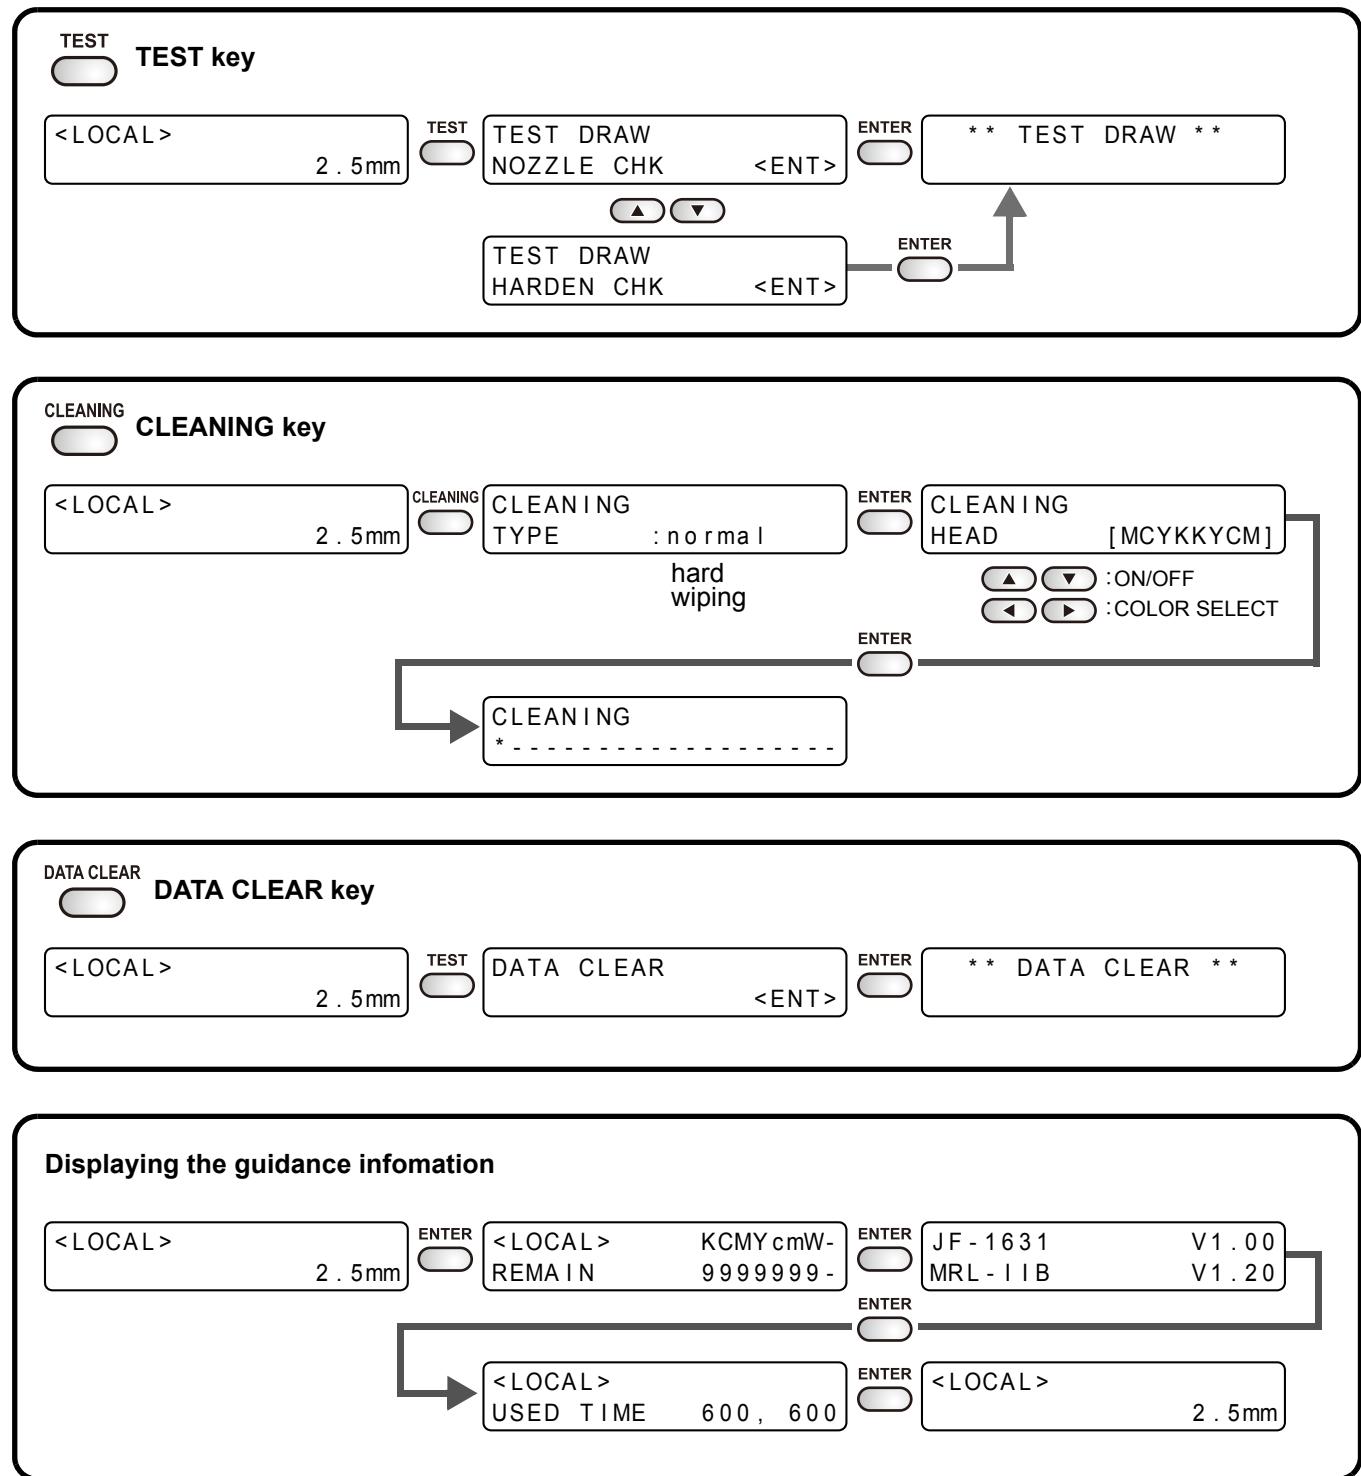


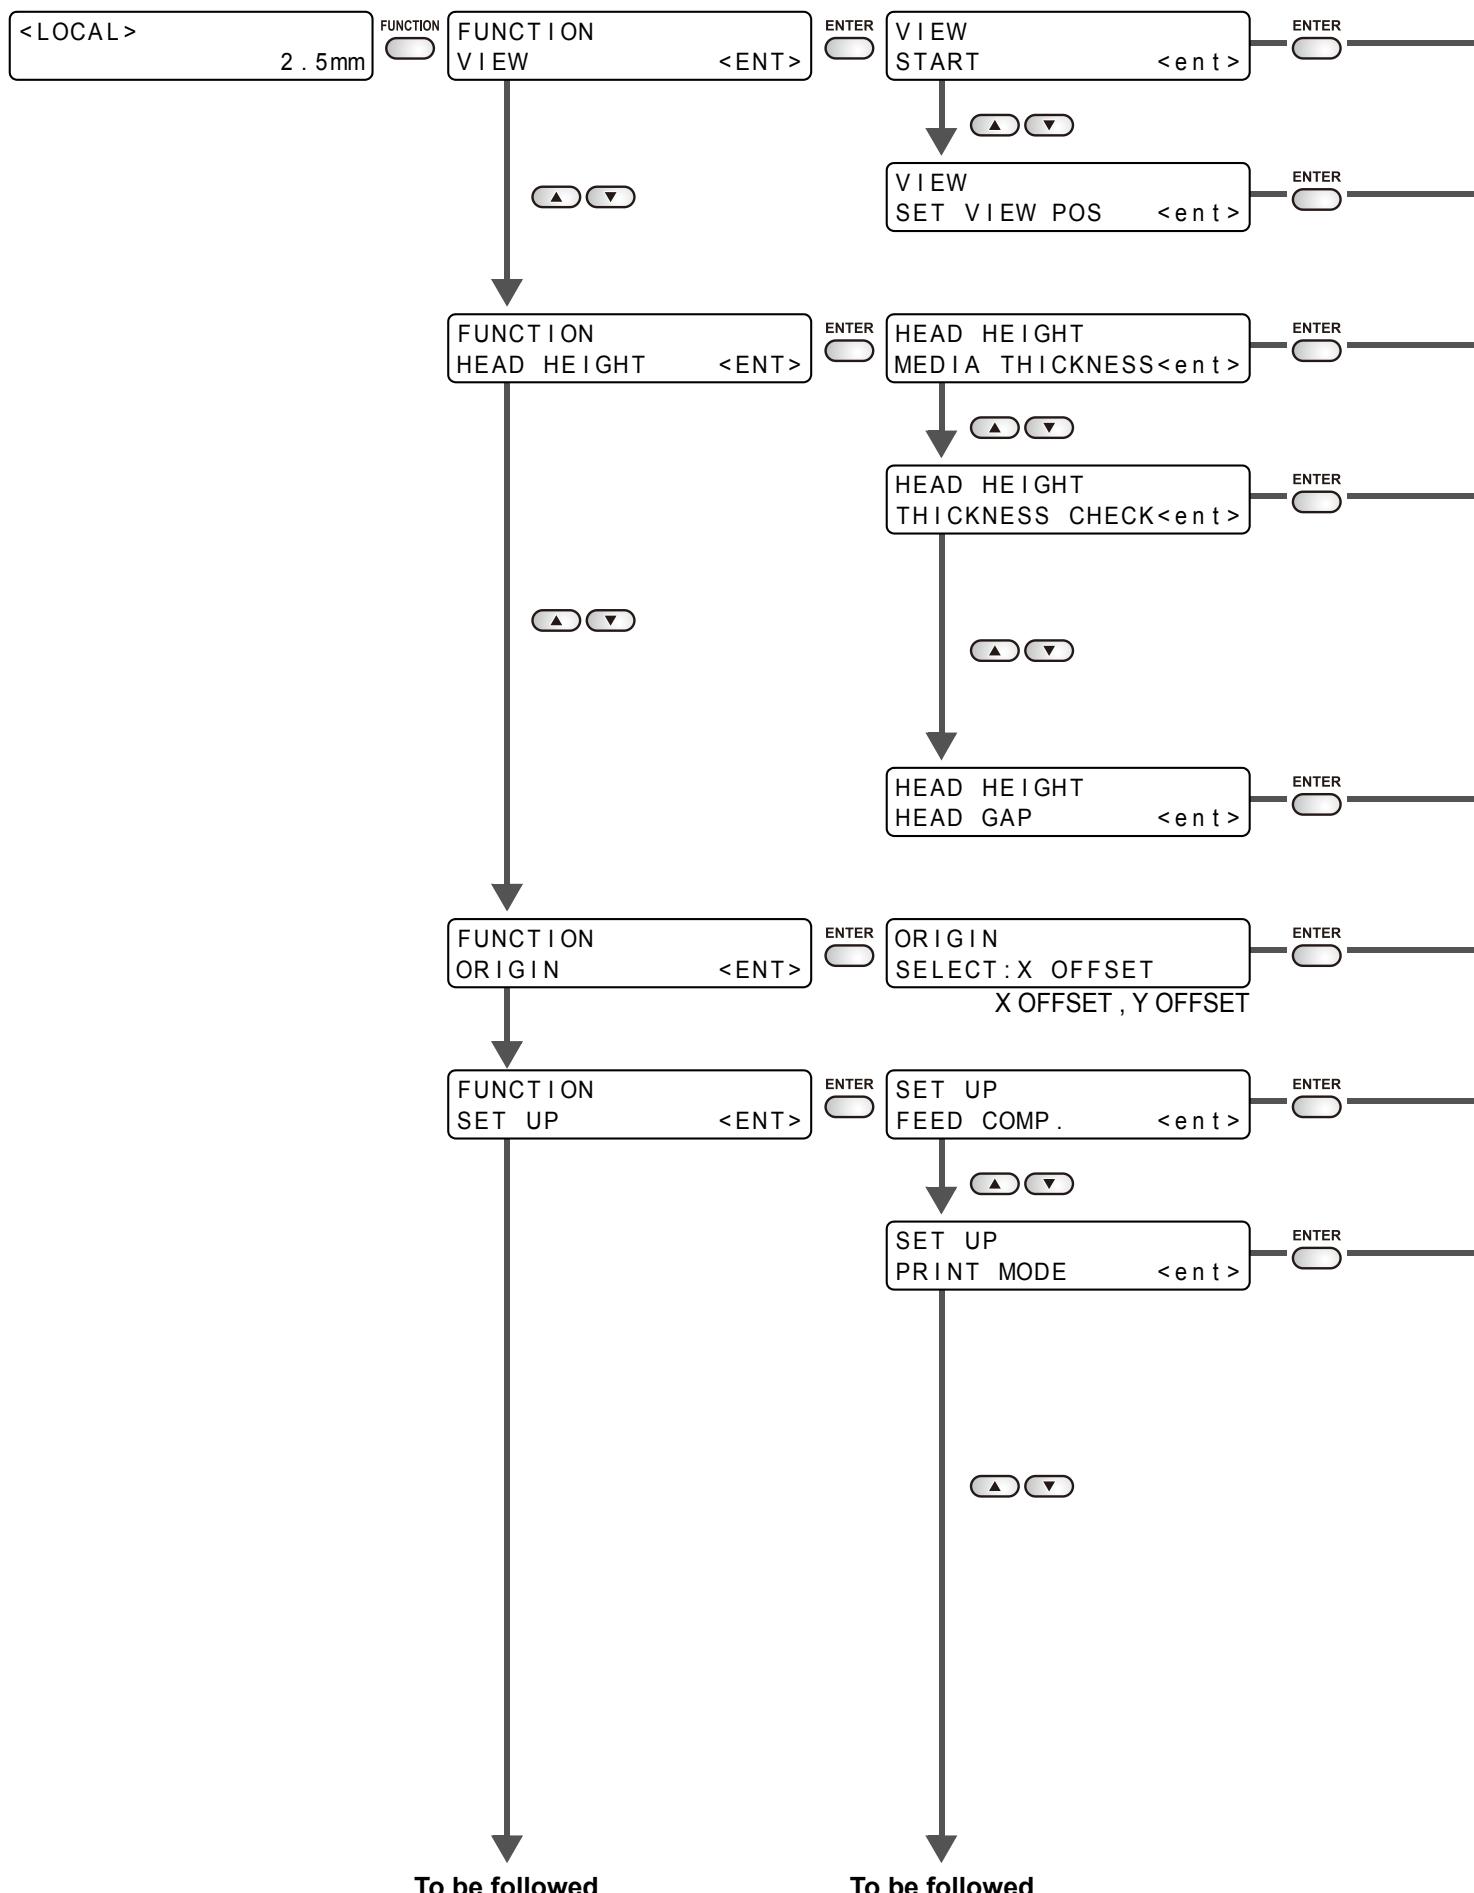


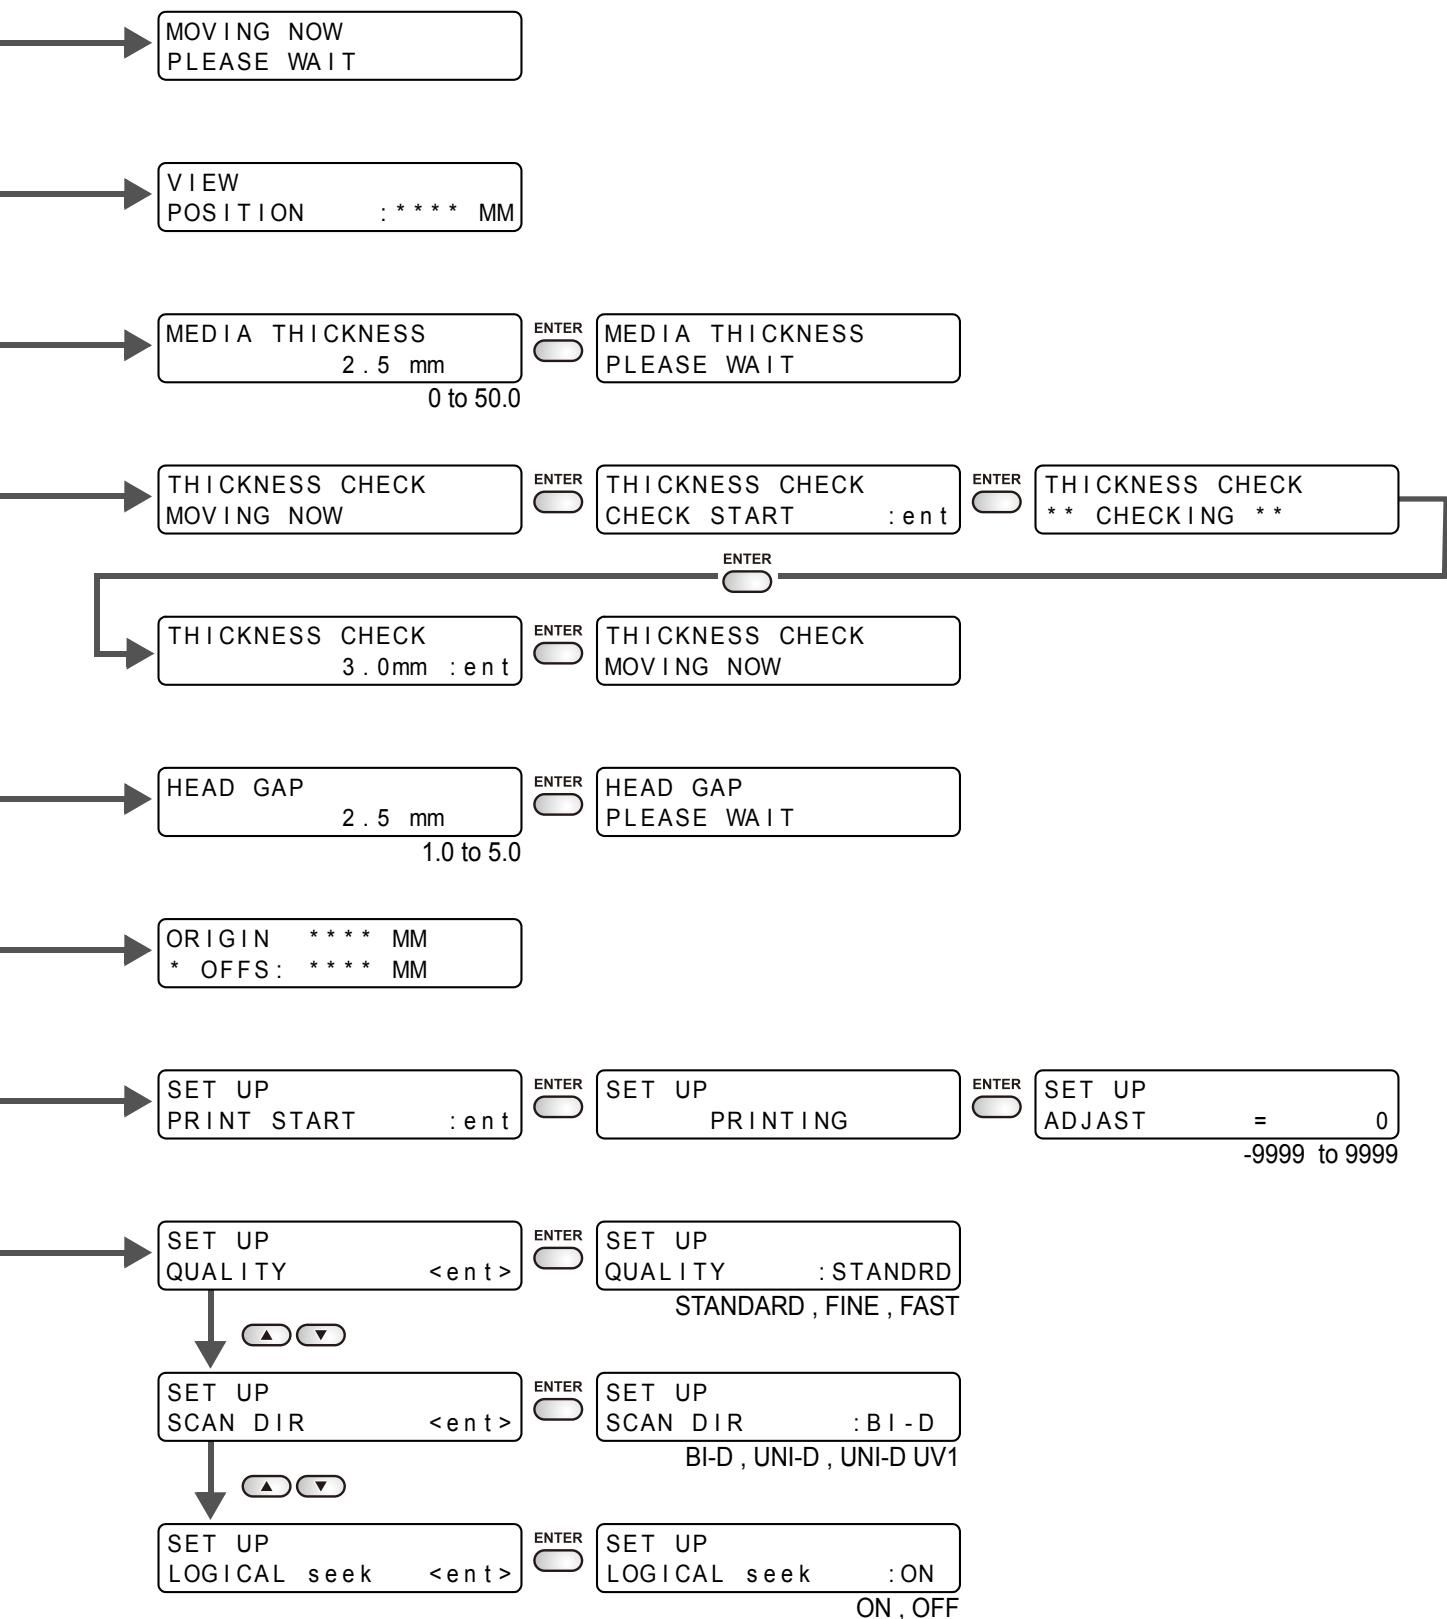

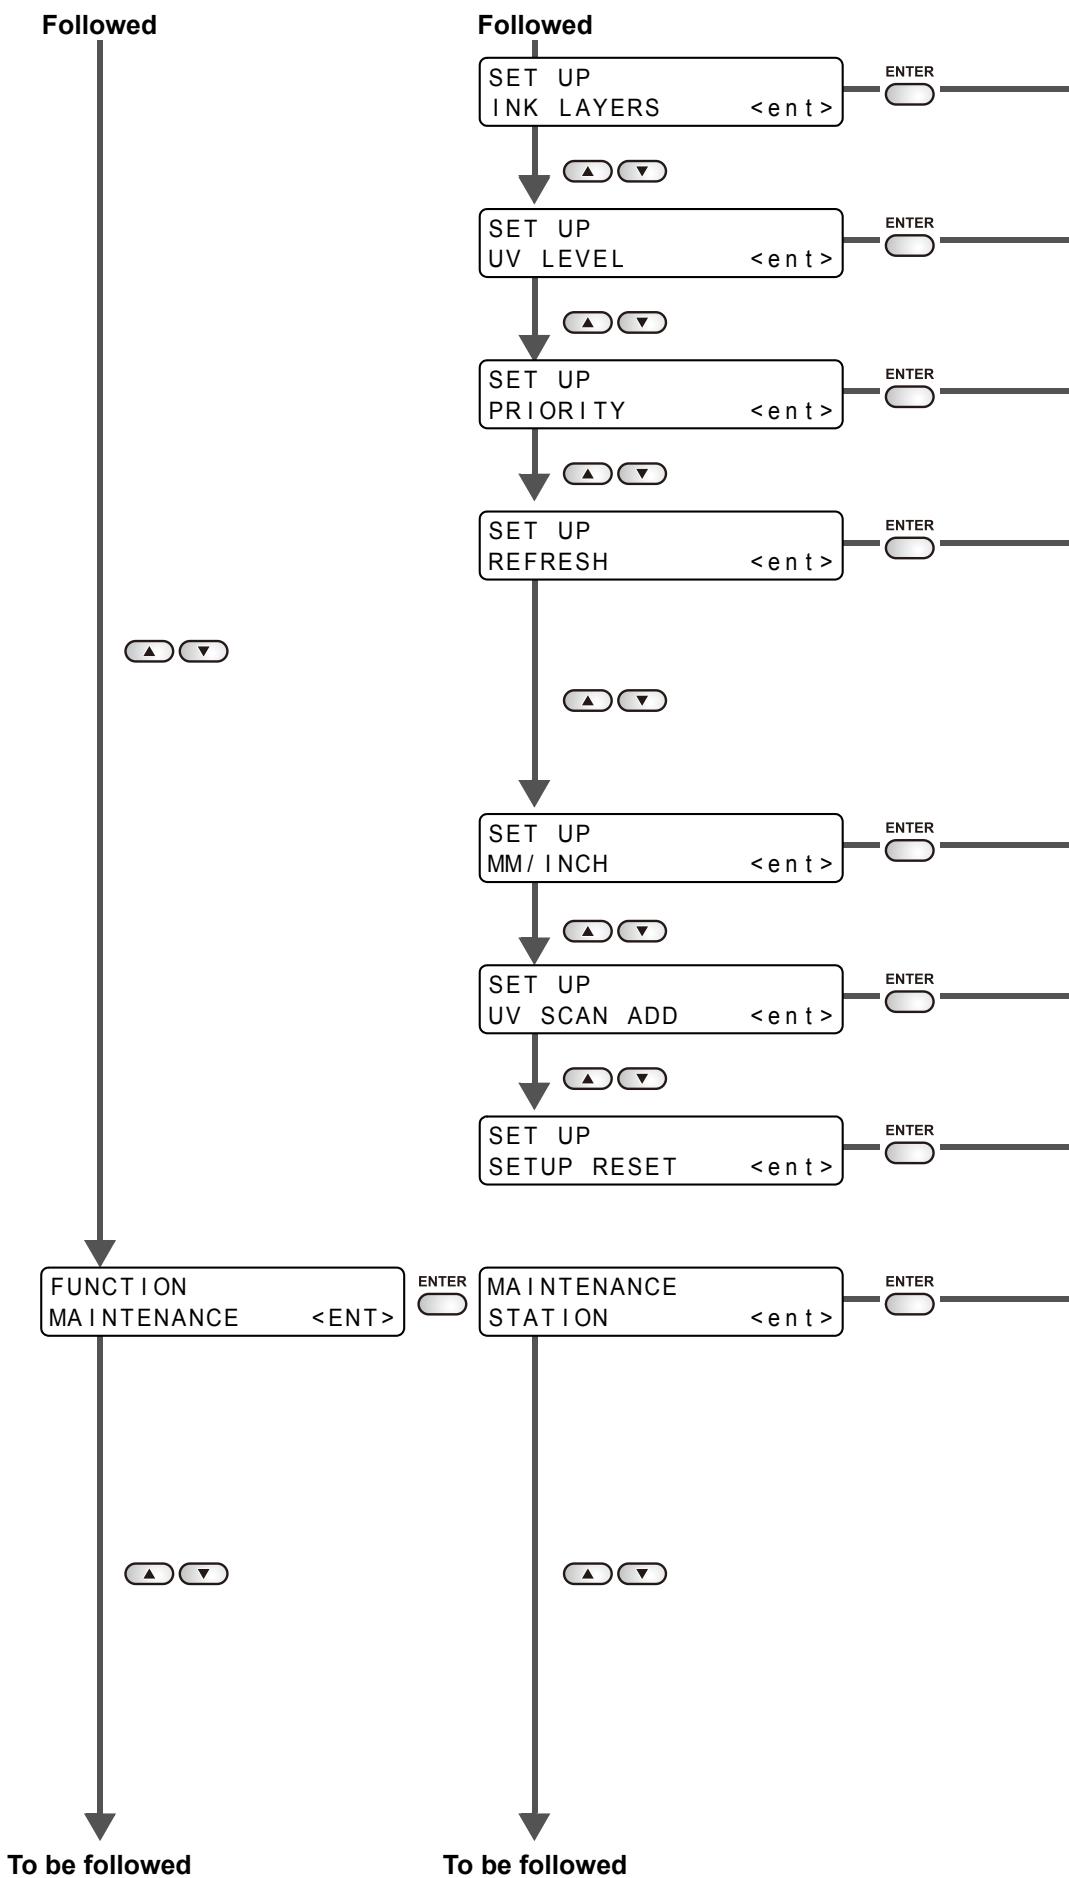

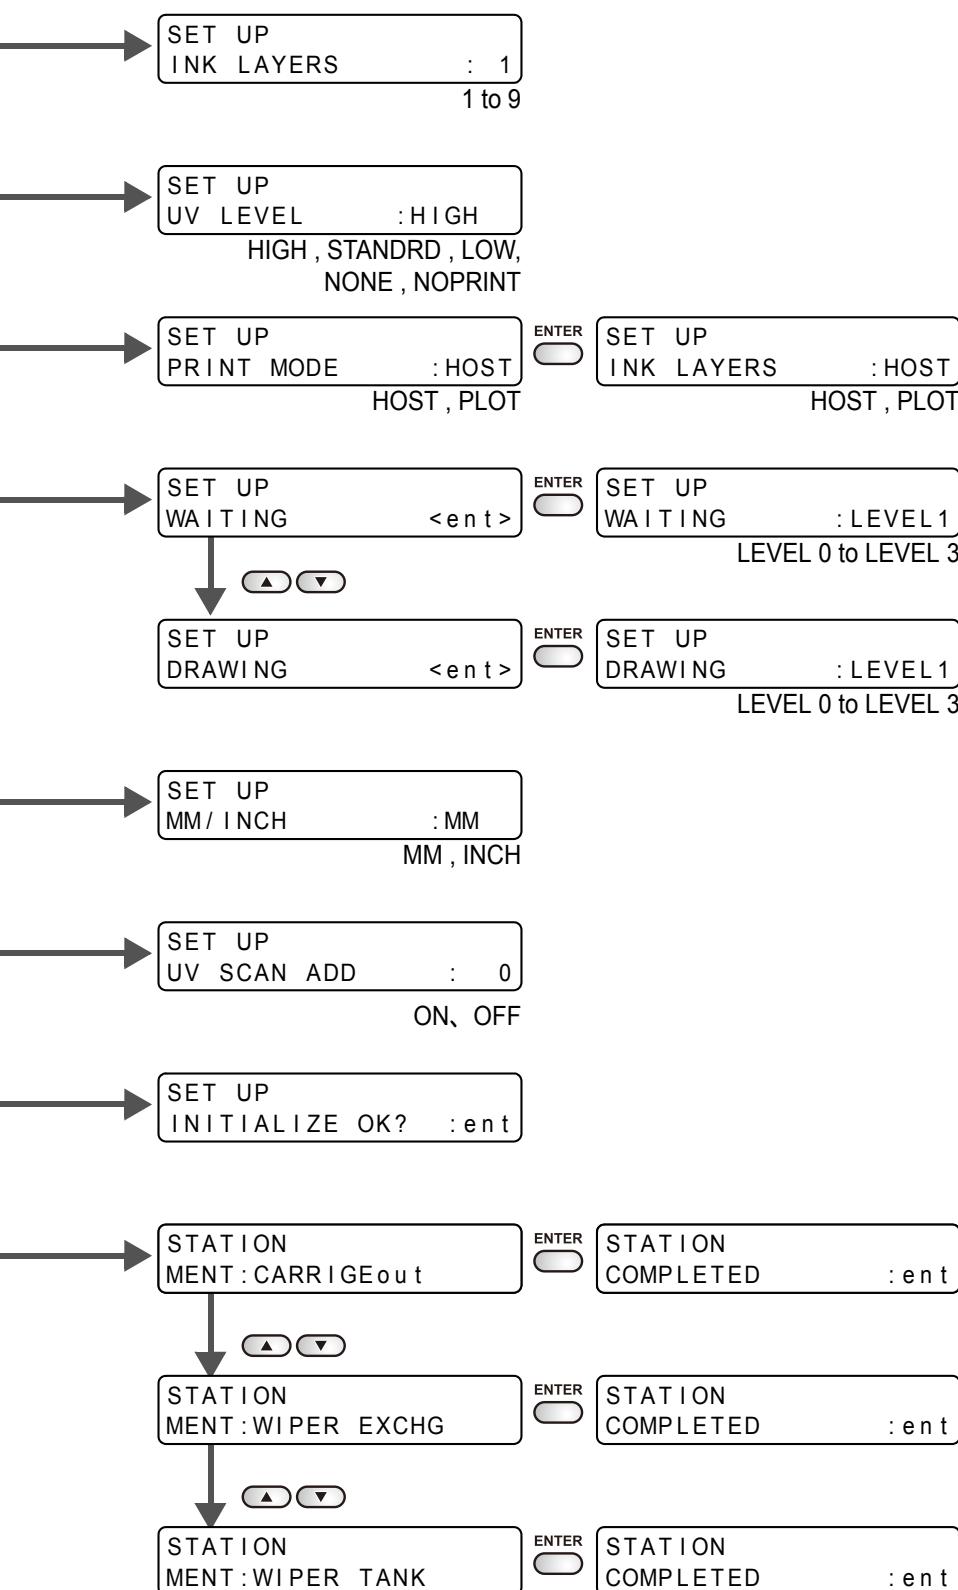

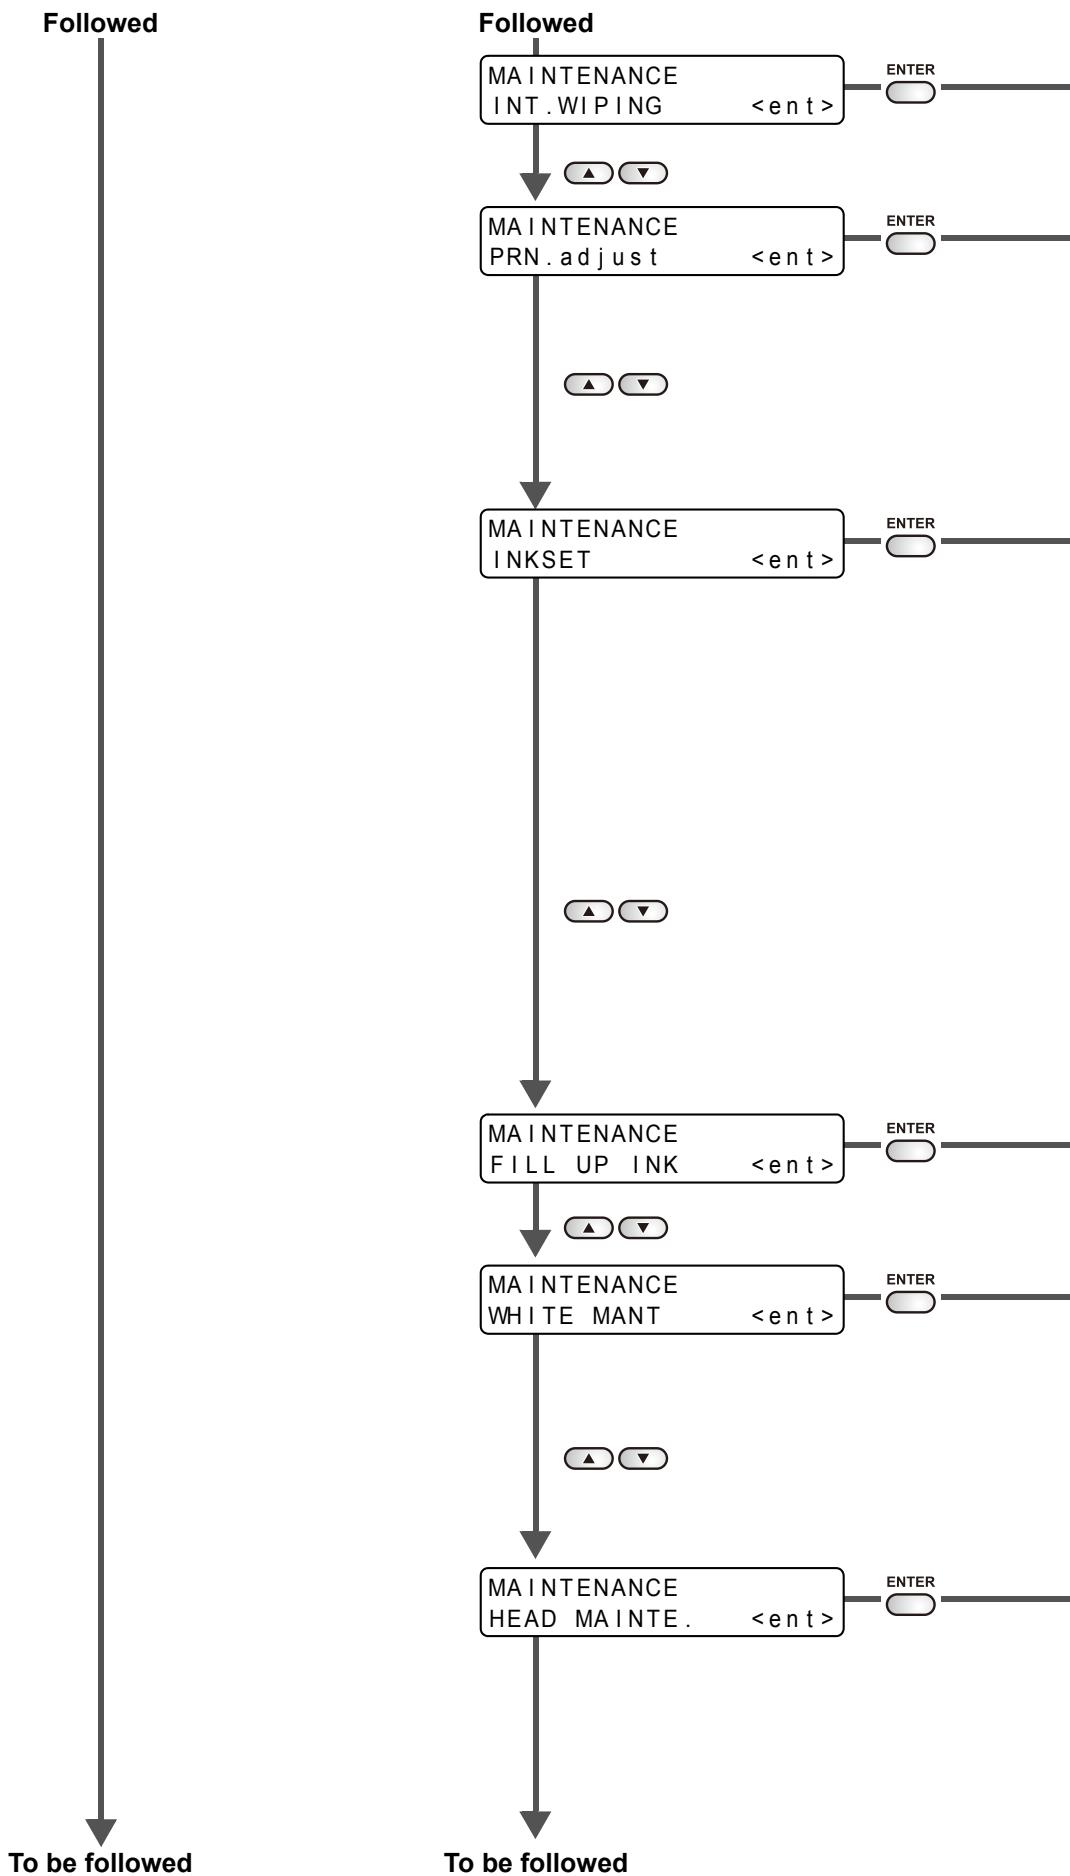

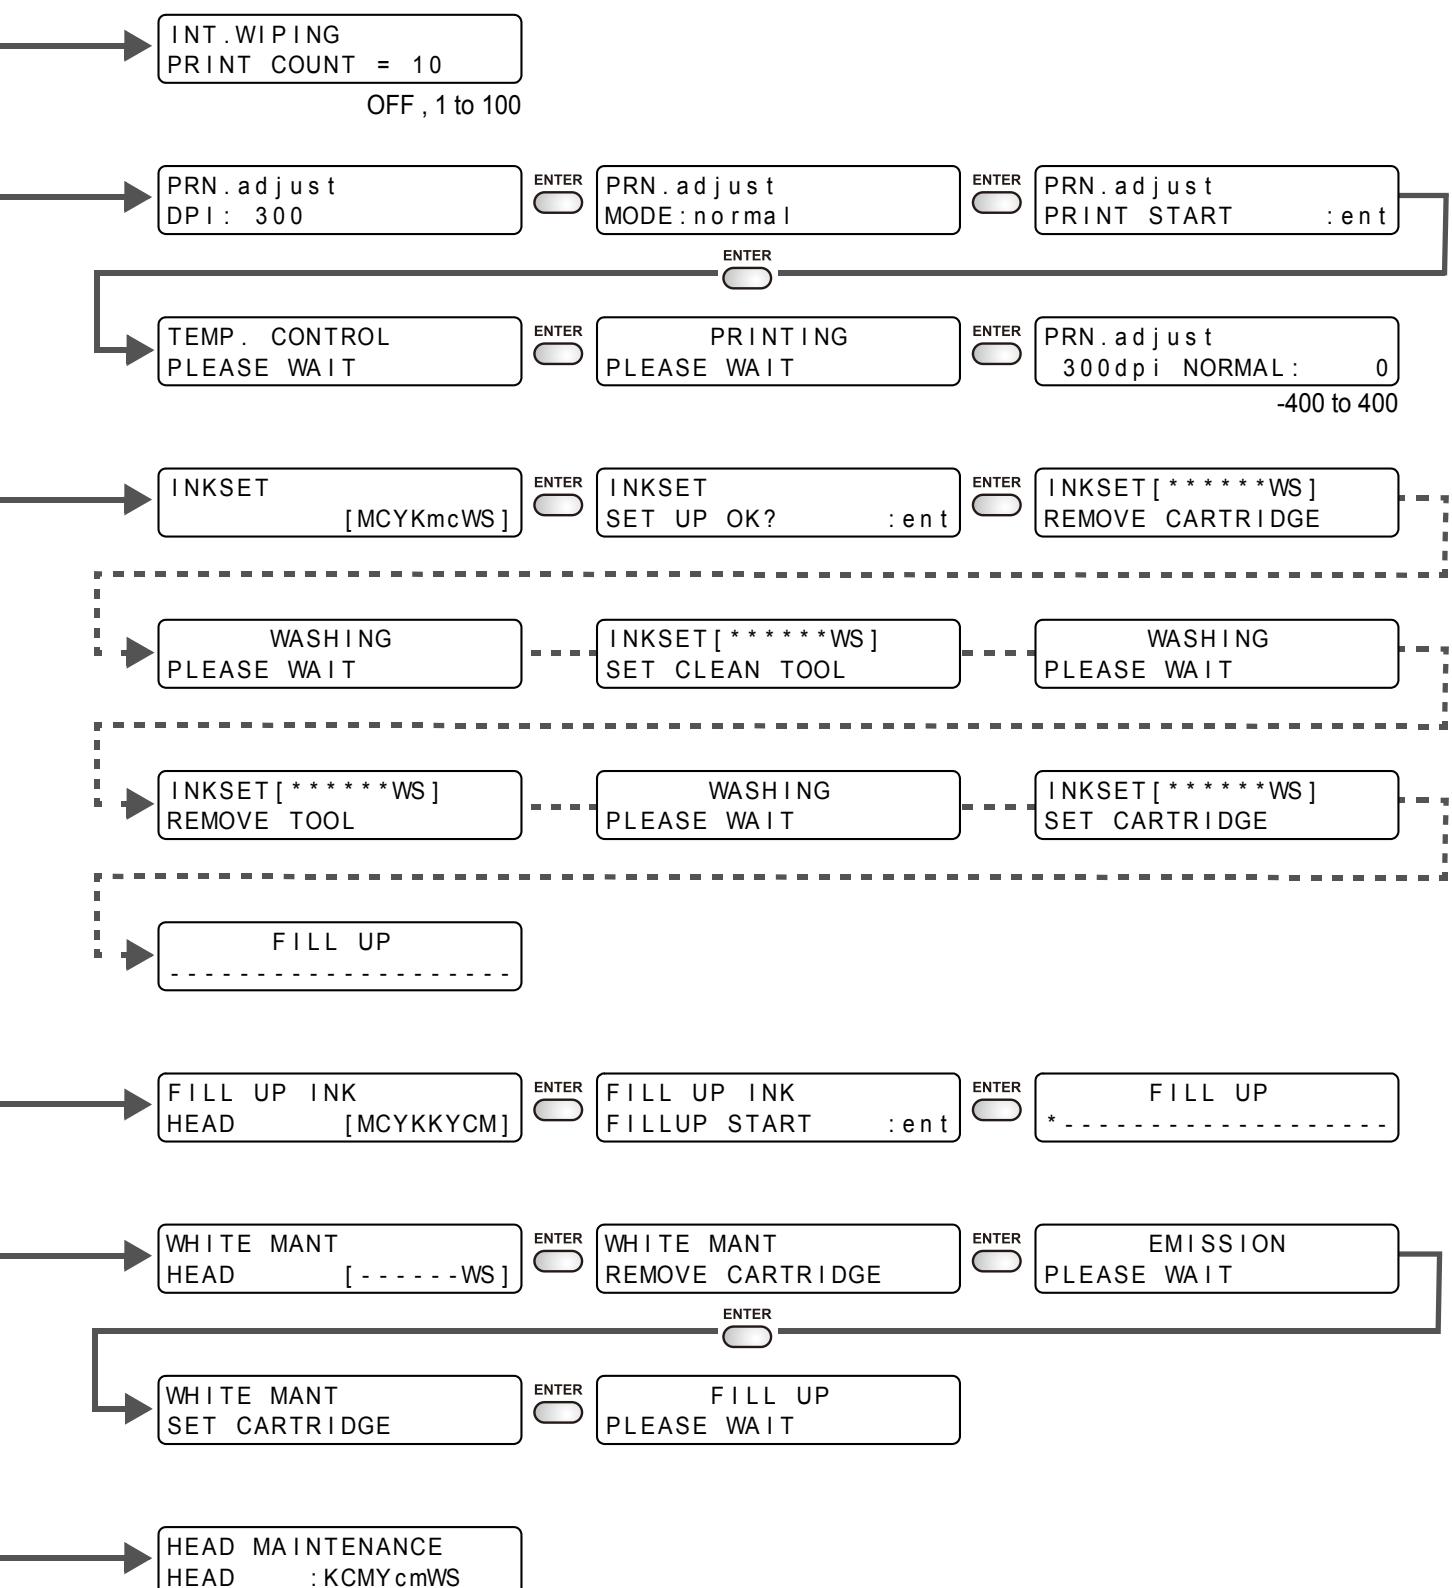

Followed

To be followed

Followed

To be followed

MAINTENANCE
SP. REFRESH <ent>



ENTER

MAINTENANCE
UV LAMP <ent>





ENTER


MAINTENANCE
WATER CHNG <ent>



ENTER

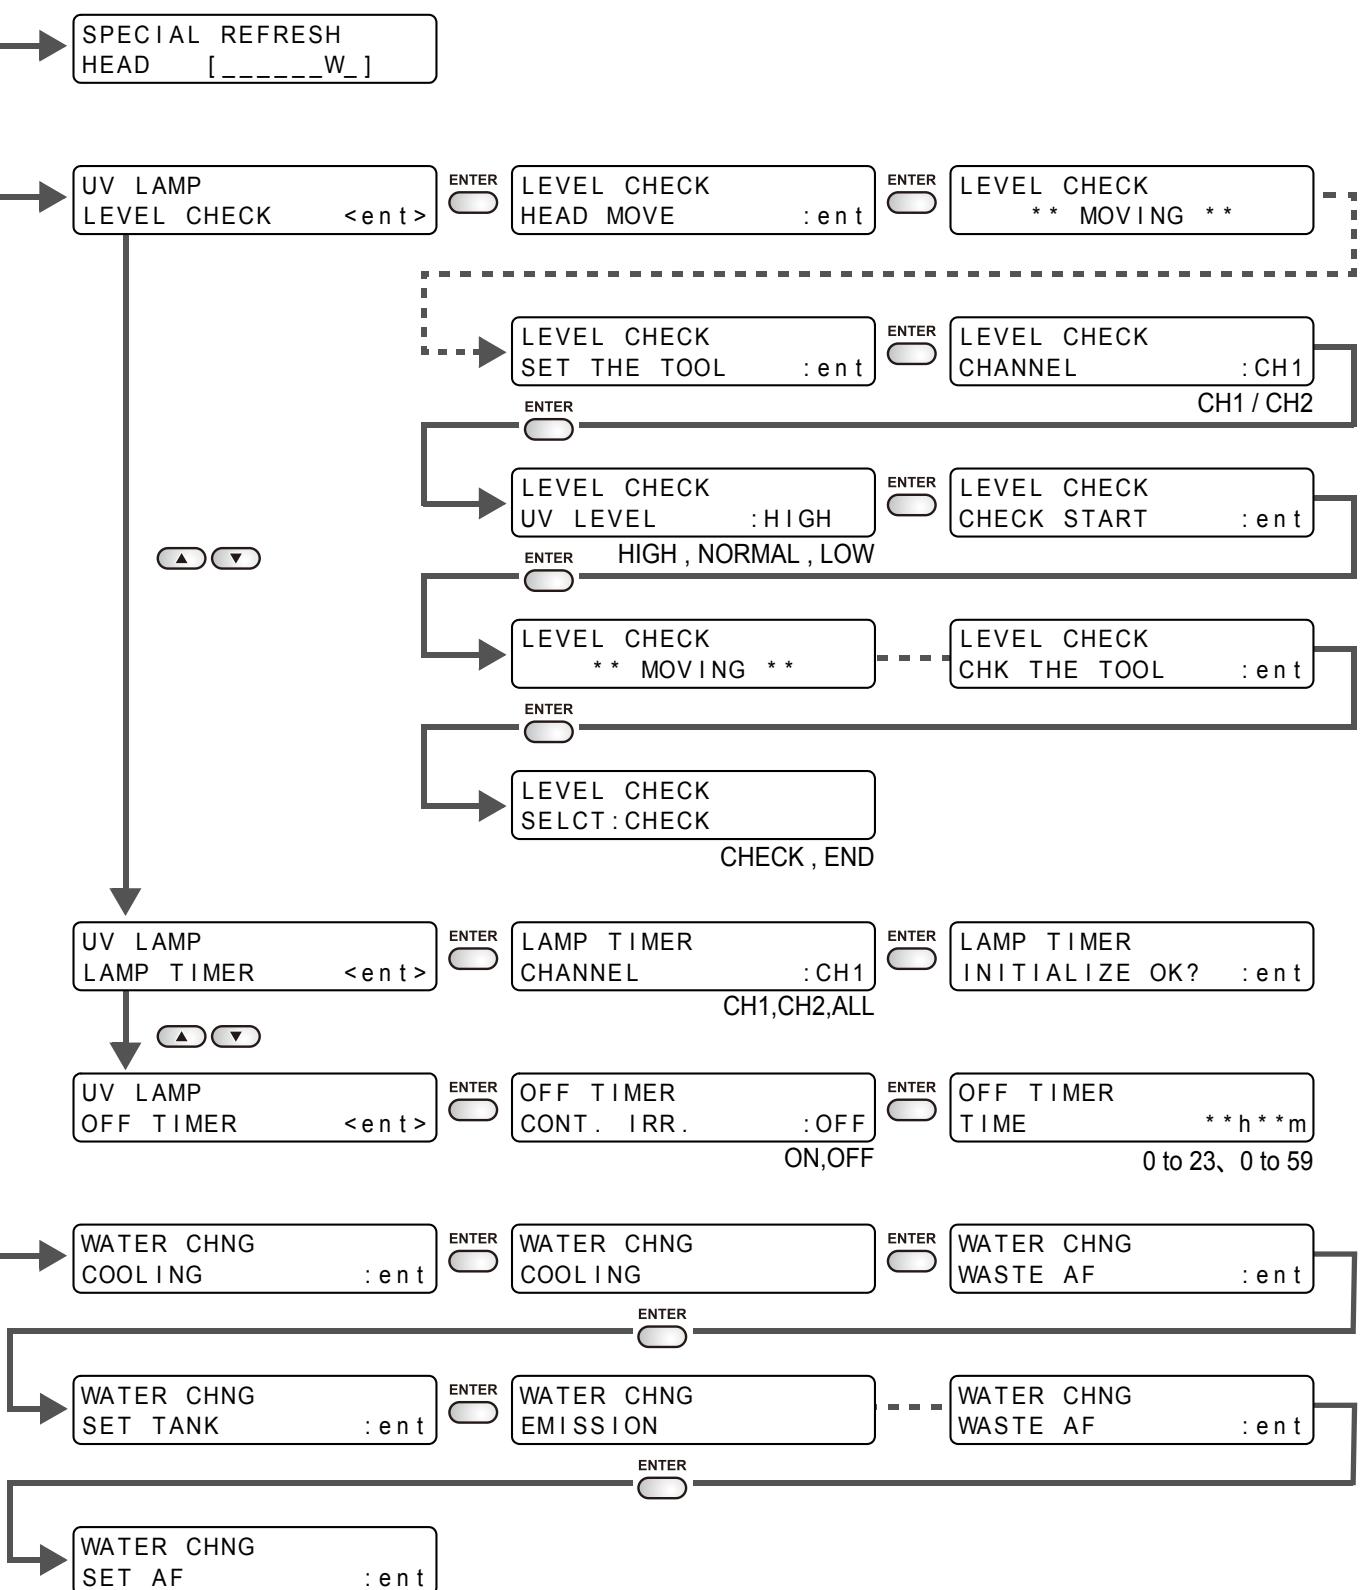

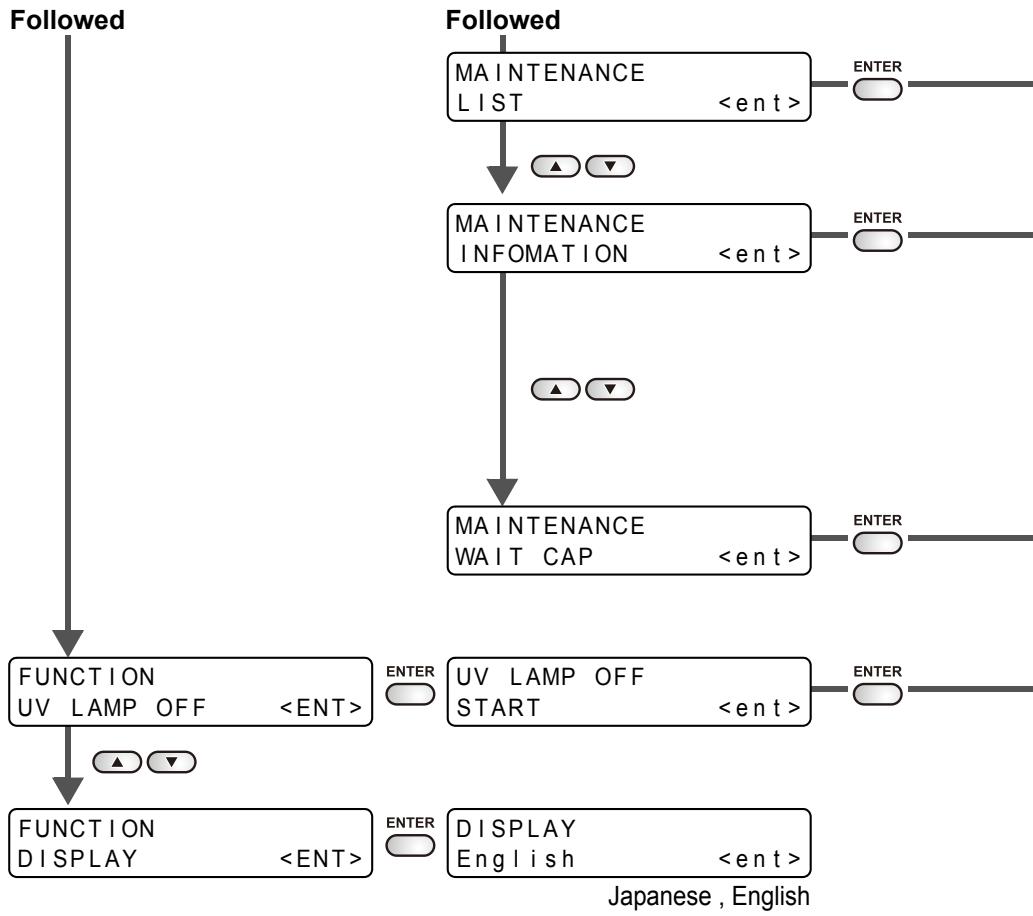

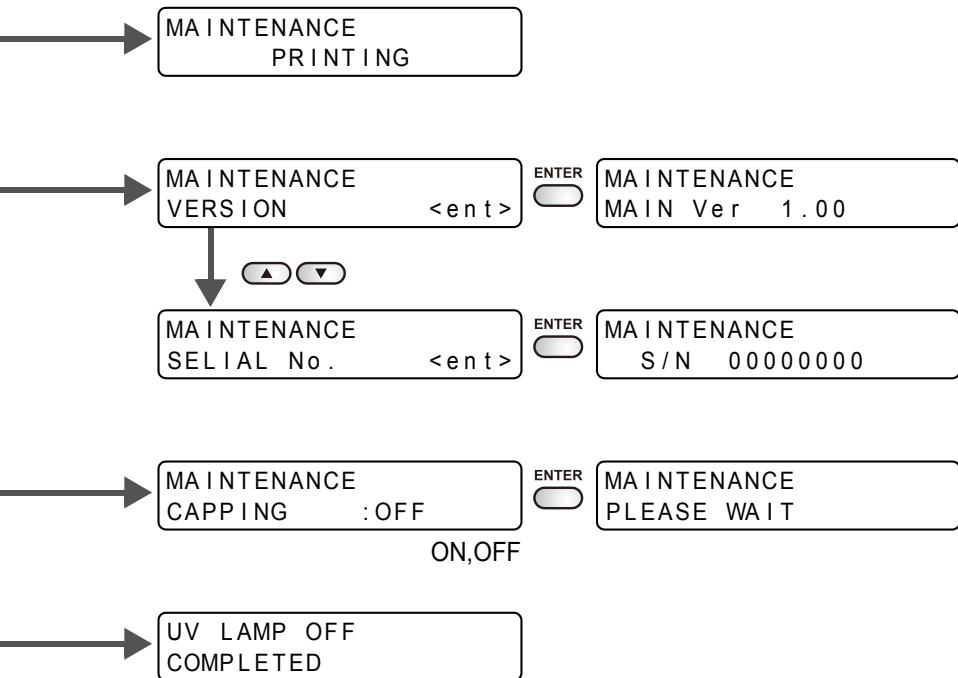

D201645-20-29082008

MIMAKI

Printed in Japan
© MIMAKI ENGINEERING CO., LTD. 2008

NH
FW : 2.80